



KISS 2U Short V3

KISS 2U Short V3 CFL

Doc. User Guide, Rev. 1.0

Doc. ID: 1064-5121

This page has been intentionally left blank

 KISS 2U SHORT V3 - USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2019 by Kontron S&T AG

Kontron S&T AG

Lise-Meitner-Str. 3-5

86156 Augsburg

Germany

www.kontron.com

Intended Use

This product, sold by Kontron, is also intended for the use in harsh industrial environments. The product can operate in a temperature range from 0°C to plus 50°C; the storage elements can withstand temperatures from minus 20°C to plus 70°C, and a humidity of 10 to 93 percent does not affect the function of the Product. This makes it particularly suitable for use in industrial automation, process control, high-end image processing and for SCADA/MES applications. This product can be installed in tower, desktop and rackmount environments, as more described in this user manual. You must comply with all product specifications stated in the product documentation and this user manual. If you intend, to incorporate the product into any total systems or applications, please carry out sufficient, compatibility and functions tests prior to any use or resale.

THIS PRODUCT IS NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY "HIGH RISK APPLICATIONS").

You understand and agree that your use of Kontron products as a component in High Risk Applications is entirely at your own risk. To minimize the risks associated with your systems and applications, you must provide adequate design and operating safeguards. You are responsible to ensure that your systems (and any Kontron hardware or software products incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron product is not provided with error-tolerance capabilities and therefore cannot be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as a component in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

Revision History

Revision	Brief Description of Changes	Date of Issue	Author/ Editor
1.0	Initial version	2019-Feb-13	CW

Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit <http://www.kontron.com/terms-and-conditions>.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit <http://www.kontron.com/terms-and-conditions>.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website [CONTACT US](#).

Customer Support

Find Kontron contacts by visiting: <http://www.kontron.com/support>.

Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit <http://www.kontron.com/support-and-services/services>.

Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact [Kontron support](#). Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

Symbols

The following symbols may be used in this user guide

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE indicates a property damage message.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



ESD Sensitive Device!

This symbol and title inform that the electronic products and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



Laser!

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

⚠ CAUTION

Warning

All operations on this product must be carried out by sufficiently skilled personnel only.

⚠ CAUTION



Electric Shock!

Before installing a non-hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

Special Handling and Unpacking Instruction

NOTICE



ESD Sensitive Device!

Electronic products and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

⚠ WARNING

Danger of explosion if the battery is replaced incorrectly.

- ▶ Replace only with same or equivalent battery type recommended by the manufacturer.
- ▶ Dispose of used batteries according to the manufacturer's instructions.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

Install the product only in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific product version that must not be exceeded.

In performing all necessary installation and application operations, only follow the instructions supplied within this user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack the product in the same manner as the product was delivered.

Special care is necessary when handling or unpacking the product. Refer to any special handling and unpacking instruction within this user guide.

Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit <http://www.kontron.com/about-kontron/corporate-responsibility/quality-management>.

Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- ▶ Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- ▶ Improve the environmental performance of all those involved during the lifecycle of EEE



Environmental protection is a high priority with Kontron.
Kontron follows the WEEE directive.

Table of Contents

Symbols	6
For Your Safety	7
High Voltage Safety Instructions	7
Special Handling and Unpacking Instruction	7
Lithium Battery Precautions.....	8
General Instructions on Usage	8
Quality and Environmental Management	8
Disposal and Recycling.....	8
WEEE Compliance.....	8
Table of Contents	9
List of Tables	11
List of Figures	11
1/ General Safety Instructions for IT Equipment	12
1.1. Operation of Laser Source Devices	13
1.2. Electrostatic Discharge (ESD)	14
1.2.1. Grounding Methods	14
1.3. Instructions for the Lithium Battery	14
2/ Introduction	15
3/ Scope of Delivery	16
3.1. Accessories and Spare Parts.....	16
3.2. Shipment, Packaging and Unpacking.....	16
3.3. Type Label.....	16
4/ Product Description	17
4.1. Front Side.....	18
4.1.1. USB Ports	20
4.1.2. Controls and Indicators	20
4.1.3. Front Access Panel.....	21
4.1.4. Fan Assembly	22
4.1.5. Filter Pad and Filter Pad Holder	22
4.1.6. Drive Bays	23
4.2. Rear Side	24
4.2.1. Interfaces on the Rear Side	26
4.2.2. Additional Serial Ports.....	26
4.2.3. Power Supply Unit	27
4.2.4. Potential Equalization Stud.....	27
4.3. Sides (Left and Right).....	28
4.4. Cover	29
4.5. System Configuration	30
4.5.1. System Configuration – Mainboard with Low Profile Expansion Cards	30
4.5.2. System Configuration -Mainboard with Riser Expansion Cards.....	31
5/ System Extension	32
5.1. Mass Storage Options.....	32
5.2. Expansion Cards	32
6/ Thermal Considerations	33
6.1. Active Cooling.....	33
6.2. Minimum System Clearance	33

6.3. Third Party Components	33
7/ Assembly	34
7.1. Opening and Closing the Cover	34
7.2. Accessing Internal Components	36
7.2.1. Installing and Removing Riser Card Expansion Cards	36
7.2.2. Installing and Removing Low Profile Expansion Cards	37
8/ Installation	38
8.1. Installing the Rubber Feet	38
8.2. Removing the Handle Brackets and Front Access Panel Side-Plates	39
8.3. Removing the Front Access Panel and Front Access Panel Side-Plates	39
8.4. Installing as a Desktop	40
8.5. Installing in a 19" Industrial Rack	40
8.6. Installing Slide Rails (Option)	41
9/ Starting Up	44
9.1. Connecting the Power Connection	44
9.2. Operating System and Hardware Component Drivers	45
10/ Maintenance and Prevention	46
10.1. Cleaning the Filter Pad	46
10.2. Replacing the Fan Assembly	48
10.3. Replacing the Lithium Battery	49
11/ Technical Data	50
11.1. Block Diagram	50
11.2. Technical Specification	51
11.3. Mechanical Specification	52
11.4. Environmental Specification	52
11.5. Directives and Standards	53
12/ Standard Interfaces- Pin Assignments	54
12.1. Keyboard Connector Pin Assignment	54
12.2. PS/2 Mouse Connector Pin Assignment	54
12.3. USB 2.0 Pin Assignment	54
12.4. Display Port Pin Assignment	55
12.5. COM 1 Pin Assignment	55
12.6. DVI_D connector Pin Assignment	55
12.7. LAN Connector Pin Assignment	56
12.8. USB 3.0 and USB 3.1 (Gen1/Gen2) Type A Pin Assignment	56
12.9. Audio Jack Pin Assignment	56
13/ Technical Support	57
13.1. Returning Defective Merchandise	57
14/ Storage and Transportation	59
14.1. Storage	59
14.2. Transportation	59
15/ Warranty	60
15.1. Limitation/Exemption from Warranty Obligation	60
Appendix A: List of Acronyms	61
About Kontron	62

List of Tables

Table 1: Scope of delivery	16
Table 2: Accessories and spares parts.....	16
Table 3: Power LED and HDD LED activity description.....	21
Table 4: Drive bays.....	23
Table 5: Mass storage devices.....	32
Table 6: Expansion slots	32
Table 7: List of Acronyms.....	61

List of Figures

Figure 1: Laser radiation warning label	13
Figure 2: Type label.....	16
Figure 3: Rackmount variant (closed front access panel).....	17
Figure 4: Desktop variant (closed front access panel).....	17
Figure 5: Rackmount variant (opened front access panel)	17
Figure 6: Desktop variant (opened front access panel)	17
Figure 7: Front side with front access panel closed	18
Figure 8: Handle bracket with fastening screws	18
Figure 9: Front side with front access panel open.....	19
Figure 10: Power button and USB 2.0 ports	20
Figure 11: LED indicators.....	21
Figure 12: Fan assembly.....	22
Figure 13: Rear side with micro-ATX mainboard with riser card.....	24
Figure 14: Rear side with micro-ATX mainboard with low profile cards.....	25
Figure 15: External mainboard interface panel KISS 2U Short V3 CFL	26
Figure 16: PSU 400W AC	27
Figure 17: Left side.....	28
Figure 18: Right side.....	28
Figure 19: Underside of cover with fixing brackets	29
Figure 20: Configuration with micro-ATX mainboard and low profile expansion cards.....	30
Figure 21: Configuration with micro-ATX mainboard and riser expansion cards.....	31
Figure 22: Loosening knurled screw on the front side	34
Figure 23: Loosening knurled screws on the rear side.....	34
Figure 24: Pull and release the cover	35
Figure 25: Removing the cover.....	35
Figure 26: Pulled-out card cage screws	36
Figure 27: Front access panel side-plate with handle bracket.....	39
Figure 28: Slide rail inner part fastened to chassis	42
Figure 29: Slide rail in pulled-out position.....	42
Figure 30: Slide rail in pushed-in position.....	42
Figure 31: Assembling the slide rails in an industrial rack cabinet	43
Figure 32: Input power socket.....	44
Figure 33: Front side with filter pad holder	46
Figure 34: Front side without filter pad.....	47
Figure 35: Filter pad holder (without filter pad)	47
Figure 36: Filter pad holder (with filter pad).....	47
Figure 37: Filter pad	47
Figure 38: Removing the fan assembly.....	48
Figure 39: Fan compartment without fan assembly	49
Figure 40: Block diagram KISS 2U Short V3 CFL	50

1/ General Safety Instructions for IT Equipment

⚠ WARNING

Read and observe the instructions within this chapter that have been compiled for user's safety and to ensure accordance with regulations. If the following General Safety Instructions for IT Equipment are not observed, it could lead to injuries to the operator and/or damage to the product. Kontron is exempt from accident liability, also during the warranty period if the instruction within this user guide are not observed.

The product has been built and tested according to the basic safety requirements for low voltage (LVD) applications and has left the manufacturer in a safety-related, flawless condition. To maintain this condition and to ensure safe operation, the operator must observe the correct operating conditions for the product and following general safety instructions:

- ▶ The product must be used as specified in the instructions for safety for the product and for the operator, as described within this user guide. The user guide contains guidelines for setting up, assembly, installation, maintenance, transport and storage.
- ▶ The on-site electrical installation must meet the requirements of the country's specific local regulations.
- ▶ If supplied with a power cable, only use the supplied power cable.
- ▶ Do not use an extension cable to connect the product.
- ▶ To guarantee that sufficient air flow is available to cool the product, ensure that
 - ▶ Ventilation openings are not covered or blocked.
 - ▶ Clean the filter pad regularly (as often as necessary, depending on the environment).
 - ▶ Do not place the product close to heat sources or damp places.
 - ▶ The product is well ventilated
- ▶ Only connect devices or parts that fulfill the requirements of SELV circuits (Safety Extra Low Voltage) as stipulated by IEC 60950-1 to the available interfaces.
- ▶ Before opening the product, make sure that the product is disconnected from the mains.
- ▶ Switching off the product by the power button does not disconnect the product from the mains. Complete disconnection is only possible if the power cable is removed from the wall plug or from the product. Ensure that there is free and easy access to enable disconnection.
- ▶ The product may only be opened for the insertion or removal of add-on cards (depending on the configuration of the system). This may only be carried out by qualified operators.
- ▶ If extensions are being carried out, the following must be observed:
 - ▶ All effective legal regulations and technical data are adhered to
 - ▶ Power consumption of any add-on card does not exceed the specified limitations
 - ▶ Current consumption of the system does not exceed the value stated on the product label
- ▶ Only use original accessories and spare parts approved by Kontron.
- ▶ Note: safe operation is no longer possible when any of the following applies:
 - ▶ Product has visible damage
 - ▶ Product is no longer functioning


In this cases, the product must be switched off and disconnected from the mains. Additionally, ensured that the product can no longer be operated.

Additional safety instructions for DC power supply circuits

- ▶ To guarantee safe operation of products with DC power supply voltages larger than 60 volts DC or a power consumption larger than 120 VA, observe that:
 - ▶ Product is set up, installed and operated in a room or enclosure marked with "RESTRICTED ACCESS", if there are no safety messages such as safety signs and labels on the product itself.
 - ▶ Do not touch either directly or indirectly cables or parts without insulation in electrical circuits with dangerous voltage or power.
 - ▶ Reliable protective earth connection is provided
 - ▶ Suitable, easily accessible disconnecting device is used in the application (e.g. overcurrent protective device), if the product cannot be disconnected.
 - ▶ A disconnect device, if provided in or as part of the equipment, must disconnect both poles simultaneously
 - ▶ interconnecting power circuits of different devices cause no electrical hazards
- ▶ A sufficient dimensioning of the power cable wires must be selected – according to the maximum electrical specifications on the product label – as stipulated by EN60950-1 or VDE0100 or EN60204 or UL508 or EN62368-1 regulations.
- ▶ The devices do not generally fulfill the requirements for "centralized DC power systems" (UL 60950-1, Annex NAB; D2) and therefore may not be connected to such devices!

1.1. Operation of Laser Source Devices

Figure 1: Laser radiation warning label

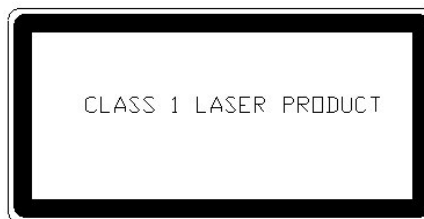

The optional DVD drive contains light-emitting diodes (LEDs) (classified in accordance with IEC 60825-1:2007: LASER CLASS 1) and therefore must not be opened. If the enclosure of such a drive is opened, invisible laser radiation is emitted. Do not allow yourself to be exposed to this radiation.

The laser system meets the Code of Federal Regulations (CFR), Title 21, 1040 -Performance standards for light-emitting products.



Laser!

Risk of exposure to laser beam and light emitting devices (LEDs) from DVD

- ▶ Do not open DVD drive due to invisible laser radiation.
 - ▶ Check manufacture instructions eye protection maybe required.
-

1.2. Electrostatic Discharge (ESD)



A sudden discharge of electrostatic electricity can destroy static-sensitive devices.

Proper packaging and grounding techniques are necessary precautions to prevent damage. Always take the following precautions:

1. Transport ESD-sensitive products in ESD-safe containers such as boxes or bags.
2. Keep electrostatic sensitive parts in their containers until they arrive at the ESD-safe workplace.
3. Always be properly grounded when touching sensitive products, components, or assembly.
4. Store electrostatic-sensitive products in protective packaging or on antistatic mats.

1.2.1. Grounding Methods

To avoid electrostatic damage, observe the following grounding guidelines:

1. Cover workstations with approved antistatic material. Always wear a wrist strap connected to the workplace. Always use properly grounded tools and equipment.
2. Use antistatic mats, heel straps, or air ionizers for more protection.
3. Always handle electrostatically sensitive components by their edge or by their casing.
4. Avoid contact with pins, leads, or circuitry.
5. Switch off power and input signals before inserting and removing connectors or connecting test equipment.
6. Keep work area free of non-conductive materials such as ordinary plastic assembly aids and Styrofoam.
7. Use only field service tools that are conductive, such as cutters, screwdrivers, and vacuum cleaners.
8. Always place drives and any boards PCB-assembly-side down on the foam.

1.3. Instructions for the Lithium Battery

When replacing the mainboard's lithium battery observe the instructions described in Chapter 10.3: Replacing the Lithium Battery.

⚠ WARNING

Danger of explosion when replaced with wrong type of battery

Replace only with the same or equivalent type recommended by the manufacturer.
The lithium battery type must be UL recognized.



Do not dispose of lithium batteries in general trash collection. Dispose of the battery according to the local regulations dealing with the disposal of these special materials, (e.g. to the collecting points for dispose of batteries).

2/ Introduction

This user guide focuses on describing the special features of the KISS 2U Short V3 made by Kontron. New users are recommended to study the instructions within this user guide before switching on the power.

The KISS 2U Short V3 is a scalable 2U rackmount system equipped with a micro-ATX mainboard, using Intel's® 7th/8th generation processors and supporting multiple expansion capabilities and external interfaces. Additionally, the short form factor offers an optimal trade-off between space and performance.

The KISS 2U Short V3 is designed for high performance, reliability and use in in harsh Industrial environments offering total flexibility with installation options in a 19" industrial rack or on a desktop.

General KISS 2U Short V3 CFL features are:

- ▶ micro-ATX mainboard
- ▶ Supporting Intel® Core™ i3, i5 and i7 series and Intel® Xeon E-21XX series
- ▶ Intel® C246 Express chipset
- ▶ Up to 64 GB memory with 4x DDR4-2666 UDIMM/ECC support with Xeon E
- ▶ Expansion slots:
 - ▶ 4x PCIe slots (low profile card) or
 - ▶ 3x PCIe slots (full height, half length)
- ▶ Mass storage capabilities with M.2 socket ,HDD, SSD and DVD devices
- ▶ External Interfaces for 4x USB 2.0, 4x USB 3.1, 2x DP 1.2 , 1x DVI-D, Serial port, 2x 1 Gb Ethernet, audio, keyboard and mouse
- ▶ Active cooling

3/ Scope of Delivery

Check that your delivery is complete, and contains the items listed in Table 1: Scope of delivery. If damaged or missing items are discovered, contact the dealer.

Table 1: Scope of delivery

Part	Qty.	Part Description
KISS 2U Short V3	1	System configuration as ordered
Access key	2	Opens front access panel lock
Rubber feet	4	Self adhesive
AC power cable	1	With Europe rating, other cable ratings are optional
Safety instructions	1	Safety Instructions for IT equipment

3.1. Accessories and Spare Parts

Table 2: Accessories and spares parts

	Part Number	Part Description
Accessories	1016-5807	Slide rails (Short)
	1051-7200	Mounting kit slide rail (Short)
Spare parts	1050-8374	Filter pad
	1050-8442	Fan assembly

3.2. Shipment, Packaging and Unpacking

The KISS 2U Short V3 is packed together with all standard parts in a product specific cardboard packaging with suitable shock absorbers inside. Each item is packaged separately.

3.3. Type Label

Figure 2: Type label example



4/ Product Description

The KISS 2U Short V3 expands the Kontron KISS computer line. KISS 2U Short V3 is a scalable 2U rackmount system equipped with a micro-ATX mainboard. The flexible customer-specific hardware system configuration and the robust construction with excellent mechanical stability offers the superior qualities of a computer designed for operation in harsh industrial environments. The KISS 2U Short V3's designed enables installation in 19" industrial racks or as a desktop.

Figure 3: Rackmount variant (closed front access panel) Figure 4: Desktop variant (closed front access panel)



Figure 5: Rackmount variant (opened front access panel) Figure 6: Desktop variant (opened front access panel)



The KISS 2U Short V3 is design for horizontal operation. Vertical operation is possible.

The system can be equipped with up to three drive bays, where drive bays D1 and D2 are front accessible and drive bay D3 is internal.

The power button is located on the front side behind the front access panel. The LED indicators are located on the front side and consist of a power LED and a hard disk activity LED.

The KISS 2U Short V3 comes with a 400 W Power Supply Unit (PSU) with an input voltage range of 100 V to 240 V.

Two system fans are installed at the front side of the system. The two system fans are attached to the system by means of a slide-in fan assembly. The fan assembly simplifies the installation and removal of the two system fans and enables replacement even during operation.

A washable filter pad attaches to the fan assembly to protect the system against dust and dirt. The filter pad can be replaced during operation.


Depending on the integrated CPU micro-ATX mainboard the system can be expanded with different expansion cards.

When powering on the KISS 2U Short V3 make sure that the ventilation holes (air intake and air exhaust), are not obstructed by objects.

4.1. Front Side

The front side consists of two handle brackets for installation in a 19" Industrial rack and a front access panel with two front access panel side-plates attached via the handle brackets.


Figure 7: Front side with front access panel closed

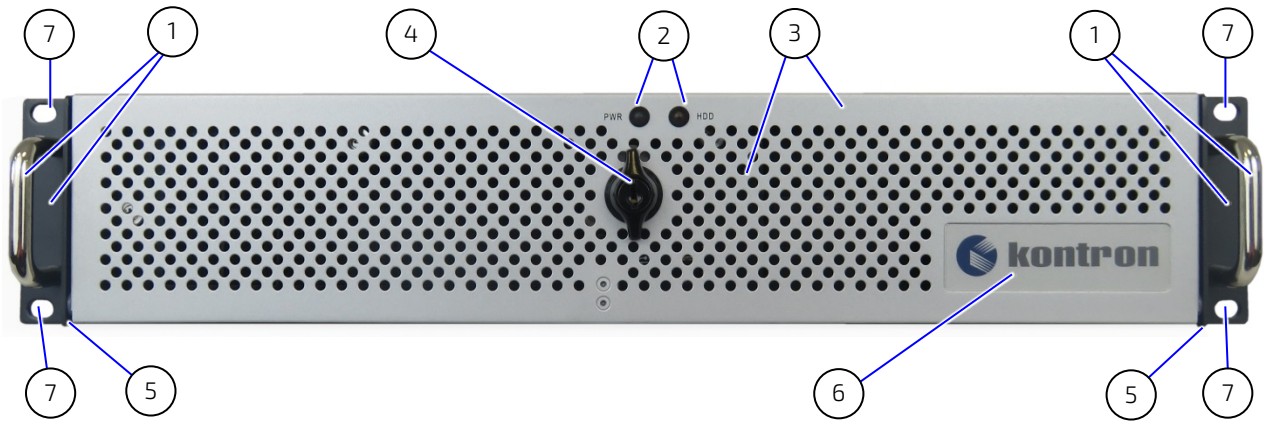

- | | |
|---|--|
| 1. Handle brackets | 4. Key lock for the front access panel |
| 2. LED indicators | 5. Front access panel side-plates |
| 3. Front access panel with air intake ventilation holes | 6. Kontron logo |
| | 7. Mounting holes for 19" racks |

For use as a desktop system, remove both handle brackets (right side and left side), see Chapter 8.2: Removing the Handle Brackets and attach the rubber feet (included in delivery), see Chapter 8.1: Installing the Rubber Feet. Depending on the security requirements, the lockable front access panel and two front access panel side-plates can be removed or left in-place.


Figure 8: Handle bracket with fastening screws

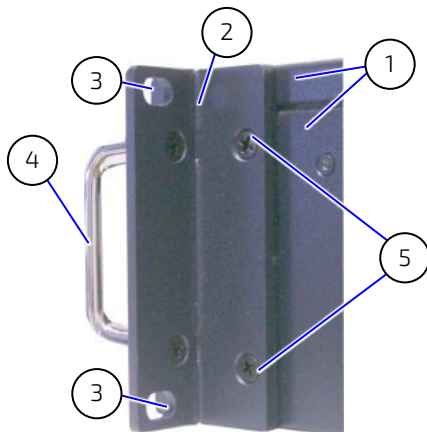

- | |
|---|
| 1. Chassis and cover |
| 2. Handle bracket |
| 3. Mounting holes for 19" racks |
| 4. Handle |
| 5. Screws to fasten handle bracket to chassis |

The power button, LED Indicators, two USB 2.0 ports, filter pad holder and the integrated drives are located on the front side of the system behind the front access panel.

Figure 9: Front side with front access panel open

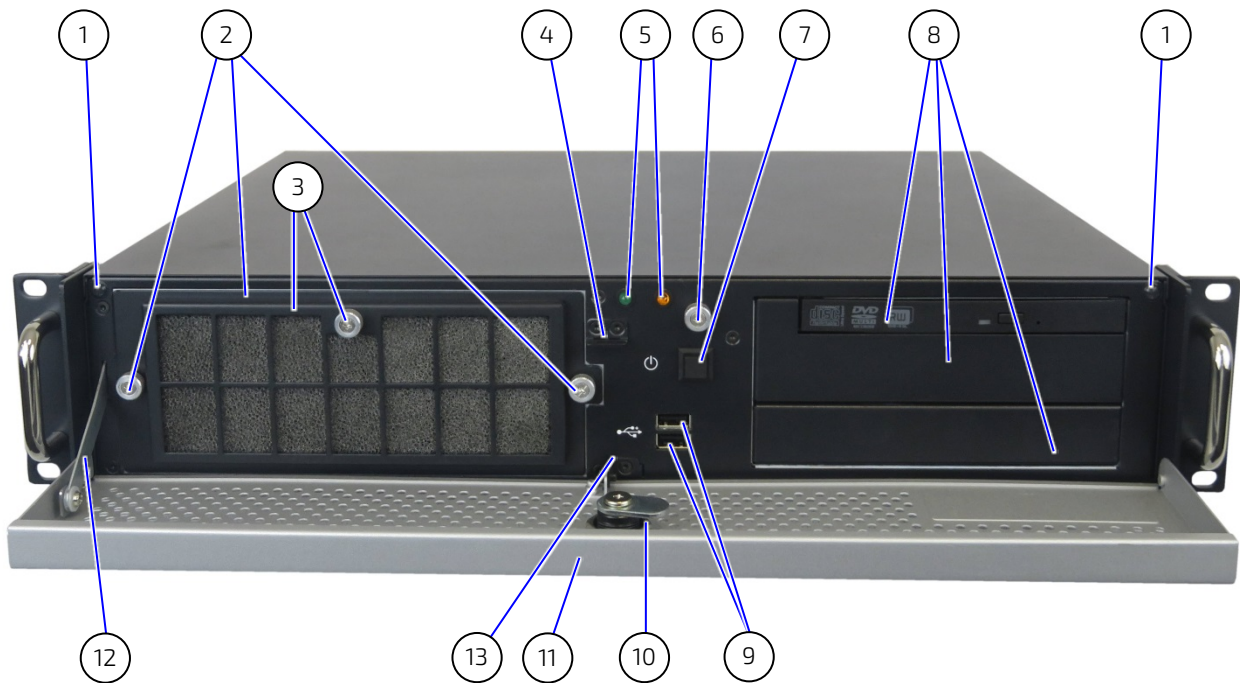


- | | |
|--|--|
| 1. Bump stop for the front access panel | 9. 2x USB (2.0) ports |
| 2. Fan assembly with two knurled screws | 10. Locking mechanism on front access panel |
| 3. Filter pad holder with filter pad and knurled screw | 11. Front access panel with air intake ventilation holes |
| 4. Slot for the locking mechanism | 12. Holder arm for the front access panel |
| 5. Indicators (Power LED and HDD LED) | 13. Central hinge for the front access panel |
| 6. Cover fastening screw on the front side | |
| 7. Power button | |
| 8. 3x Drive bays | |
| D1 - slim drive bay for slim DVD (top drive bay) | |
| D2 - 3.5" drive bay for 2.5" drives | |
| D3 - 3.5" internal drive bay for 3.5" or 2.5" drives | |

4.1.1. USB Ports

The two USB 2.0 ports are located on the front side of the system (Figure 9, pos.9 and Figure 10, pos. 2), behind the front access panel.

Figure 10: Power button and USB 2.0 ports

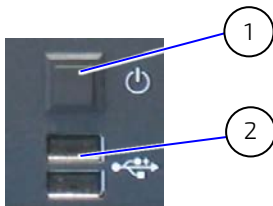

1. Power button
2. USB (2.0) ports



If USB devices are connected to the USB ports on the front of the device, the front access panel door cannot be closed and locked

4.1.2. Controls and Indicators

4.1.2.1. Power Button

The power button (Figure 9, pos. 7 and Figure 10, pos. 1) is located on the front side of the system, behind the front access panel. Press the power button to switch on or switch off the system.

Pressing the power button for longer than four seconds initiates a forced system shutdown before the power to the system is switched off.

⚠ WARNING

The power button does not disconnect from the mains power supply. When switched off using the power button, there is still a standby voltage of 5 VSB on the mainboard.

⚠ WARNING

Power cable and power connectors must always remain easily accessible.
 The KISS 2U Short V3 is only completely disconnected from the mains power supply when the power cable is disconnected, from the mains power socket or the KISS 2U short V3's AC input power connector (Figure 13, Figure 14, pos. 1).
 If the end environment restricts access to the power cable, disconnection must be guaranteed using a separate cut-off fixture.

NOTICE

Performing a forced shutdown can lead to loss of data or other undesirable effects!

4.1.2.2. Power LED and HDD Activity LED

The indicators (Figure 9, pos. 5 and Figure 11) of the KISS 2U Short V3 are located on the front side, behind the front access panel.

Figure 11: LED indicators

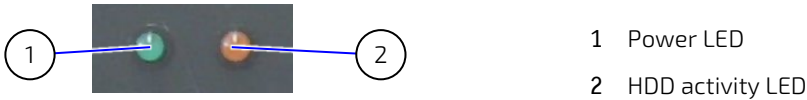


Table 3: Power LED and HDD LED activity description

Power LED (green)	LED illuminates (green) when the system is switched on by pressing the power button. Prerequisite: The system must be connected to an appropriate AC/DC power source.
HDD LED (orange)	LED lights up during hard disk activity

4.1.3. Front Access Panel

The securing lock mechanism (Figure 7, pos. 4) located on the front access panel protects against unauthorized use. When locked the front access panel cannot be opened, and the drives, filter pad holder and power button are not accessible.

The KISS 2U Short V3 can be operated without the front access panel, see Chapter 8.3: Removing the Front Access Panel and Front Access Panel Side-Plates.



The front access panel key must be kept safely and not be accessible to unauthorized persons.




If USB devices are connected to the USB ports on the front side of the KISS 2U Short V3, the front access panel door cannot be closed or locked.

4.1.4. Fan Assembly

The two system fans (Figure 12, pos. 3) are integrated in a user-friendly, replaceable fan assembly (hot-swap) mounted in a fan compartment on the front side of the system. The two system fans are temperature controlled via temperature sensors, to provide adequate airflow for optimal active cooling. For information on how to replace the fan assembly, see Chapter 10.2: Replacing the Fan Assembly.

Figure 12: Fan assembly

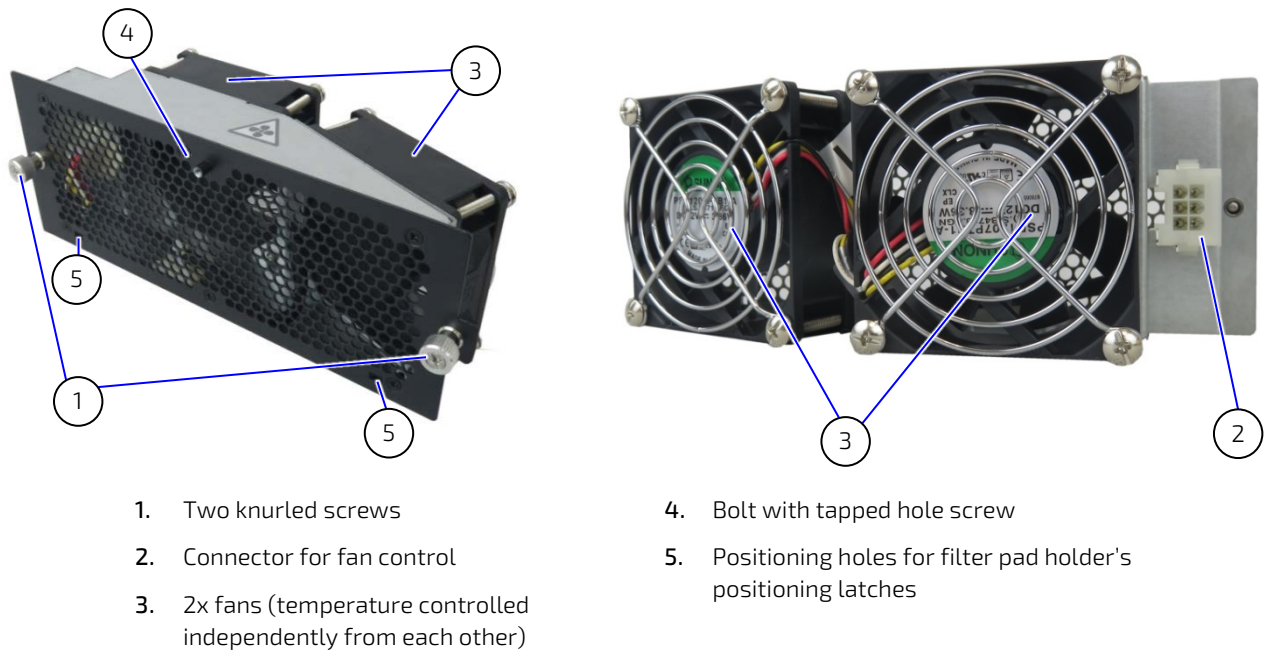

⚠ WARNING

Operation of the system is permitted with a functional fan assembly only!
Only replace a defective fan assembly with Kontron's original fan assembly, see Table 2: Accessories and spares parts.

⚠ CAUTION

Fan assembly replaceable during operation
Replace fan only by qualified personnel or suitably instructed persons aware of the associated dangers. Keep hands and fingers away from rotating fan parts. Before removing the fan assembly, wait until the fans have totally stopped.

4.1.5. Filter Pad and Filter Pad Holder



The filter pad can be changed during operation.

The filter pad and the filter pad holder (Figure 9, pos. 3) are located behind the front access panel (Figure 7, pos. 3). The filter pad protects the system from dust and dirt and will over time become soiled by pollution. If heavily soiled, the filter pad can cause excessive heating of the system. Kontron recommends cleaning the filter pad as often as necessary, see Chapter 10.1: Cleaning the Filter Pad.

The filter pad inserts into the filter pad holder. The filter pad holder fastens onto the fan assembly's front side by inserting the filter pad holder's positioning latches into the fan assembly's position holes (Figure 12, pos. 5) and then fastening the filter pad holder's knurled screw (Figure 9, pos. 3)

4.1.6. Drive Bays

The system can be equipped with up to three drive bays D1, D2 and D3 (Figure 9, pos.8).

Drive bays D1, D2 and D3 are supported by RAID.

Table 4: Drive bays

Drive Bay	Location	Description
D1	Front access	one slim drive bay for slim DVD drives
D2		one 3.5" drive bay for 2.5" drives
D3	Internal	one 3.5" drive bay for 3.5" or 2.5" drives



Additional internal drives are available (M.2 slot for memory modules). For more information regarding possible additional drives, see Chapter 5/System Extension.


4.2. Rear Side

The rear panel includes the external interfaces of the integrated mainboard, any expansion cards interfaces/ports, power supply unit (PSU) socket , and air exhaust ventilation holes.




The positioning and number of interfaces varies depending on the system configuration.

Figure 13: Rear side with micro-ATX mainboard with riser card

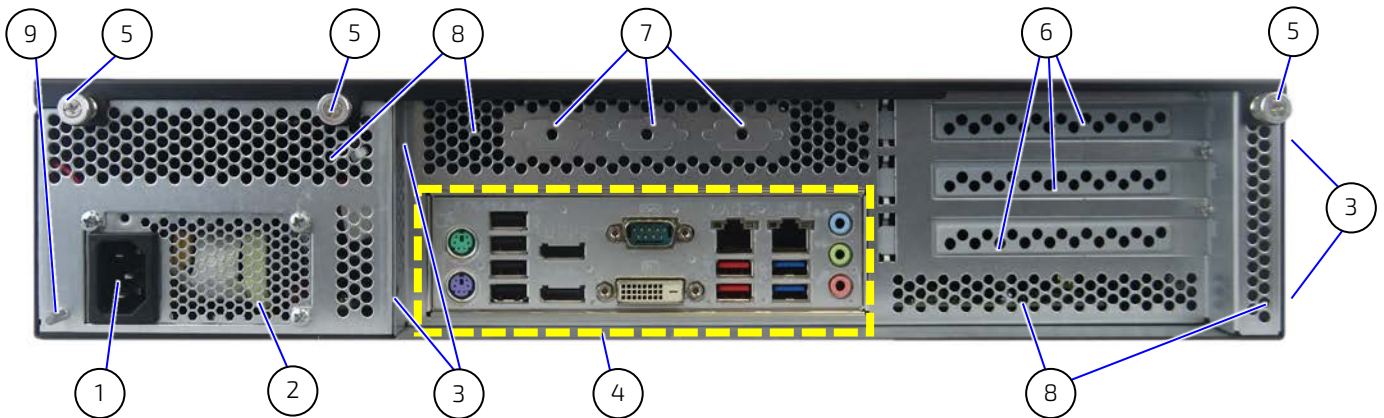

- | | |
|---|---|
| 1. Input power socket | 6. Slot brackets for expansion cards |
| 2. Power Supply Units (PSU) ventilation holes | 7. Cut-outs for optional interfaces routed to the rear (9-pin D-SUB type) |
| 3. Card cage (for mainboard board and expansion cards) fastening screws | 8. Ventilation holes (air exhaust) |
| 4. Mainboard external interfaces of mainboard | 9. Potential equalization stud |
| 5. Rear side of the cover with knurled screws | |

Figure 14: Rear side with micro-ATX mainboard with low profile cards

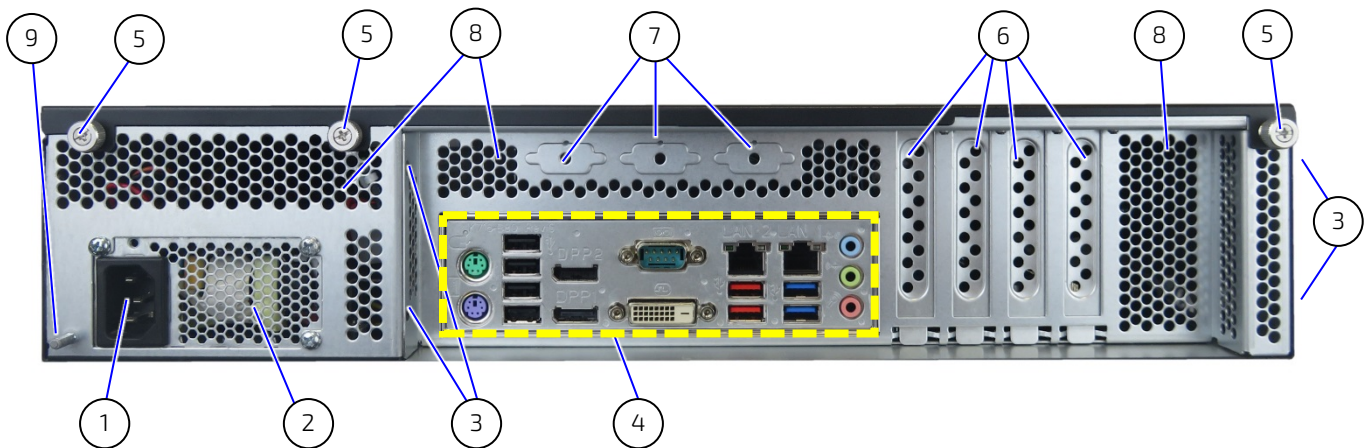


- | | |
|--|---|
| 1. Input power socket | 6. Slot brackets for expansion cards |
| 2. Power Supply Unit (PSU) ventilation holes | 7. Cut-outs for optional interfaces routed to the rear (9-pin D-SUB type) |
| 3. Card cage external fastening screws (for the mainboard board and expansion cards) | 8. Ventilation holes (air exhaust) |
| 4. Mainboard external interfaces | 9. Potential equalization stud |
| 5. Rear side of the cover with three knurled screws | |

4.2.1. Interfaces on the Rear Side

Depending on the installed mainboard, the following external interfaces are available for peripherals.

4.2.1.1. External Interfaces KISS 2U Short V3 CFL

Figure 15: External mainboard interface panel KISS 2U Short V3 CFL

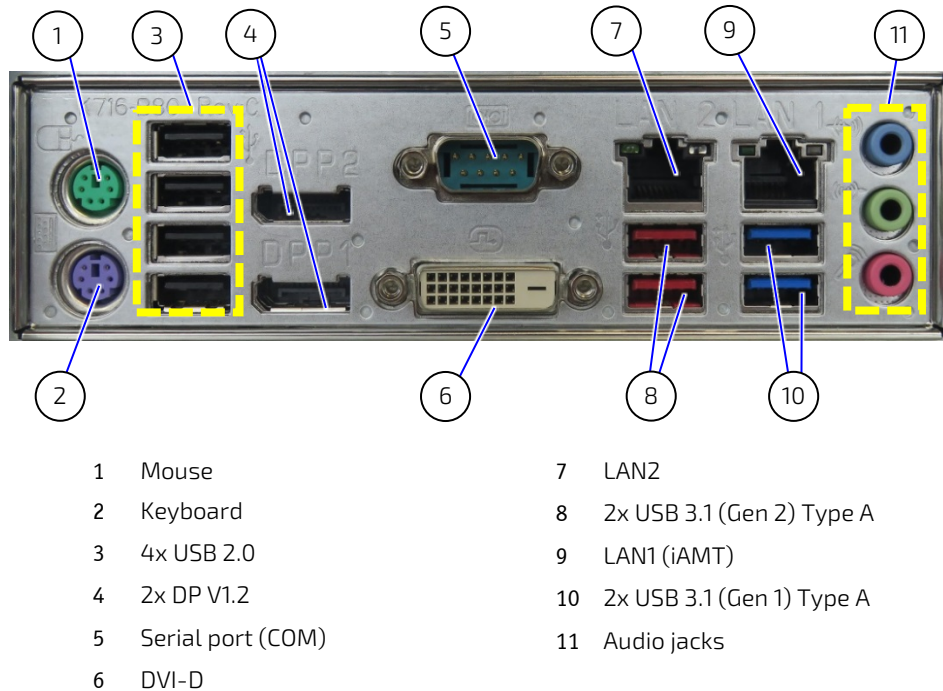

4.2.2. Additional Serial Ports

The mainboard's on-board interfaces such as serial ports can be routed to the rear panel (see Figure 13 and Figure 14, pos.7).



For information and technical data, refer to the installed mainboard's user guide.

4.2.3. Power Supply Unit

The Power Supply Unit (PSU) is located on the rear side of the system. The PSU supports 400 W with a nominal voltage range 100 V to 240 V. The PSU supplies the required internal 12V, 5V and 3.3V voltages using standard certified cabling.

Figure 16: PSU 400W AC



⚠ WARNING

Power cable and power connectors must always remain easily accessible.
The KISS 2U Short V3 is only completely disconnected from the mains power supply when the power cable is disconnected, either from the mains power socket, or the system's input power connector (Figure 13, Figure 14, pos. 1).
If the end environment restricts access to the power cable, disconnection must be guaranteed using a separate cut-off fixture.

⚠ WARNING

The power button (Figure 9, pos. 7) does not disconnect from the mains power supply. When using the power button to switch off, there is still a standby voltage of 5 VSB on the mainboard.

NOTICE

Do not disconnect the power from the system while the system is powered up!
Performing a forced shut down can lead to loss of data or other undesirable effects!

4.2.4. Potential Equalization Stud

The potential equalization stud is located on the rear side of the system (Figure 13 and Figure 14, pos. 9). The potential equalization stud is not a ground connection. When connected the potential equalization stud ensures that all connected systems share a common potential.



The potential equalization stud is not a ground connection. The potential equalization stud ensures that all connected systems share a common potential.

4.3. Sides (Left and Right)

On the left and right sides of the KISS 2U Short V3 there are four M4 tapped screw holes (Figure 17, Figure 18, pos. 1) used for installation in a 19" industrial rack with slide rails.

Figure 17: Left side


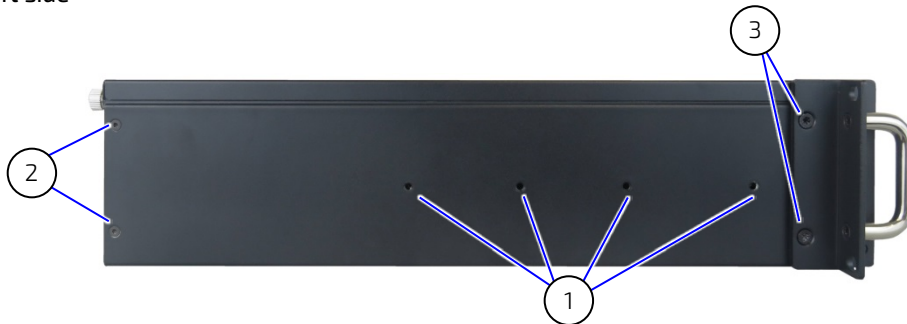


Figure 18: Right side

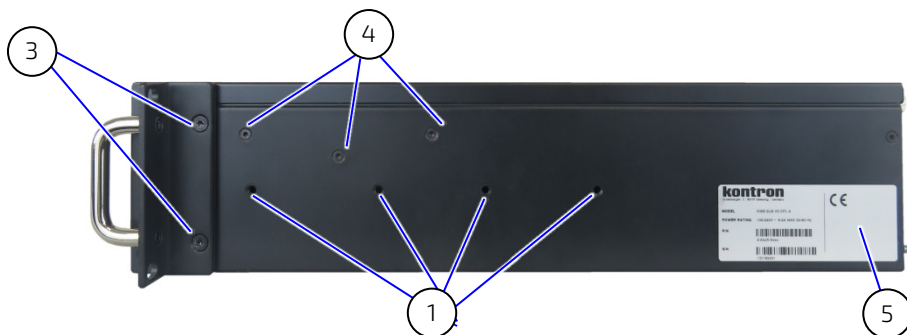

- | | |
|---|---|
| 1. 4x M4 tapped holes (on both sides) | 3. Handle bracket screws |
| 2. Card cage (for mainboard board and expansion cards) fastening screws | 4. Drives cages holder fastening screws (do not remove) |
| | 5. Type label |

4.4. Cover

⚠ WARNING

Energy hazards-240 VA present inside the chassis!

Before removing the KISS 2U Short V3's cover, ensure that the system is switched off and disconnected from the mains power supply.

Activities such as work inside the system, system expansion with expansion cards, or maintenance must be performed by qualified personnel aware of the associated dangers!


⚠ WARNING

The KISS 2U Short V3 is only properly closed if the cover is attached and all knurled screws are securely fastened.

- ▶ Cover fastening screw (Figure 9, pos. 6) on the front side
- ▶ Knurled screws (Figure 13, Figure 14, pos. 5) on the rear side

The cover fixes to the main chassis using fixing brackets on the front side of the cover and fastens using three knurled screws on the cover's rear side and one knurled screw on the cover's front side. For more information on how to open the cover, see Chapter 7.1: Opening and Closing the Cover.


Figure 19: Underside of cover with fixing brackets

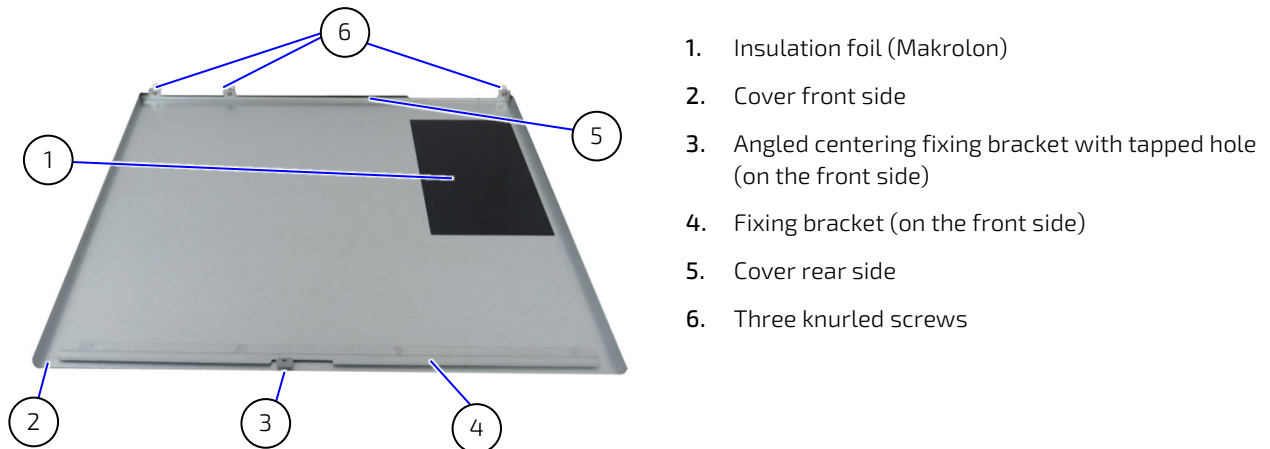

4.5. System Configuration

4.5.1. System Configuration – Mainboard with Low Profile Expansion Cards


Figure 20: Configuration with micro-ATX mainboard and low profile expansion cards

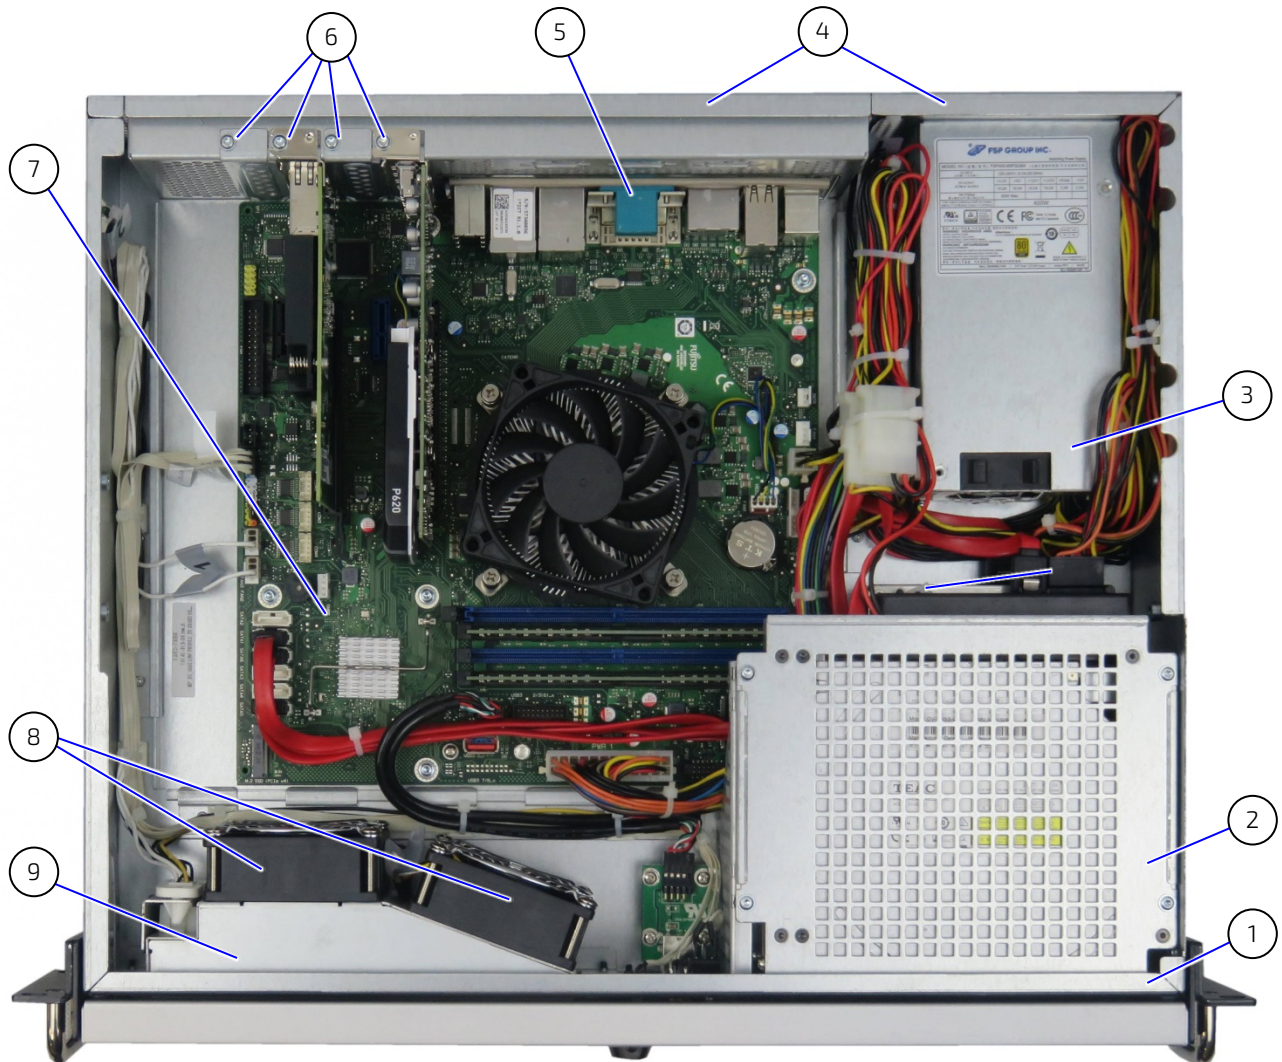

- | | |
|--|---|
| 1. Cover retaining plate on the front side | 6. Fastening screws for the slot brackets or expansion card slot brackets |
| 2. D1, D2 and D3 : drives bays (stacked one above the other into a drive cage) | 7. Mainboard |
| 3. Power Supply Unit (PSU) | 8. Fans (of the fan assembly) |
| 4. Cover retaining plates on the rear side | 9. Fan assembly (hot-swap) |
| 5. Interface connectors (available externally) | |

4.5.2. System Configuration -Mainboard with Riser Expansion Cards

Figure 21: Configuration with micro-ATX mainboard and riser expansion cards

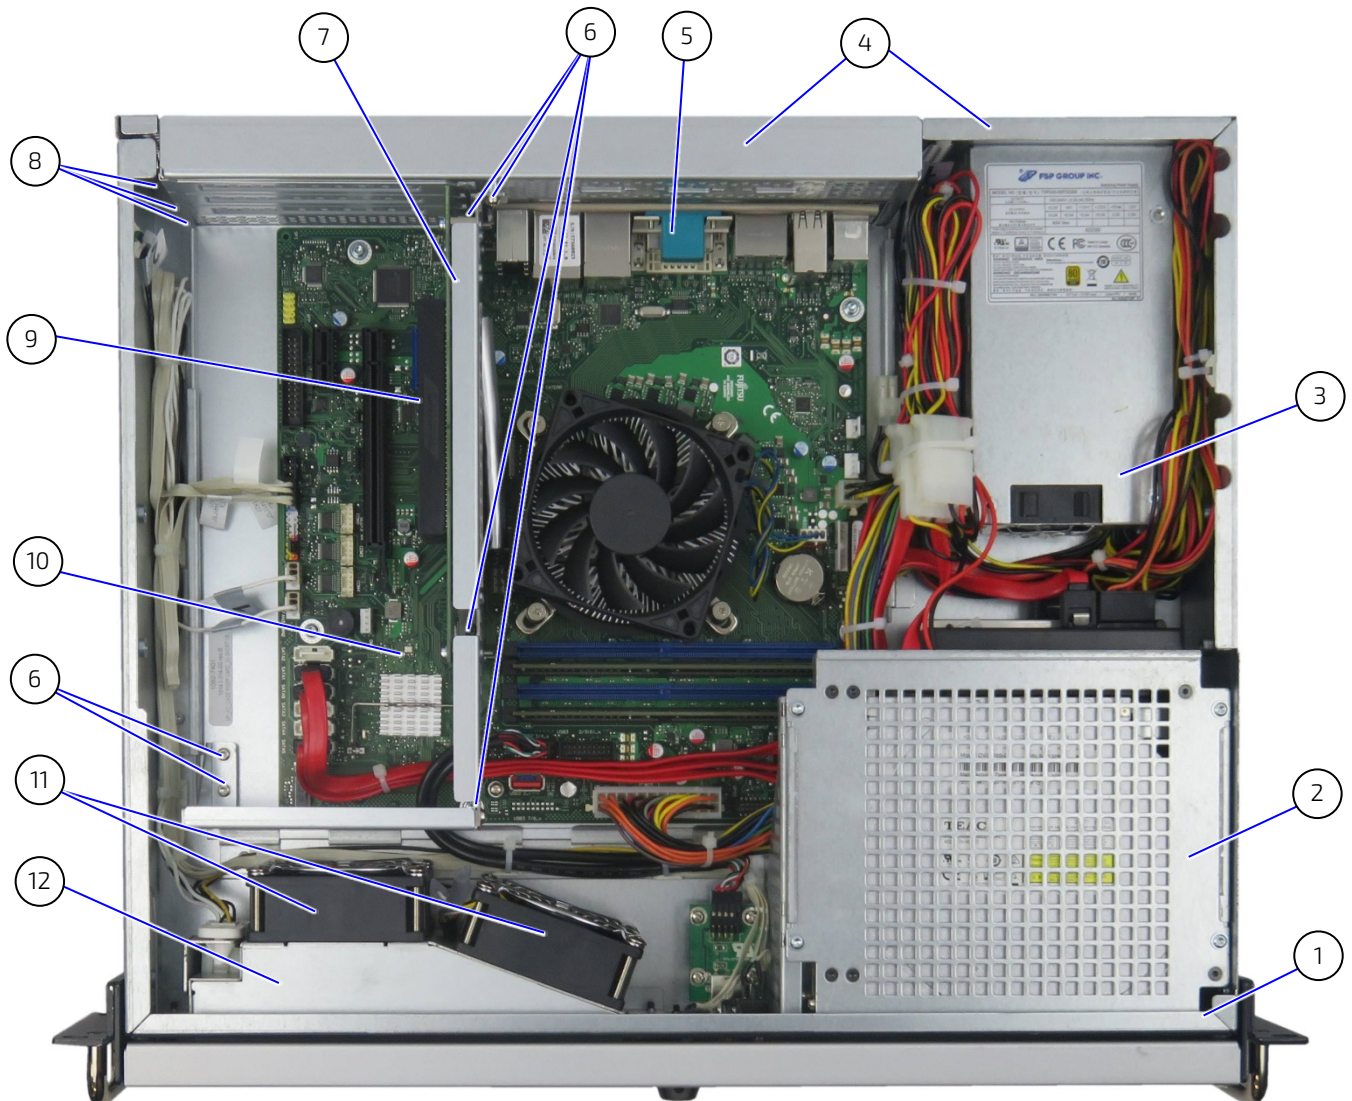

- | | |
|--|---|
| 1. Cover retaining plate on the front side | 7. Retaining bracket for riser cards (not provided for system configuration with low profile cards) |
| 2. D1, D2 and D3: drives bays (stacked one above the other into a drive cage) | 8. Fastening screws for the slot brackets or expansion card slot brackets |
| 3. Power Supply Unit (PSU) | 9. Riser card with expansion slots |
| 4. Cover retaining plates on the rear side | 10. Mainboard |
| 5. Interface connectors (available externally) | 11. Fans (of the fan assembly) |
| 6. Fastening screws for riser card retaining bracket | 12. Fan assembly (hot-swap) |

5/ System Extension



Due to the limited lifespan of expansion devices, Kontron recommends checking the condition of any installed expansion devices regularly and to pay attention to the manufacturer's lifespan specifications.



Opening the system to install or remove expansion cards must only be performed by qualified personnel aware of the associated dangers.

5.1. Mass Storage Options

An additional internal drive is configurable in systems where the mainboard includes an on-board M.2 slot for a, M.2 2280 memory module. RAID support is not available for an on-board M.2 memory module.

Table 5: Mass storage devices

Drive Bay	Description
On-board M.2 slot	M2.2280 (key M) PCIe drive

5.2. Expansion Cards

The following slots are available for expansion on the rear side of the chassis.

Table 6: Expansion slots

Installed Mainboard	Expansion Card Type	Description
micro-ATX (CFL)	Riser cards	Up to 3x PCIe, (full height, half length)
	Low Profile cards	Up to 4x PCIe (low profile)



For information regarding the PCIe/PCI slot functionality and location on the mainboard, refer to the mainboard manufacturer's "Product Information". To determine which mainboard is implemented, see Chapter 11.2: Technical Specification, for more detailed mainboard information.



When adding expansion cards consider the maximum power consumption supported by the KISS 2U Short V3's PSU.

6/ Thermal Considerations

6.1. Active Cooling

The KISS 2U Short V3 is forced air-cooled using two internal system fans that force air to flow from the front to the back of the chassis. The processor and expansion cards have integrated cooling solutions or are equipped with corresponding cooling devices.

If a filter pad is used, clean the filter pad regularly to ensure that sufficient airflow is provided, see Chapter 10.1: Cleaning the Filter Pad.

6.2. Minimum System Clearance

To guarantee that sufficient air flows from the front to the back of the chassis, ensure that the ventilation holes are not covered, blocked or obstructed by surrounding parts.

Before installing the KISS 2U Short V3 take into account, any thermal considerations mentioned in Chapter 8/: Installation, such as airflow obstructions and the correct mount orientation.

⚠ WARNING

Ensure Sufficient Airflow

Ensure that the 19" rack cabinet is well ventilated and does not prevent the KISS 2U Short V3 from taking in air at the front and exhausting air at the rear.

⚠ WARNING

Do not place the KISS 2U Short V3 close to heat sources or damp places.



There are no ventilation restrictions above and below the KISS 2U Short V3, enabling installation directly on top of or below another system.

6.3. Third Party Components

For KISS 2U Short V3 systems extended and configured with third party components such as PCIe expansion cards, M.2 module, DIMMs and drives (HDD, SSD and DVD), there is an internal temperature rise. Thus, the air temperature inside the system is higher than the ambient air temperature around the system.

7/ Assembly

No special tools are required, to assemble the KISS 2U Short V3.

7.1. Opening and Closing the Cover

To access internal components open the cover.

⚠ WARNING

Energy hazards-240 VA present inside the chassis!

Before removing the KISS 2U Short V3's cover, ensure that: the system is switched off and disconnected from the mains power supply.

Activities such as work inside the system, system expansion with expansion cards, or maintenance must be performed by qualified personnel aware of the associated dangers!

To open the cover, perform the following:

1. Switch off and disconnect the system from the mains power supply.
2. Loosen the cover's knurled screws on the front side (Figure 22) and the three knurled screws on the rear side (Figure 23) that secure the cover.

Figure 22: Loosening knurled screw on the front side



Figure 23: Loosening knurled screws on the rear side



3. Pulling the cover out slightly as shown in Figure 24, releases the cover's centering and fixing brackets (Figure 19 pos.3 and pos. 4) from the retaining brackets on the front side of the chassis (Figure 20, pos. 1).

Figure 24: Pull and release the cover



4. Lift the cover up (on the rear edge) to remove the cover as shown in Figure 25.

Figure 25: Removing the cover



5. To close and secure the cover, proceed in the reverse order (step 4 to step 2).

⚠ WARNING

The KISS 2U Short V3's chassis is only properly closed if the cover is attached and all knurled screws are securely fastened.

- ▶ Cover fastening screw (Figure 9, pos. 6) on the front side
- ▶ Knurled screws (Figure 13, Figure 14, pos. 5) on the rear side

7.2. Accessing Internal Components

This chapter contains important information on working safely with internal components. Follow these instructions when handling internal components such as expansion cards.

⚠ WARNING

Energy hazards-240 VA present inside the chassis!

Before removing the KISS 2U Short V3's cover, ensure that: the system is switched off and disconnected from the mains power supply.

Activities such as work inside the system, system expansion with expansion cards, or maintenance must be performed by qualified personnel aware of the associated dangers!



ESD Sensitive Device!

Follow the safety instructions for components that are sensitive to electrostatic discharge (ESD). Failure to observe this warning notice can result in damage to the components..



Consult the documentation provided by the expansion card's manufacturer for instructions before installing/removing an expansion card.

Read and observe the corresponding safety instruction included in Chapter 1/: General Safety Instructions for IT Equipment.


7.2.1. Installing and Removing Riser Card Expansion Cards

The mainboard with riser card is mounted on a card cage. To access the slot bracket or expansion card screws, the card cage must be pulled-out slightly.

To install or remove a riser card expansion cards, proceed as follows:

1. Switch off and disconnect the system from the mains power supply.
2. Open the cover as described in Chapter 7.1: Opening and Closing the Cover.
3. Unscrew the four card cage screws on the rear side (Figure 26). Retain the screws for later use.
4. Lift the card cage upwards, and slide out slightly, to gain access to the slot bracket or expansion card screws.

Figure 26: Pulled-out card cage screws

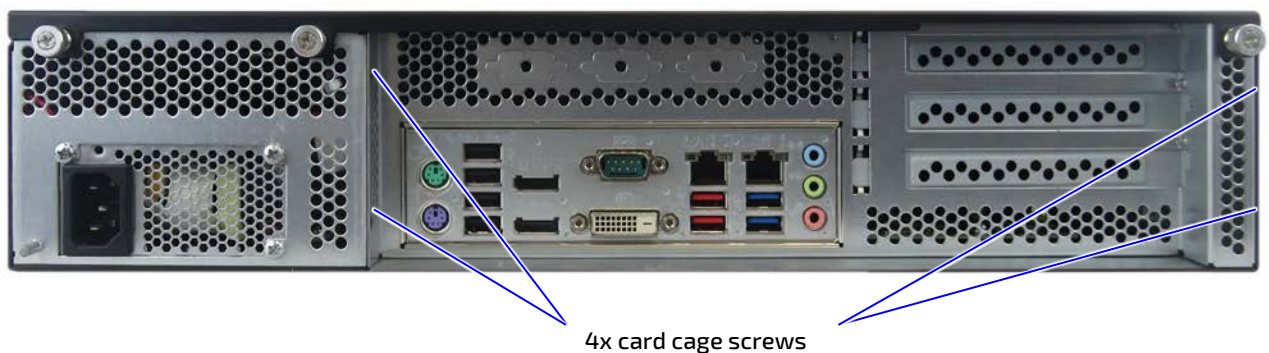

5. Install/remove the expansion card(/s) in/from the respective riser card's expansion slot(/s) (Figure 21, pos. 9) and fasten the expansion card or the slots bracket to the card cage.(Figure 21, pos. 8)
6. Slide the card cage back into the original position and fasten the four card cage screws to secure the card cage.

7. Close the system and secure the cover with the knurled screws as described in Chapter 7.1: Opening and Closing the Cover (step 5).

7.2.2. Installing and Removing Low Profile Expansion Cards

To install or remove low profile expansion cards, proceed as follows:

1. Switch off and disconnect the system from the mains power supply.
2. Open the system as described in the Chapter 7.1: Opening and Closing the Cover.
3. Install a low profile expansion card by removing the slot bracket's fasten screw and retaining the slot bracket with screw for later use. Insert the low profile expansion card into the respective expansion card slot and secure the expansion card with fastening screw (Figure 20: pos. 6)
4. Remove a low profile expansion card by unscrewing the expansion card's screw (Figure 20, pos. 6) and removing the low profile expansion card from the respective expansion card slot on the mainboard. (Store the expansion card with screw for possible later use). Insert a slot bracket into the empty expansion card slot on the rear side of the chassis and secure the slot bracket by fastening the slot bracket screw. (Figure 20: pos. 6)
5. Close the system and secure the cover with the knurled screws as described in the Chapter 7.1: Opening and Closing the Cover (step 5).

8/ Installation

Before installing or removing the KISS 2U Short V3 in a 19" industrial rack or desktop environment, read the general installation instructions within this chapter.

⚠ WARNING

Read and observe the information in Chapter 1/:General Safety Instruction for IT Equipment.

⚠ WARNING

The system must be mounted and installed only by qualified personnel aware of the associated dangers.

⚠ WARNING

Ensure Sufficient Airflow.

Ensure the KISS 2U Short V3 is well ventilated and that nothing obstructs the KISS 2U Short V3 from taking in air at the front and exhausting air at the rear.

There are no restrictions above and below the KISS 2U Short V3, enabling KISS 2U Short V3 systems to be installed directly on top of another system.

⚠ WARNING

Do not place the KISS 2U ShortV3 close to heat sources or damp places.

⚠ CAUTION

The KISS 2U Short V3 may be operated horizontally only.



If access is restricted, install expansion cards before installing the KISS 2U Short V3..

8.1. Installing the Rubber Feet

For use on a desktop, to avoid scratching the surface, attach the supplied four rubber feet:

1. Switch off and disconnect the system from the mains power supply. Disconnect all peripherals.
2. Ensure that all components are securely installed and that the system cover is closed and secured.
3. Turn the chassis upside down (Orientation: bottom side facing upwards).
4. Remove the protective film from the self-adhesive rubber feet.
5. Attach the self-adhesive rubber feet to the bottom side of the chassis.
6. Turn the chassis the right way around (Orientation: cover facing upwards).

NOTICE

Do not disconnect the power from your system while the system is powered up!
Performing a forced shutdown can lead to loss of data or other undesirable effects!

8.2. Removing the Handle Brackets and Front Access Panel Side-Plates

The two handles brackets are removable. To remove the handles brackets, proceed as follows:

1. Loosen and remove the two screw (Figure 8, pos. 5) that fasten the handles bracket and front access panel side-plates to the chassis (left side and right side).
2. Reattach the front access panel side-plates using the original two screws (left side, right side).
3. Store the two handle brackets for possible further use
4. To reinstall the handle brackets proceed in the reverse order (step 1 to 2).




The KISS 2U Short V3 is delivered with the handle brackets already assembled.

8.3. Removing the Front Access Panel and Front Access Panel Side-Plates

The front access panel and the two front access panel side-plates are removable.

Figure 27: Front access panel side-plate with handle bracket

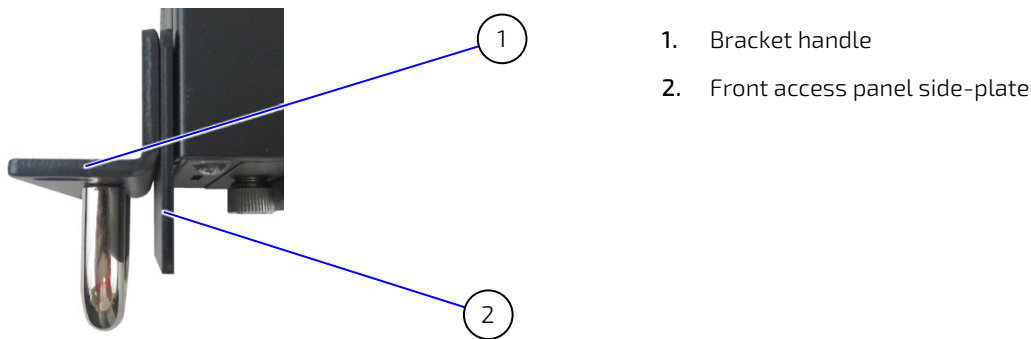

To remove the front access panel and front access panel side-plates, proceed as follows:

1. Loosen the fastening screws that fasten the handle bracket and front access panel side-plates to the chassis (left side and right side).
2. When loosen enough release the front access panel's hinge from the front access panel side-plate's hole. Initially release one side of the front access panel and the other side will loosen and can be removed.
3. Move the front access panel slightly to the left to remove the front access panel from the central hinge and then carefully guide the front access panel's holder arm out of the holding slot.
4. Store the front access panel for future use.
5. Remove the front panel side-plates (left side and right side) by removing the screws previously loosened in step 1.
6. If required re- attach the handle brackets (left side and right side), using the screws removed in step 5.

8.4. Installing as a Desktop

Before installing the KISS 2U Short V3 in a desktop environment, install the rubber feet as described in Chapter 8.1: Installing the Rubber Feet, to avoid scratching the installation surface. Additionally, observe the general instructions and any safety warnings within this chapter.

⚠ WARNING

The voltage feeds must not be overloaded.

Adjust the cabling and the external overcharge protection to correspond with the electrical data indicated on the type label located on right side of the chassis.

⚠ WARNING

Ensure Sufficient Air Flow

Ensure that the 19" industrial rack cabinet is well ventilated and does not prevent the KISS 2U Short V3 from taking in air at the front and exhausting air at the rear.

Above and below the KISS 2U Short V3 there are no restrictions, enabling KISS 2U Short V3 systems to be installed directly on top of another system.

To install in a desktop environment, proceed as follows:

1. Add the rubber feet as described in Chapter 8.1: Installing the Rubber Feet.
2. Remove the handle brackets as described in Chapter 8.2: Removing the Handle Brackets
3. If required, the front access panel and the two front access panel side-plates can be removed as described in Chapter 8.3: Removing the Front Access Panel and Front Access Panel Side-Plates.

8.5. Installing in a 19" Industrial Rack

Before installing or removing the KISS 2U Short V3 into or from a 19" industrial rack, observe the instructions described in this chapter and any additional safety warnings. To assemble for 19" industrial rack using slide rails, see Chapter 8.6: Installing Slide Rails (Option).

⚠ WARNING

To support the KISS 2U Short V3's weight, two separate fixation methods must be used:

- ▶ Front handle brackets (left side, right side)
- ▶ Slide rails or L brackets or a 19" rack rear/side fixation

⚠ WARNING

Ensure Sufficient Airflow

Ensure that the 19" Industrial rack cabinet is well ventilated and does not prevent the KISS 2U Short V3 from taking in air at the front and exhausting air at the rear.



There are no ventilation restrictions above and below the KISS 2U Short V3, enabling installation directly on top of or below another system.

⚠ WARNING

The 19" industrial rack cabinet must be stable. To improve stability:

- ▶ Placing system from the bottom up
- ▶ Place heavy systems lower down
- ▶ Bolt the cabinet to the floor or anchor the cabinet to the wall

⚠ CAUTION

Verify that the KISS 2U Short V3 is securely mounted
When using slide rails, the KISS 2U Short V3 must be securely mounted on the slide rails and front handle brackets must be fastened (left side, right side) to the 19" Industrial rack cabinet.

⚠ CAUTION

Installing the KISS 2U Short V3 alone can result in product damage or personal injury.



Due to possible access restrictions, before installing in a 19" industrial rack cabinet

- ▶ Install all expansion card
- ▶ Connect peripherals to the corresponding system ports.

To install in a 19" industrial rack, proceed as follows:

1. Install the slide rails to the KISS 2U Short V3 as described in Chapter 8.6: Installing Slide Rails (Option).
2. Install the corresponding slide kits to the 19" industrial rack cabinet.
3. Push the KISS 2U Short V3 with slide rail assembly as far as possible into the corresponding installed rack slide rail.
4. Use the handle bracket mounting holes (Figure 8, pos. 3) to firmly attach the KISS 2U Short V3's handle brackets to the sides of the 19" industrial rack cabinet.
5. Verify that the KISS 2U Short V3 is securely mounted.

8.6. Installing Slide Rails (Option)

Kontron offers compatible 19" Slide Rails and Rack Slide Rails Kit for the KISS 2U Short V3. For more information, see Table 2: Accessories and spares parts.

⚠ WARNING

To support the KISS 2U Short V3's weight, two separate fixation methods must be used:

- ▶ Front handle brackets (left side, right side)
- ▶ Slide rails or L brackets or a 19" Industrial rack rear side fixation

⚠ CAUTION

Use only the specified screws only to attach telescope slide rails to the KISS 2U Short V3.

⚠ CAUTION

Verify that the KISS 2U Short V3 is securely mounted
When using slide rails, the KISS 2U Short V3 must be securely mounted on the slide rails and front handle brackets.

To install slide rails, proceed as follows:

1. Extend the slide rail to the pulled-out position to expose the inner part of the slide rail (Figure 29) with screw holes. (Figure 28, pos. 2).
2. Using the supplied screws firmly attach the side rail to the left side and right side (Figure 28, pos. 2).
3. Push the slide rail into the pushed-in position (Figure 30).

4. Install the corresponding rack slide rail kits to the 19" industrial rack cabinet, see Figure 31: Assembling the slide rails in an industrial rack cabinet.

Figure 28: Slide rail inner part fastened to chassis

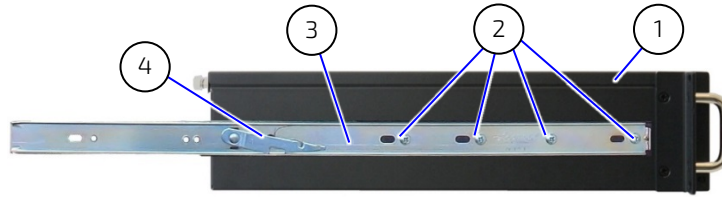


Figure 29: Slide rail in pulled-out position

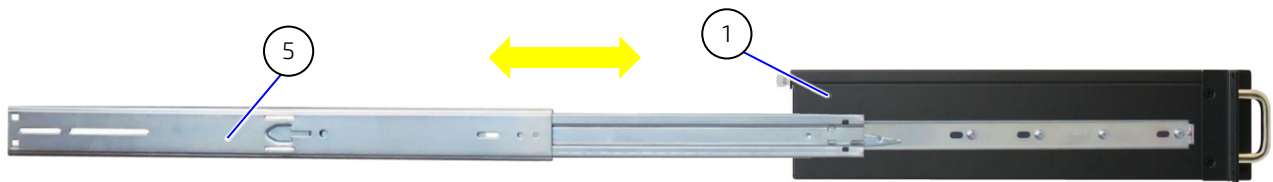



Figure 30: Slide rail in pushed-in position



Legend for Figure 28, Figure 29 and Figure 30

- | | |
|---|--------------------------------------|
| 1. Side view of the KISS 2U Short V3 | 4. Locking/unlocking lever |
| 2. Screws attaching slide rail to the chassis | 5. Slide rail in pulled-out position |
| 3. Inner part of the slide rail | 6. Slide rail in pushed-in position |

Figure 31: Assembling the slide rails in an industrial rack cabinet

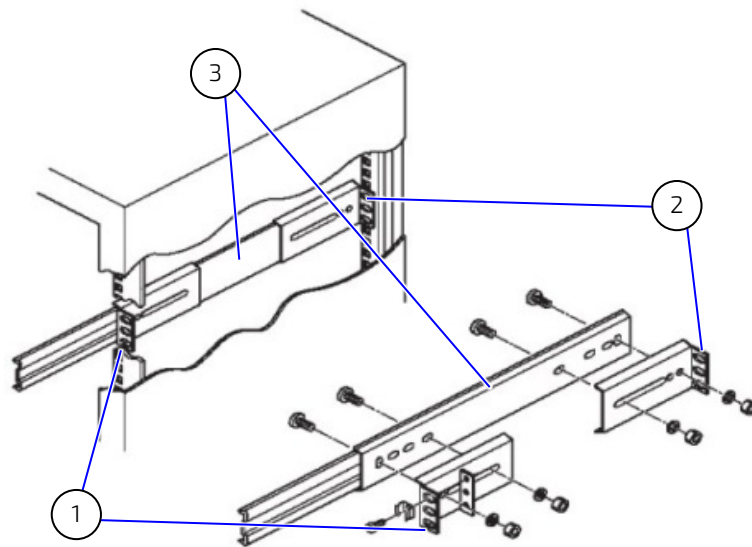

1. Short front bracket
2. Long rear bracket
3. Telescopic slide rail attached to Industrial rack cabinet



Short brackets are usually used at the front of the chassis and long brackets at the rear.

9/ Starting Up

Before starting up observe the instructions in Chapter 1: General Safety Instruction for IT Equipment.

⚠ WARNING

Recommended intended use is closed and locked

Only when the cover is properly secured with the knurled screws on the rear side and front side, and the front access panel is locked, is it ensured that the operator does not have access to the internal parts, loaded with hazardous energy.

9.1. Connecting the Power Connection

⚠ WARNING

Power cable and power connectors must always remain easily accessible.

The KISS 2U Short V3 is only completely disconnected from the mains power supply when the power cable is disconnected, either from the mains power socket, or the system's input power socket (Figure 13, Figure 14, pos. 1).

If the end environment restrict access to power cable, disconnection must be guaranteed using a separate cut-off fixture.

⚠ CAUTION

Ensure that the mains power supply socket (power outlet) is properly grounded and the power cable is in perfect condition with no visible damage.

NOTICE

The rated mains voltage range must agree with the voltage specified on the type label.

NOTICE

Do not disconnect the power from the system while the system is powered up!
Performing a forced shut down can lead to loss of data or other undesirable effects!

Figure 32: Input power socket



The input power socket is located on the rear side. To connect the power and start up, proceed as follows:

1. Connect the ends of the supplied AC power cable to the corresponding sockets:
 - a. Input power socket (Figure 32)
 - b. Mains power supply socket using the electrical plug for the region.
2. Unlock the front access panel (Figure 7, pos. 3) and press the power button (Figure 9, pos. 7).
3. Close and lock the front access panel.
4. The power LED illuminates green. (Figure 7, pos. 2 and Figure 11, pos. 1)

9.2. Operating System and Hardware Component Drivers

The KISS 2U Short V3 is operational when switched on for the first time with pre-installed Operating System (OS) Windows 10 IOT 64-bit or Linux Ubuntu 64-bit and with all required drivers. Drivers are available from Kontron's EMD customer section.

If ordered without pre-installed OS, before starting the KISS 2U Short V3 install the operating system and the appropriate drivers for the system configuration. Consider the manufacturer's specifications for the OS and the integrated hardware components.



Download the relevant drivers for the installed hardware from our web site at www.kontron.com by selecting the product or visit Kontron's EMD customer section. Pay attention to the manufacturer specifications of the operating system and the integrated hardware components.

10/ Maintenance and Prevention


Kontron systems only require minimal maintenance and care to maintain correct operation.

- ▶ Wipe the system with a soft dry cloth if required
- ▶ Remove persistent dirt using a soft, slightly damp cloth (only use a mild detergent).
- ▶ Clean the air filter pad regularly (as often as necessary, depending on the environment)

10.1. Cleaning the Filter Pad

The filter pad inserts into the filter pad holder at the front side of the fan assembly. The filter pad is soiled by pollution within the operating environment. If heavily soiled the filter pad can cause excessive heating of the system. Kontron recommends cleaning the filter pad as often as necessary. It is possible to change the filter pad during the operation of the system.

Figure 33: Front side with filter pad holder

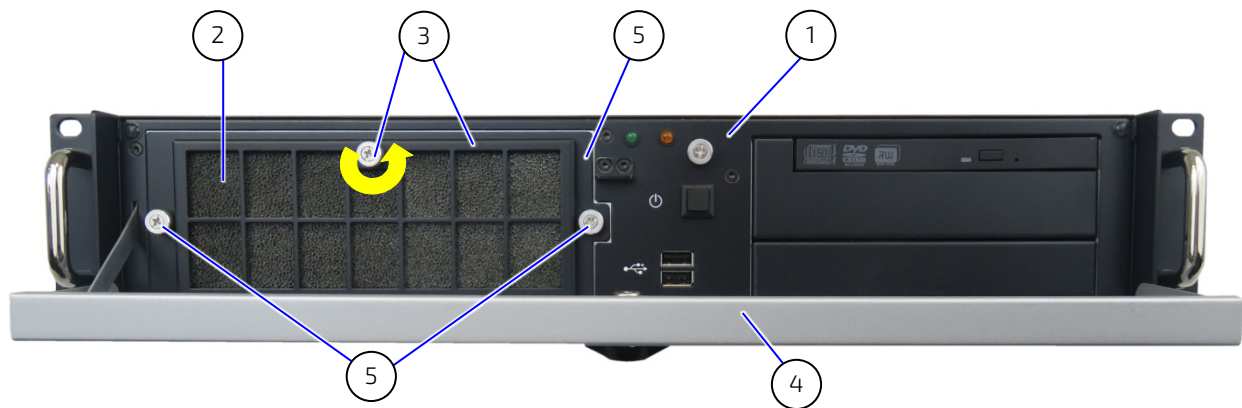

- | | |
|---|-----------------------|
| 1. Front side of the KISS 2U Short V3 | 4. Front access panel |
| 2. Filter pad | 5. Fan assembly |
| 3. Filter pad holder with knurled screw | |

To replace the filter pad, proceed as follows:

1. Open the front access panel, (Figure 33 pos. 4).
2. Loosen the knurled screw (Figure 33, pos. 3) that secures the filter pad holder to the fan assembly in the direction shown.
3. Release the filter pad holder's positioning latches from the positioning holes on the fan assembly (Figure 34, pos. 3) by moving upwards and lifting out the filter pad holder.
4. Remove the dirty filter pad (Figure 37), from the filter pad holder.
5. Clean the filter pad as follows:
 - a. Rinse the filter pad in water (up to approx. 40°C/104°F; with a mild commercial detergent).
 - b. It is also possible to beat the filter pad, suction clean the filter pad, or blast the filter pad with warm compressed air.
 - c. If the filter pad is soiled with grease and dust, rinse the filter pad in warm water with a degreaser.
 - d. Do not clean the filter pad with a piercing jet of water.
6. Do not wring out the filter pad, allow the filter pad to air dry.
7. After cleaning and drying the filter pad, place the filter pad in the filter pad holder (Figure 36).

8. Reattach the filter pad holder to the front side of the fan assembly by inserting the filter pad holder's positioning latches (Figure 35, pos. 7) into the fan assembly's positioning holes (Figure 34, pos. 3).
9. Fasten the filter pad holder by tightening the knurled screw (Figure 35, pos. 6) to the bolt with tapped hole (Figure 34, pos. 1) on the fan assembly.



Defective components may only be replaced by Kontron original spare parts.
For a list of spare parts, see Table 2: Accessories and spares parts.

Figure 34: Front side without filter pad

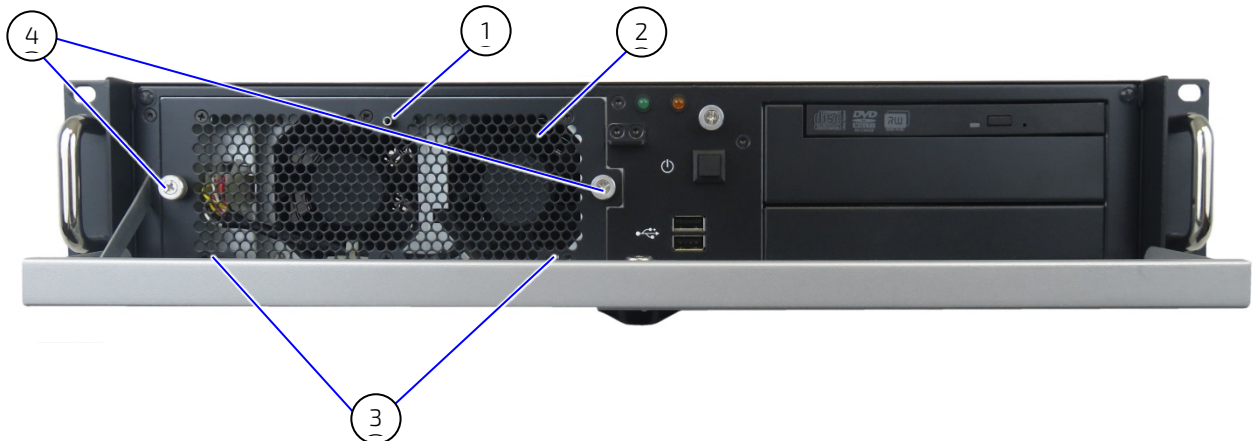


Figure 35: Filter pad holder (without filter pad)

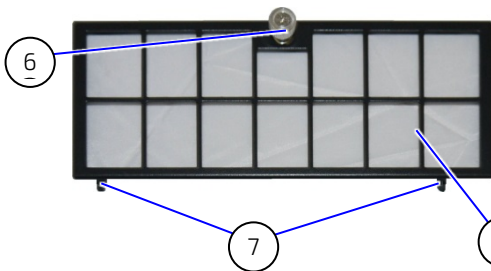


Figure 36: Filter pad holder (with filter pad)



Figure 37: Filter pad



- | | |
|---|---|
| 1. Fan assembly with bolt with tapped hole | 4. Knurled screw to fix fan assemble in the chassis |
| 2. Ventilation holes for air intake on the front side of the fan assembly | 5. Filter pad holder |
| 3. Positioning holes for the filter pad holder | 6. Knurled screw of the filter pad holder |
| | 7. Positioning latches of the filter pad holder |

10.2. Replacing the Fan Assembly

Before replacing the fan assembly, read the following instructions:

⚠ WARNING

The operation of the KISS 2U Short V3 is permitted with a functional fan assembly only! Only replace a defective fan assembly with Kontron's original fan assembly, see Table 2: Accessories and spares parts.

⚠ CAUTION

Fan assembly replaceable during operation

Replace fan only by qualified personnel or a suitably instructed persons aware of the associated dangers. Before removing the fan assembly, wait until the fans have totally stopped. Keep hands and fingers away from rotating fan parts.



The filter pad holder can be fastened to the front side of the fan assembly either before or after the fan assembly is installed in the chassis.

To replace the fan assembly, proceed as follows:

1. Remove the filter pad holder as described in the Chapter 10.1 Cleaning the Filter Pad (step 1 to 3) and retain the filter pad holder with filter pad for later use.
2. Loosen the two knurled screws on the fan assembly (Figure 38, pos. 2)
3. Pull out the fan assembly to disconnect the fan assembly from the internal fan control socket (Figure 39, pos. 1).
4. Lift the fan assembly upwards as shown (Figure 38) to remove from the fan compartment (Figure 39, pos. 2).

Figure 38: Removing the fan assembly


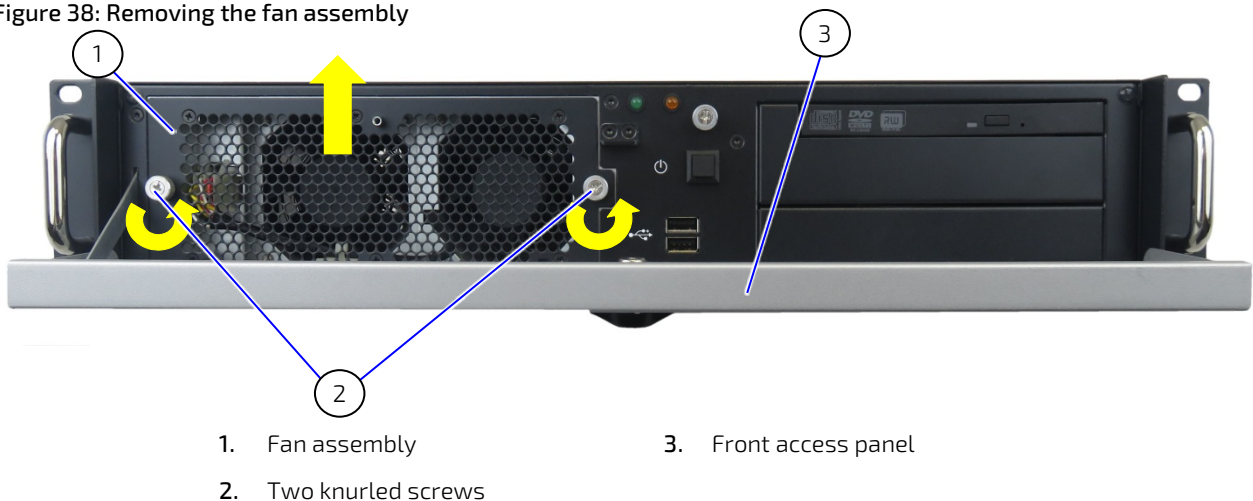


Figure 39: Fan compartment without fan assembly

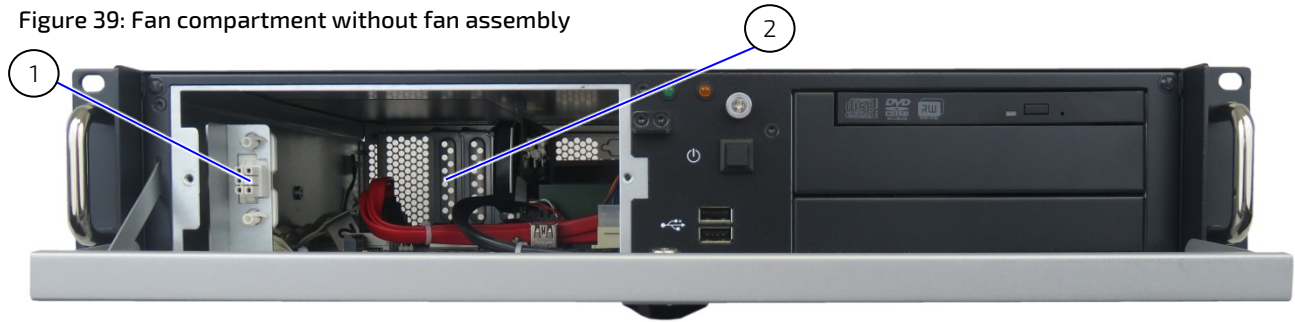

1. Fan power control socket

2. Fan compartment

5. To replace with a new functional fan assembly, align the fan assembly with the fan compartment.
6. Push the fan assembly carefully into the fan compartment until the fan assembly's control connector (Figure 12, pos2) is firmly inserted into the internal fan power control socket (Figure 39, pos. 1).
7. Secure by fasten the knurled screws of the fan assembly (Figure 38, pos. 2)
8. Insert the filter pad into the filter pad holder (both retained in step 1). Then reattach the filter pad holder to the front side of the fan assembly as described in the Chapter 10.1: Cleaning the Filter Pad (steps 7 to 9).

10.3. Replacing the Lithium Battery

⚠ WARNING

Danger of explosion when replaced with wrong battery type

Replace only with the same or equivalent type recommended by the manufacturer.
The lithium battery type must be UL recognized.



Do not dispose of lithium batteries in general trash collection. Dispose of the battery according to the local regulations dealing with the disposal of these special materials, (e.g. collecting points for dispose of batteries).

To replace the lithium battery on the mainboard, proceed as follows:


1. Switch off and disconnect the system from the mains power supply.
2. Open the cover, as described in the Chapter 7.1: Opening and Closing the Cover (steps 1-4).
3. If the system includes expansion cards, first remove the expansion cards and all corresponding connecting cables, to gain access to the lithium battery, see Chapter 7.2: Accessing Internal Components.
4. Remove the lithium battery from the holder by pulling the ejector spring outwards.
5. Place a new lithium battery in the battery holder.
6. Pay attention to the polarity of the battery.
7. Replace the lithium battery only with the same type of battery or with a type of battery recommended by Kontron.
8. Reinstall the removed expansion cards and reattach the connecting cables.
9. Close the cover, as described in the Chapter 7.1: Opening and Closing the Cover (step 5).

11/Technical Data

The main KISS 2U Short V3 technical specifications are listed within this chapter.

11.1. Block Diagram

Figure 40: Block diagram KISS 2U Short V3 CFL

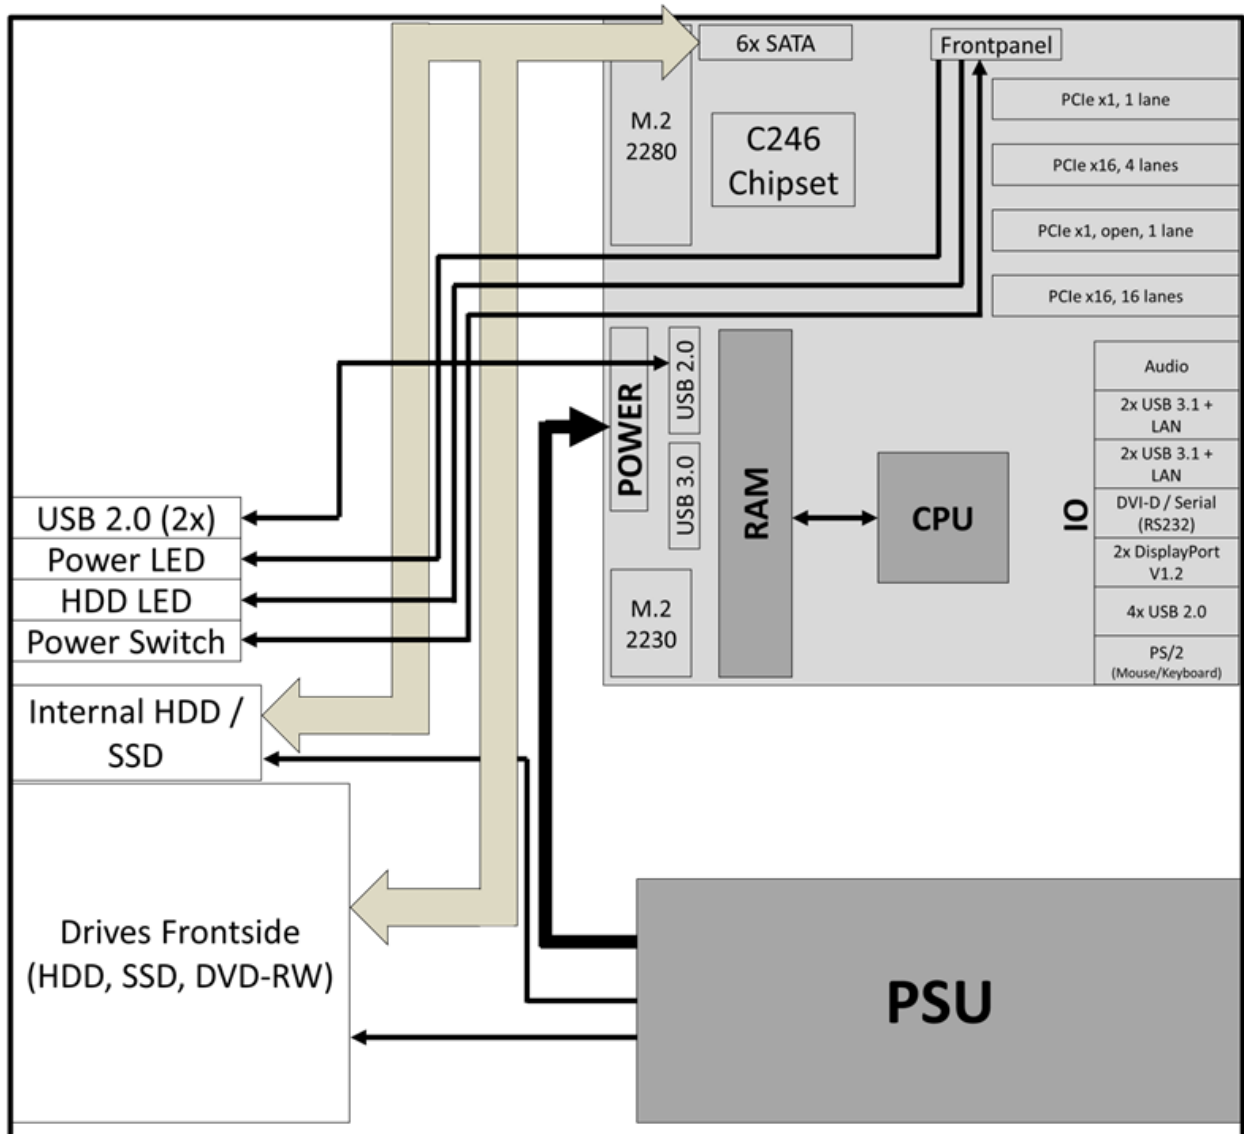

11.2. Technical Specification

KISS 2U Short V3 CFL		
Board		
Mainboard	D3641-S1 (micro-ATX)	
Processor Type	Intel® Core™ i7, i5, i3 series Intel® Xeon® E-21XX series	
Chipset	Intel® C246 Express	
Memory	4x DDR4 2666 UDIMM/ ECC support only with Xeon E Max. 64 GB (With 2x 4 GB, 2x 8 GB, 2x 16 GB, 4 x 16 GB)	
Front I/O		
USB	2x USB 2.0	
Drive bays		
Front Accessible	1x slim drive bay	for slim DVD drives
	1x 3.5"drive bay	for 2.5" drives
Internal	1x 3.5"drive bay	for 3.5" or 2.5" drives
Mass Storage Options		
Mass Storage Device	1x M.2 2280 (PCIe 4 lanes)	
Rear I/O		
USB	4x USB 2.0 2x USB 3.1 Gen1 2x USB 3.1 Gen2	
LAN	2x 1 Gb (1x i219LM & 1x i210AT) ▶ 10/100/1000 Mbit/s ▶ ATM 12.0 /vPro support ▶ Teaming support	
Display	1x DVI-D (1920 x 1200 @60 Hz) 2x Display Port V 1.2 (4096x2304 @60Hz)	
PS/2	Keyboard, Mouse	
Audio	1x Line in, 1x Line out 1x Microphone	
Serial Port	1x RS232	
	(Two optional additional serial ports cutouts on the rear side of the chassis)	
Expansion Slots		
Type	Low profile cards	Riser cards
Slots	4x PCIe slots (Low profile)	3x PCIe slots (full height, half length)
Mass Storage Options		
	1x M.2 2280 (PCIe 4 lanes)	
Fans		
System Fan (external)	2x fans included in removable fan assembly	
Internal Fans	1xPSU (integrated in PSU) 1xCPU (heatsink with fan)	

KISS 2U Short V3 CFL	
Software	
Operating System	MS Windows 10 IoT x64 Linux Ubuntu 1804 LTSB Desktop 64 bit
BIOS	AMI UEFI BIOS 5.x
Power	
PSU Type	Industrial AC/DC 1HE/FLEX PSU
Output Power	400 W
Input Voltage Range	100 VAC to 240 VAC ^[1]
Input Current	6 A to 3 A

^[1] The electrical specification is available on the type label.

11.3. Mechanical Specification

Dimension	KISS 2U Short V3 (with front access panel)	KISS 2U Short V3 (without front access panel)
Height	88 mm (3.46")	88 mm (3.46")
Width	482 mm (19")	430 mm (16.93")
Depth	368 mm (14.49")	350 mm (13.78")
Weight	7 kg (approx.)	
Chassis	Chassis: RAL 7021 Front panel: RAL 9022 – standard Front panel: RAL 5017 – option	



For a more detailed mechanical specification, visit Kontron's KISS 2U Short V3 Product Webpage and within the "Downloads" section, select "Mechanical Drawings".

11.4. Environmental Specification

Temperature	Description
Operating Temperature	0 °C to +50 °C +50 °F to +122 °F
Storage/Transit Temperature	-20 °C to +70 °C -4 °F to +158 °F
Relative Humidity (Operating/Storage/Transit)	10-93 % @ 40 °C, non condensing

Environment	Description
Max. Operation Altitude	5,000 m (16,400 ft)
Max. Storage / Transport Altitude	10,000 m (32,810 ft)
Operating Shock	15 g, 11 ms, duration
Storage / Transit Shock	30 g, 11 ms, duration

Environment	Description
Operating Vibration	10 – 150 Hz, 1.0 g, 3 axis
Storage / Transit Vibration	10 – 150 Hz, 2.0 g, 3 axis
Acoustic Noise	<= 35dBa
MTBF	50,000h @ 30°C (min. configuration)

11.5. Directives and Standards

The KISS 2U Short V3 complies with the following:


CE Directive		
Electrical Safety	General Product Safety Directive	2001/95/EC
	Low Voltage Directive	2014/35/EU
Electromagnetic Compatibility (EMC) Directive	2014/30/EU	
Restriction of Hazardous Substance Directive (RoHS II)	2011/65/EU	
Waste Electrical and Electronic Equipment Directive (WEEE)	2012/19/EU	

Electrical Safety	
Europe	EN 62368-1 : Audio/video, information and communication technology equipment – Safety requirements
CB Scheme	CB report created for IEC 62368-1

EMC	
Europe	EN 55024 : Information technology equipment - Immunity characteristics EN 55032 : Electromagnetic compatibility of multimedia equipment - Emission requirements EN6100-6-2 : Immunity for industrial environments EN6100-6-3 : Emission standard for residential, commercial and light-industrial environments

12/ Standard Interfaces- Pin Assignments


12.1. Keyboard Connector Pin Assignment

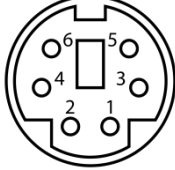Pin	Signal Name	Keyboard Connector
1	Data	
2	NC	
3	GND	
4	+5V ^[1]	
5	Clock	
6	Keyboard_On ^[2]	

^[1] fuse protected

^[2] low asserted pulse


12.2. PS/2 Mouse Connector Pin Assignment

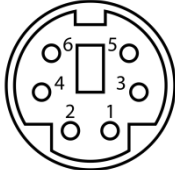Pin	Signal Name	PS/2 Connector
1	Data	
2	NC	
3	GND	
4	+5V ^[1]	
5	Clock	
6	Keyboard_On ^[2]	

^[1] fuse protected


^[2] low asserted pulse

12.3. USB 2.0 Pin Assignment

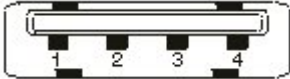Pin	Signal Name	USB 2.0 Connector
1	+5V ^[1]	
2	Data-	
3	Data+	
4	GND	


^[1] fuse protected

12.4. Display Port Pin Assignment

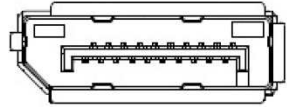Pin	Signal Name	Pin	Signal Name	DP (V1.2) Connector
1	TX0+	11	GND	
2	GND	12	TX3-	
3	TX0-	13	DVI dongle detect/ GND	
4	TX1+	14	GND / CEC for HDMI	
5	GND	15	AUX+	
6	TX1-	16	GND	
7	TX2+	17	AUX-	
8	GND	18	Hotplug detect	
9	TX2-	19	GND	
10	TX3+	20	+3.3 V ^[1]	


^[1] (fuse protected)

12.5. COM 1 Pin Assignment

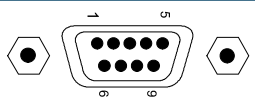Pin	RS232	RS422	RS 485 Half Duplex	RS 485 Full Duplex	COM Connector
1	DCD	Tx-	Data-	Tx-	
2	RxD	Tx+	Data+	Tx+	
3	TxD	Rx+		Rx+	
4	DTR	Rx-		Rx-	
5	GND	GND	GND	GND	
6	DSR				
7	RTS				
8	CTS				
9	RI				


12.6. DVI_D connector Pin Assignment

DVI-D Dual-link socket supports single-link only.

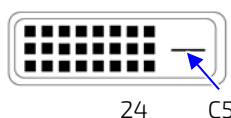
Pin	Signal Name	Pin	Signal Name	Pin	Signal Name	DVI-D Connector	
1	Data2-	9	Data1-	17	Data0-		
2	Data2+	10	Data1+	18	Data0+		
3	GND	11	GND	19	GND		
4	NC	12	NC	20	NC		
5	NC	13	NC	21	NC		
6	DDC Clock	14	+5 V ^[1]	22	GND		
7	DDC Data	15	GND	23	Clk +		
8	NC	16	Hot Plug Detect	24	Clk -		
						C5	GND

^[1] fuse protected

12.7. LAN Connector Pin Assignment

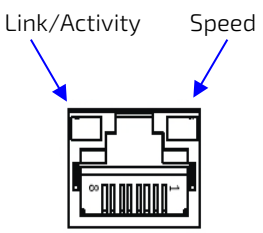Pin	Signal Name (10/100/1000)	Pin	Signal Name (10/100)	RJ45 (female) Connector
1	MX1+	1	TX+	
2	MX1-	2	TX-	
3	MX2+	3	RX+	
4	MX3+	4	NC	
5	MX3-	5	NC	
6	MX2-	6	RX-	
7	MX4+	7	NC	
8	MX4-	8	NC	

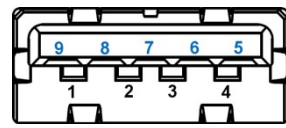


12.8. USB 3.0 and USB 3.1 (Gen1/Gen2) Type A Pin Assignment

Pin	Signal Name	Pin	Signal Name	USB 3.0/3.1 Type A Connector ^[2]
1	+5V ^[1]	5	USB3_RX-	
2	USB2_D-	6	USB3_RX+	
3	USB2_D+	7	GND	
4	GND	8	USB3_TX-	
		9	USB3_TX+	

^[1] fuse protected

^[2] USB 3.1 connectors provide separate signal lines for USB 3.0/3.1 and USB 2.0.

12.9. Audio Jack Pin Assignment

Jack	Signal	Audio Barrel Jack
A	Line-in	
B	Line-out	
C	Microphone-in	

13/ Technical Support

In order to request technical support, send an email with the information below to support@kontron.com

- ▶ Product name
- ▶ Product model number
- ▶ Serial number of the unit
- ▶ Brief problem description
- ▶ Complete company address

Customers with service portal access may maintain their tickets directly in the service portal.



The serial number can be found on the type label, placed on the bottom side of the chassis.

13.1. Returning Defective Merchandise

All equipment returned to Kontron must have a Return of Material Authorization (RMA) number assigned exclusively by Kontron. Kontron cannot be held responsible for any loss or damage caused to the equipment received without an RMA number. The buyer accepts responsibility for all freight charges for the return of goods to Kontron's designated facility. Kontron will pay the return freight charges back to the buyer's location in the event that the equipment is repaired or replaced within the stipulated warranty period.

Follow these steps before returning any product to Kontron.

1. Visit the RMA Information website:



Kontron's RMA Information website can be found at:

<http://www.kontron.com/support-and-services/support/rma-information>

2. Download the RMA Request sheet for Kontron Europe GmbH, Augsburg and fill out the form. Take care to include a short detailed description of the observed problem or failure and to include the product identification (product name, material number and serial-number). If more than one product is sent in a delivery. Fill out the above information in the RMA Request form for each product.
3. Send the completed RMA-sheet to the given fax or email address at Kontron Europe GmbH. Kontron Europe GmbH will provide an RMA-Number within one business day.
4. The goods for repair shall be packed properly for shipping, considering shock and ESD protection.



Goods returned to Kontron Europe GmbH in non-proper packaging are considered as customer caused faults and cannot be accepted as warranty repairs.

5. Add the RMA-sheet to the relevant delivery address and include the RMA-No with the shipping paperwork.

Sent the product to the following delivery address:

Kontron Europe GmbH
RMA Support
Lise-Meitner-Str. 3-5
86156 Augsburg
Germany

Phone: +49 (0) 821 4086-0
Fax: +49 (0) 821 4086 111
Email: service@kontron.com

6. After Kontron Europe GmbH receives the product, a confirmation of the order is sent via email to the address named on the RMA sheet.

14/ Storage and Transportation

14.1. Storage

If the product is not in use for an extended period time, disconnect the power plug from the mains power source .If it is necessary to store the product then re-pack the product as originally delivered to avoid damage. The storage facility must meet the products environmental storage requirements as stated within this user guide. Kontron recommends keeping the original packaging material for future storage or warranty shipments.

14.2. Transportation

To ship the product use the original packaging, designed to withstand impact and adequately protect the product. When packing or unpacking products always take shock and ESD protection into consideration and use an EOS/ESD safe working area.

15/ Warranty

Kontron defines product warranty in accordance with regional warranty definitions. Claims are at Kontron's discretion and limited to the defect being of a material nature. To find out more about the warranty conditions and the defined warranty period for your region, following the steps below:

1. Visit Kontron's Term and Conditions webpage.
<http://www.kontron.com/terms-and-conditions>
2. Click on your region's General Terms and Conditions of Sale.

15.1. Limitation/Exemption from Warranty Obligation

In general, Kontron shall not be required to honor the warranty, even during the warranty period, and shall be exempted from the statutory accident liability obligations in the event of damage caused to the product due to failure to observe the following:

- ▶ General safety instructions for IT equipment within this user guide
- ▶ Warning labels on the product and warning symbols within this user guide
- ▶ Information and hints within this user guide

Additionally, alterations or modifications to the product that are not explicitly approved by Kontron, described in this user guide, or received from Kontron Support as a special handling instruction will void your warranty.

Due to their limited service life, parts that by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the warranty beyond that provided by law.

Appendix A: List of Acronyms

Table 7: List of Acronyms

ATX	Advanced Technology eXtended
AMT	Active Management Technology
API	Application Program Interface
BIOS	Basic Input Output System
CLI	Command-Line Interface
COM	Communication port
CPU	Central Processing Unit
DC	Direct Current
DDR	Double Data Rate
DIMM	Dual Inline Memory Module
DP	Display port
DVD	Digital Video Device
DVI	Digital Video Interface
ECC	Error Checking and Correction
EMC	Electromagnetic Compatibility
ESD	ElectroStatic Discharge
GbE	Giga bit Ethernet
GPSD	General Product Safety Directive
GPU	Graphics Processing Unit
HD/HDD	Hard Disk /Drive
HPM	PICMG Hardware Platform Management specification family
iAMT	Intel® Active Management Technology
IOL	IPMI-Over-LAN
IOT	Internet of Things
IPMI	Intelligent Platform Management Interface
KCS	Keyboard Controller Style
KBD	Keyboard
KVM	Keyboard Video Mouse
LAN	Local Area Network
LED	Light-Emitting Diode
LVD	Low Voltage Directive
micro-ATX	Micro Advanced Technology eXtended

MEI	Management Engine Interface
NCSI	Network Communications Services Interface
OS	Operating System
PCB	Plastic Circuit Board
PCI	Peripheral Component Interconnect
PCIe	PCI-Express
PECI	Platform Environment Control Interface
PICMG®	PCI Industrial Computer Manufacturers Group
PSU	Power Supply Unit
RAM	Random Access memory
RDIMM	Registered DIMM
REACH	Registration, Evaluation, Authorization and restriction of Chemicals
RMA	Return of Material Authorization
RTC	Real Time Clock
SBC	Single Board Computer
SEL	System Event Log
ShMC	Shelf Management Controller
SMBus	System Management Bus
SMWI	System Monitor Web Interface
SOL	Serial Over LAN
SRAM	Synchronus Dynamic Random Access Memory
SSD	Solid State Drive
SSH	Secure Shell
TPM	Trusted Platform Module
UDIMM	Unregisterd DIMM
UEFI	Unified Extensible Firmware Interface
USB	Universal Serial Bus
WEEE	Waste Electrical and Electronic Equipment



About Kontron

Kontron is a global leader in embedded computing technology (ECT). As a part of technology group S&T, Kontron offers a combined portfolio of secure hardware, middleware and services for Internet of Things (IoT) and Industry 4.0 applications. With its standard products and tailor-made solutions based on highly reliable state-of-the-art embedded technologies, Kontron provides secure and innovative applications for a variety of industries. As a result, customers benefit from accelerated time-to-market, reduced total cost of ownership, product longevity and the best fully integrated applications overall. For more information, please visit: www.kontron.com



Global Headquarters

Kontron S&T AG

Lise-Meitner-Str. 3-5
86156 Augsburg
Germany
Tel.: +49 821 4086-0
Fax: +49 821 4086-111
info@kontron.com