


AT8030 CLI Reference Manual

AdvancedTCA

Manual ID
1.03 Revision Index
January 2009 Date of Issue

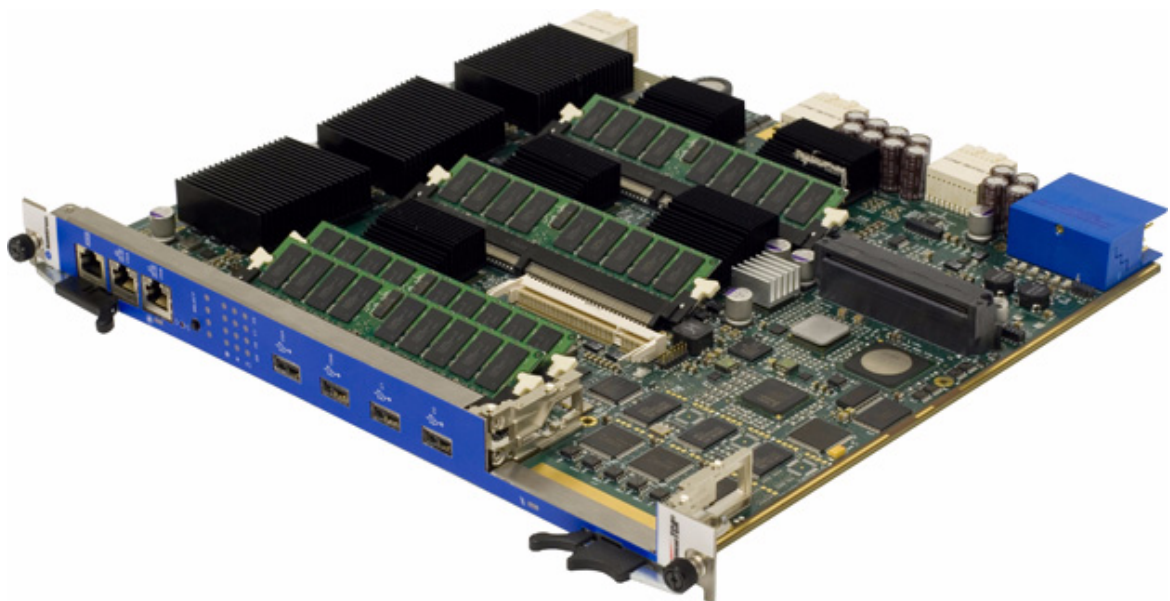



Revision History

Publication Title: AT8030 CLI Reference Manual		
ID Number:		
Rev. Index	Brief Description of Changes	Date of Issue
1.00	First Release for AT8030	31. Jan. 2008
1.01	Added some "copy"-command options	15. April 2008
1.02	Added "errcounter" - commands Changed product picture on first page Changed "show atca ekeying" - command	22. Aug. 2008
1.03	Fixed clear config and clear vlan definitions.	January 2009

Imprint

Kontron AG may be contacted via the following:

North America

Kontron Canada, Inc.
616 Curé Boivin
Boisbriand, Québec
J7G 2A7 Canada

Tel: (450) 437-5682
(800) 354-4223

Fax: (450) 437-8053

E-mail: support@ca.kontron.com

EMEA

Kontron Modular Computers GmbH
Sudetenstrasse 7
87600 Kaufbeuren
Germany

+49 (0) 8341 803 333


+49 (0) 8341 803 339

support-kom@kontron.com

For further information about Kontron AG, our products or services, please visit our Internet web site: www.kontron.com

Disclaimer

Copyright © 2009 Kontron AG. All rights reserved. All data is for information purposes only and not guaranteed for legal purposes. Information has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. Kontron and the Kontron logo and all other trademarks or registered trademarks are the property of their respective owners and are recognized. Specifications are subject to change without notice.





About This Book

This document describes command-line interface (CLI) commands you use to view and configure FASTPATH software. You can access the CLI by using a direct connection to the serial port or by using telnet or SSH over a remote network connection.

This document is for system administrators who configure and operate systems using FASTPATH software. It provides an understanding of the configuration options of the FASTPATH software.

Software engineers who integrate FASTPATH software into their hardware platform can also benefit from a description of the configuration options.

This document assumes that the reader has an understanding of the FASTPATH software base and has read the appropriate specification for the relevant networking device platform. It also assumes that the reader has a basic knowledge of Ethernet and networking concepts.

How to Use This Document

Chapter 1 “Using the Command-Line Interface” details the procedure to quickly become acquainted with the FASTPATH software.



Note: Refer to the release notes for the FASTPATH application level code. The release notes detail the platform specific functionality of the Switching, Routing, SNMP, Config, Management, and Bandwidth Provisioning packages. The suite of features supported by the FASTPATH packages are not available on all the platforms to which FASTPATH has been ported.

Proprietary Note

This document contains information proprietary to Kontron Modular Computers GmbH. It may not be copied or transmitted by any means, disclosed to others, or stored in any retrieval system or media without the prior written consent of Kontron Modular Computers GmbH or one of its authorized agents.

The information contained in this document is, to the best of our knowledge, entirely correct. However, Kontron Modular Computers GmbH cannot accept liability for any inaccuracies or the consequences thereof, or for any liability arising from the use or application of any circuit, product, or example shown in this document.

Kontron Modular Computers GmbH reserves the right to change, modify, or improve this document or the product described herein, as seen fit by Kontron Modular Computers GmbH without further notice.

Trademarks

Broadcom[®], the pulse logo, Connecting everything[®], the Connecting everything logo, and FASTPATH[®] are among the trademarks of Broadcom Corporation and/or its affiliates in the United States, certain other countries and/or the EU. Any other trademarks or trade names mentioned are the property of their respective owners.

Linux is a registered trademark of Linus Torvalds.

RedHat is a registered trademark of RedHat

Kontron Modular Computers GmbH and the Kontron Logo are trade marks owned by Kontron Modular Computers GmbH, Kaufbeuren (Germany). In addition, this document may include names, company logos and trademarks, which are registered trademarks and, therefore, proprietary to their respective owners.



Environmental Protection Statement

This product has been manufactured to satisfy environmental protection requirements where possible. Many of the components used (structural parts, printed circuit boards, connectors, batteries, etc.) are capable of being recycled.

Final disposition of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

Explanation of Symbols



CE Conformity

This symbol indicates that the product described in this manual is in compliance with all applied CE standards. Please refer also to the section “Applied Standards” in this manual.



Caution, Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60V) when touching products or parts of them. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.

Please refer also to the section “High Voltage Safety Instructions” on the following page.



Warning, ESD Sensitive Device!

This symbol and title inform that electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Please read also the section “Special Handling and Unpacking Instructions” on the following page.



Warning!

This symbol and title emphasize points which, if not fully understood and taken into consideration by the reader, may endanger your health and/or result in damage to your material.



Note...

This symbol and title emphasize aspects the reader should read through carefully for his or her own advantage.

For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

High Voltage Safety Instructions



Warning!

All operations on this device must be carried out by sufficiently skilled personnel only.

**Caution, Electric Shock!**

Indicates that you must enter a value in place of the brackets and text inside them. Before installing your new Kontron product into a system always ensure that your mains power is switched off. This applies also to the installation of piggybacks.

Serious electrical shock hazards can exist during all installation, repair and maintenance operations with this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing work.

Special Handling and Unpacking Instructions**ESD Sensitive Device!**

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory back-up, ensure that the board is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the board.

General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the device, which are not explicitly approved by Kontron Modular Computers GmbH and described in this manual or received from Kontron's Technical Support as a special handling instruction, will void your warranty.

This device should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This applies also to the operational temperature range of the specific board version, which must not be exceeded. If batteries are present their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, please follow only the instructions supplied by the present manual.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the board please re-pack it as nearly as possible in the manner in which it was delivered.

Special care is necessary when handling or unpacking the product. Please, consult the special handling and unpacking instruction on the previous page of this manual.

Two Year Warranty

Kontron Modular Computers GmbH grants the original purchaser of Kontron's products a *two year limited hardware warranty* as described in the following. However, no other warranties that may be granted or implied by anyone on behalf of Kontron are valid unless the consumer has the express written consent of Kontron Modular Computers GmbH.



Kontron Modular Computers GmbH warrants their own products, excluding software, to be free from manufacturing and material defects for a period of 24 consecutive months from the date of purchase. This warranty is not transferable nor extendible to cover any other users or long-term storage of the product. It does not cover products which have been modified, altered or repaired by any other party than Kontron Modular Computers GmbH or their authorized agents. Furthermore, any product which has been, or is suspected of being damaged as a result of negligence, improper use, incorrect handling, servicing or maintenance, or which has been damaged as a result of excessive current/voltage or temperature, or which has had its serial number(s), any other markings or parts thereof altered, defaced or removed will also be excluded from this warranty.

If the customer's eligibility for warranty has not been voided, in the event of any claim, he may return the product at the earliest possible convenience to the original place of purchase, together with a copy of the original document of purchase, a full description of the application the product is used on and a description of the defect. Pack the product in such a way as to ensure safe transportation (see our safety instructions).

Kontron provides for repair or replacement of any part, assembly or sub-assembly at their own discretion, or to refund the original cost of purchase, if appropriate. In the event of repair, refunding or replacement of any part, the ownership of the removed or replaced parts reverts to Kontron Modular Computers GmbH, and the remaining part of the original guarantee, or any new guarantee to cover the repaired or replaced items, will be transferred to cover the new or repaired items. Any extensions to the original guarantee are considered gestures of goodwill, and will be defined in the "Repair Report" issued by Kontron with the repaired or replaced item.

Kontron Modular Computers GmbH will not accept liability for any further claims resulting directly or indirectly from any warranty claim, other than the above specified repair, replacement or refunding. In particular, all claims for damage to any system or process in which the product was employed, or any loss incurred as a result of the product not functioning at any given time, are excluded. The extent of Kontron Modular Computers GmbH liability to the customer shall not exceed the original purchase price of the item for which the claim exists.

Kontron Modular Computers GmbH issues no warranty or representation, either explicit or implicit, with respect to its products' reliability, fitness, quality, marketability or ability to fulfil any particular application or purpose. As a result, the products are sold "as is," and the responsibility to ensure their suitability for any given task remains that of the purchaser. In no event will Kontron be liable for direct, indirect or consequential damages resulting from the use of our hardware or software products, or documentation, even if Kontron were advised of the possibility of such claims prior to the purchase of the product or during any period since the date of its purchase.

Please remember that no Kontron Modular Computers GmbH employee, dealer or agent is authorized to make any modification or addition to the above specified terms, either verbally or in any other form, written or electronically transmitted, without the company's consent.



Revision History ii
Imprint ii
Disclaimer ii
About This Book iii
Proprietary Note iii
Trademarks iii
Environmental Protection Statement iv
Explanation of Symbols iv
For Your Safety iv
Two Year Warranty v

Chapter 1

1. Using the Command-Line Interface 1 - 2
 1.1 Command Syntax 1 - 2
 1.2 Command Conventions 1 - 2
 1.3 Common Parameter Values 1 - 3
 1.4 Slot/Port Naming Convention 1 - 4
 1.5 Using the “No” Form of a Command 1 - 4
 1.6 FASTPATH Modules 1 - 4
 1.7 Command Modes 1 - 5
 1.8 Command Completion and Abbreviation 1 - 7
 1.9 CLI Error Messages 1 - 7
 1.10 CLI Line-Editing Conventions 1 - 7
 1.11 Using CLI Help 1 - 8
 1.12 Accessing the CLI 1 - 8

Chapter 2

2. Switching Commands 2 - 2
 2.1 Port Configuration Commands 2 - 2
 2.1.1 interface 2 - 2
 2.1.2 auto-negotiate 2 - 3
 2.1.3 auto-negotiate all 2 - 3



2.1.4	advertise speed	2 - 3
2.1.5	show advertise speed	2 - 4
2.1.6	description	2 - 4
2.1.7	mtu	2 - 4
2.1.8	shutdown	2 - 4
2.1.9	shutdown all	2 - 5
2.1.10	speed	2 - 5
2.1.11	speed all	2 - 5
2.1.12	show port	2 - 6
2.1.13	show port protocol	2 - 6
2.2	Spanning Tree Protocol (STP) Commands	2 - 7
2.2.1	spanning-tree	2 - 7
2.2.2	spanning-tree bpdufilter	2 - 7
2.2.3	spanning-tree bpdufilter default	2 - 7
2.2.4	spanning-tree bpduflood	2 - 8
2.2.5	spanning-tree bpduguard	2 - 8
2.2.6	spanning-tree bpdumigrationcheck	2 - 9
2.2.7	spanning-tree configuration name	2 - 9
2.2.8	spanning-tree configuration revision	2 - 9
2.2.9	spanning-tree edgeport	2 - 9
2.2.10	spanning-tree forward-time	2 - 10
2.2.11	spanning-tree hello-time	2 - 11
2.2.12	spanning-tree max-age	2 - 11
2.2.13	spanning-tree max-hops	2 - 11
2.2.14	spanning-tree mst	2 - 12
2.2.15	spanning-tree mst instance	2 - 13
2.2.16	spanning-tree mst priority	2 - 13
2.2.17	spanning-tree mst vlan	2 - 13
2.2.18	spanning-tree port mode	2 - 14
2.2.19	spanning-tree port mode all	2 - 14
2.2.20	spanning-tree rootguard	2 - 14
2.2.21	show spanning-tree	2 - 15
2.2.22	show spanning-tree brief	2 - 16
2.2.23	show spanning-tree interface	2 - 16
2.2.24	show spanning-tree mst port detailed	2 - 17
2.2.25	show spanning-tree mst port summary	2 - 18
2.2.26	show spanning-tree mst summary	2 - 18
2.2.27	show spanning-tree summary	2 - 19
2.2.28	show spanning-tree vlan	2 - 19
2.3	VLAN Commands	2 - 19
2.3.1	vlan database	2 - 20
2.3.2	network mgmt_vlan	2 - 20
2.3.3	vlan	2 - 20
2.3.4	vlan acceptframe	2 - 20
2.3.5	vlan ingressfilter	2 - 21
2.3.6	vlan makestatic	2 - 21



2.3.7	vlan name	2 - 21
2.3.8	vlan participation	2 - 22
2.3.9	vlan participation all	2 - 22
2.3.10	vlan port acceptframe all	2 - 22
2.3.11	vlan port ingressfilter all	2 - 23
2.3.12	vlan port pvid all	2 - 23
2.3.13	vlan port tagging all	2 - 24
2.3.14	vlan protocol group	2 - 24
2.3.15	vlan protocol group add protocol	2 - 24
2.3.16	vlan protocol group remove	2 - 25
2.3.17	protocol group	2 - 25
2.3.18	protocol vlan group	2 - 25
2.3.19	protocol vlan group all	2 - 25
2.3.20	vlan pvid	2 - 26
2.3.21	vlan tagging	2 - 26
2.3.22	vlan association subnet	2 - 26
2.3.23	vlan association mac	2 - 27
2.3.24	show vlan	2 - 27
2.3.25	show vlan brief	2 - 28
2.3.26	show vlan port	2 - 28
2.3.27	show vlan association subnet	2 - 29
2.3.28	show vlan association mac	2 - 29
2.4	Double VLAN Commands	2 - 29
2.4.1	dvlan-tunnel ethertype	2 - 29
2.4.2	mode dot1q-tunnel	2 - 30
2.4.3	mode dvlan-tunnel	2 - 30
2.4.4	show dot1q-tunnel	2 - 30
2.4.5	show dvlan-tunnel	2 - 31
2.5	Voice VLAN Commands	2 - 31
2.5.1	voice vlan (Global Config)	2 - 31
2.5.2	voice vlan (Interface Config)	2 - 32
2.5.3	voice vlan data priority	2 - 32
2.5.4	show voice vlan	2 - 32
2.6	Provisioning (IEEE 802.1p) Commands	2 - 33
2.6.1	vlan port priority all	2 - 33
2.6.2	vlan priority	2 - 33
2.7	Protected Ports Commands	2 - 33
2.7.1	switchport protected (Global Config)	2 - 34
2.7.2	switchport protected (Interface Config)	2 - 34
2.7.3	show switchport protected	2 - 35
2.7.4	show interfaces switchport	2 - 35
2.8	GARP Commands	2 - 35
2.8.1	set garp timer join	2 - 35
2.8.2	set garp timer leave	2 - 36
2.8.3	set garp timer leaveall	2 - 36

2.8.4	show garp	2 - 37
2.9	GVRP Commands	2 - 37
2.9.1	set gvrp adminmode	2 - 37
2.9.2	set gvrp interfacemode	2 - 37
2.9.3	show gvrp configuration	2 - 38
2.10	GMRP Commands	2 - 38
2.10.1	set gmrp adminmode	2 - 39
2.10.2	set gmrp interfacemode	2 - 39
2.10.3	show gmrp configuration	2 - 39
2.10.4	show mac-address-table gmrp	2 - 40
2.11	Port-Based Network Access Control Commands	2 - 40
2.11.1	authentication login	2 - 40
2.11.2	clear dot1x statistics	2 - 41
2.11.3	clear radius statistics	2 - 41
2.11.4	dot1x default-login	2 - 41
2.11.5	dot1x guest-vlan	2 - 42
2.11.6	dot1x guest-vlan supplicant	2 - 42
2.11.7	dot1x initialize	2 - 42
2.11.8	dot1x login	2 - 43
2.11.9	dot1x max-req	2 - 43
2.11.10	dot1x port-control	2 - 43
2.11.11	dot1x port-control all	2 - 44
2.11.12	dot1x re-authenticate	2 - 44
2.11.13	dot1x re-authentication	2 - 44
2.11.14	dot1x system-auth-control	2 - 44
2.11.15	dot1x timeout	2 - 45
2.11.16	dot1x user	2 - 46
2.11.17	users defaultlogin	2 - 46
2.11.18	users login	2 - 46
2.11.19	show authentication	2 - 46
2.11.20	show authentication users	2 - 47
2.11.21	show dot1x	2 - 47
2.11.22	show dot1x users	2 - 49
2.11.23	show users authentication	2 - 49
2.12	Storm-Control Commands	2 - 50
2.12.1	storm-control broadcast	2 - 50
2.12.2	storm-control broadcast level	2 - 50
2.12.3	storm-control broadcast all	2 - 50
2.12.4	storm-control broadcast all level	2 - 51
2.12.5	storm-control multicast	2 - 51
2.12.6	storm-control multicast level	2 - 52
2.12.7	storm-control multicast all	2 - 52
2.12.8	storm-control multicast all level	2 - 52
2.12.9	storm-control unicast	2 - 53
2.12.10	storm-control unicast level	2 - 53



2.12.11 storm-control unicast all	2 - 54
2.12.12 storm-control unicast all level	2 - 54
2.12.13 storm-control flowcontrol	2 - 54
2.12.14 show storm-control	2 - 55
2.13 Port-Channel/LAG (802.3ad) Commands	2 - 55
2.13.1 port-channel	2 - 56
2.13.2 addport	2 - 56
2.13.3 deleteport (Interface Config)	2 - 56
2.13.4 deleteport (Global Config)	2 - 56
2.13.5 lacp admin key	2 - 57
2.13.6 lacp collector max-delay	2 - 57
2.13.7 lacp actor admin	2 - 57
2.13.8 lacp actor admin key	2 - 58
2.13.9 lacp actor admin state	2 - 58
2.13.10 lacp actor admin state individual	2 - 58
2.13.11 lacp actor admin state longtimeout	2 - 59
2.13.12 lacp actor admin state passive	2 - 59
2.13.13 lacp actor port	2 - 60
2.13.14 lacp actor port priority	2 - 60
2.13.15 lacp actor system priority	2 - 60
2.13.16 lacp partner admin key	2 - 60
2.13.17 lacp partner admin state	2 - 61
2.13.18 lacp partner admin state individual	2 - 61
2.13.19 lacp partner admin state longtimeout	2 - 62
2.13.20 lacp partner admin state passive	2 - 62
2.13.21 lacp partner port id	2 - 62
2.13.22 lacp partner port priority	2 - 63
2.13.23 lacp partner system-id	2 - 63
2.13.24 lacp partner system priority	2 - 64
2.13.25 port-channel static	2 - 64
2.13.26 port lacpmode	2 - 64
2.13.27 port lacpmode all	2 - 65
2.13.28 port lacptimeout (Interface Config)	2 - 65
2.13.29 port lacptimeout (Global Config)	2 - 65
2.13.30 port-channel adminmode	2 - 66
2.13.31 port-channel linktrap	2 - 66
2.13.32 port-channel name	2 - 67
2.13.33 port-channel system priority	2 - 67
2.13.34 show lacp actor	2 - 67
2.13.35 show lacp partner	2 - 67
2.13.36 show port-channel brief	2 - 68
2.13.37 show port-channel	2 - 68
2.13.38 show port-channel system priority	2 - 69
2.14 Port Mirroring	2 - 69
2.14.1 monitor session	2 - 69
2.14.2 no monitor	2 - 70

2.14.3	show monitor session	2 - 70
2.15	Static MAC Filtering	2 - 70
2.15.1	macfilter	2 - 70
2.15.2	macfilter adddest	2 - 71
2.15.3	macfilter adddest all	2 - 72
2.15.4	macfilter addsrc	2 - 72
2.15.5	macfilter addsrc all	2 - 72
2.15.6	show mac-address-table static	2 - 73
2.15.7	show mac-address-table staticfiltering	2 - 73
2.16	IGMP Snooping Configuration Commands	2 - 74
2.16.1	set igmp	2 - 74
2.16.2	set igmp interfacemode	2 - 74
2.16.3	set igmp fast-leave	2 - 75
2.16.4	set igmp groupmembership-interval	2 - 75
2.16.5	set igmp maxresponse	2 - 76
2.16.6	set igmp mcrtrexpiretime	2 - 77
2.16.7	set igmp mrouter	2 - 77
2.16.8	set igmp mrouter interface	2 - 77
2.16.9	show igmpsnooping	2 - 78
2.16.10	show igmpsnooping mrouter interface	2 - 79
2.16.11	show igmpsnooping mrouter vlan	2 - 79
2.16.12	show mac-address-table igmpsnooping	2 - 79
2.17	IGMP Snooping Querier Commands	2 - 80
2.17.1	set igmp querier	2 - 80
2.17.2	set igmp querier query-interval	2 - 80
2.17.3	set igmp querier timer expiry	2 - 81
2.17.4	set igmp querier version	2 - 81
2.17.5	set igmp querier election participate	2 - 81
2.17.6	show igmpsnooping querier	2 - 82
2.18	Port Security Commands	2 - 83
2.18.1	port-security	2 - 83
2.18.2	port-security max-dynamic	2 - 83
2.18.3	port-security max-static	2 - 84
2.18.4	port-security mac-address	2 - 84
2.18.5	port-security mac-address move	2 - 84
2.18.6	show port-security	2 - 84
2.18.7	show port-security dynamic	2 - 85
2.18.8	show port-security static	2 - 85
2.18.9	show port-security violation	2 - 85
2.19	LLDP (802.1AB) Commands	2 - 85
2.19.1	lldp transmit	2 - 86
2.19.2	lldp receive	2 - 86
2.19.3	lldp timers	2 - 86
2.19.4	lldp transmit-tlv	2 - 87
2.19.5	lldp transmit-mgmt	2 - 87



2.19.6	lldp notification	2 - 87
2.19.7	lldp notification-interval	2 - 88
2.19.8	clear lldp statistics	2 - 88
2.19.9	clear lldp remote-data	2 - 88
2.19.10	show lldp	2 - 88
2.19.11	show lldp interface	2 - 89
2.19.12	show lldp statistics	2 - 89
2.19.13	show lldp remote-device	2 - 90
2.19.14	show lldp remote-device detail	2 - 90
2.19.15	show lldp local-device	2 - 91
2.19.16	show lldp local-device detail	2 - 91
2.20	LLDP-MED Commands	2 - 92
2.20.1	lldp med	2 - 92
2.20.2	lldp med confignotification	2 - 92
2.20.3	lldp med transmit-tlv	2 - 92
2.20.4	lldp med all	2 - 93
2.20.5	lldp med confignotification all	2 - 93
2.20.6	lldp med faststartrepeatcount	2 - 93
2.20.7	lldp med transmit-tlv all	2 - 94
2.20.8	show lldp med	2 - 94
2.20.9	show lldp med interface	2 - 94
2.20.10	show lldp med local-device detail	2 - 95
2.20.11	show lldp med remote-device	2 - 96
2.20.12	show lldp med remote-device detail	2 - 97
2.21	Denial of Service Commands	2 - 98
2.21.1	dos-control sipdip	2 - 98
2.21.2	dos-control firstfrag	2 - 98
2.21.3	dos-control tcpfrag	2 - 99
2.21.4	dos-control tcpflag	2 - 99
2.21.5	dos-control l4port	2 - 100
2.21.6	dos-control icmp	2 - 100
2.21.7	show dos-control	2 - 100
2.22	MAC Database Commands	2 - 101
2.22.1	bridge aging-time	2 - 101
2.22.2	show forwardingdb agetime	2 - 101
2.22.3	show mac-address-table multicast	2 - 102
2.22.4	show mac-address-table stats	2 - 102

Chapter **3**

3.	Quality of Service (QoS) Commands	3 - 2
3.1	Class of Service (CoS) Commands	3 - 2
3.1.1	classofservice dot1p-mapping	3 - 2

3.1.2	classofservice ip-dscp-mapping	3 - 3
3.1.3	classofservice trust	3 - 3
3.1.4	cos-queue min-bandwidth	3 - 3
3.1.5	cos-queue strict	3 - 4
3.1.6	traffic-shape	3 - 4
3.1.7	show classofservice dot1p-mapping	3 - 4
3.1.8	show classofservice ip-precedence-mapping	3 - 5
3.1.9	show classofservice ip-dscp-mapping	3 - 5
3.1.10	show classofservice trust	3 - 5
3.1.11	show interfaces cos-queue	3 - 6
3.2	show interface cos-counter	3 - 6
3.3	show packet-memory	3 - 6
3.3.1	packet-memory (configure)	3 - 7
3.3.2	packet-memory (interface)	3 - 7
3.3.3	show protection-group	3 - 7
3.3.4	protection-group (configure)	3 - 7
3.3.5	protection-group (interface)	3 - 8
3.4	Differentiated Services (DiffServ) Commands	3 - 8
3.4.1	diffserv	3 - 9
3.5	DiffServ Class Commands	3 - 9
3.5.1	class-map	3 - 10
3.5.2	class-map rename	3 - 10
3.5.3	match ethertype	3 - 10
3.5.4	match any	3 - 11
3.5.5	match class-map	3 - 11
3.5.6	match cos	3 - 12
3.5.7	match secondary-cos	3 - 12
3.5.8	match destination-address mac	3 - 12
3.5.9	match dstip	3 - 13
3.5.10	match dstip6	3 - 13
3.5.11	match dstl4port	3 - 13
3.5.12	match ip dscp	3 - 13
3.5.13	match ip precedence	3 - 14
3.5.14	match ip tos	3 - 14
3.5.15	match protocol	3 - 15
3.5.16	match source-address mac	3 - 15
3.5.17	match srcip	3 - 15
3.5.18	match srcip6	3 - 16
3.5.19	match srcl4port	3 - 16
3.5.20	match vlan	3 - 16
3.5.21	match secondary-vlan	3 - 16
3.6	DiffServ Policy Commands	3 - 17
3.6.1	assign-queue	3 - 17
3.6.2	drop	3 - 17
3.6.3	mirror	3 - 17

3.6.4	redirect	3 - 18
3.6.5	conform-color	3 - 18
3.6.6	class	3 - 18
3.6.7	mark cos	3 - 19
3.6.8	mark ip-precedence	3 - 19
3.6.9	police-simple	3 - 20
3.6.10	policy-map	3 - 20
3.6.11	policy-map rename	3 - 21
3.7	DiffServ Service Commands	3 - 21
3.7.1	service-policy	3 - 21
3.8	DiffServ Show Commands	3 - 22
3.8.1	show class-map	3 - 22
3.8.2	show diffserv	3 - 23
3.8.3	show policy-map	3 - 23
3.8.4	show diffserv service	3 - 25
3.8.5	show diffserv service brief	3 - 25
3.8.6	show policy-map interface	3 - 25
3.8.7	show service-policy	3 - 26
3.9	MAC Access Control List (ACL) Commands	3 - 26
3.9.1	mac access-list extended	3 - 27
3.9.2	mac access-list extended rename	3 - 27
3.9.3	{deny permit}	3 - 27
3.9.4	mac access-group	3 - 29
3.9.5	show mac access-lists	3 - 29
3.10	IP Access Control List (ACL) Commands	3 - 30
3.10.1	access-list	3 - 30
3.10.2	ip access-group	3 - 31
3.10.3	acl-trapflags	3 - 32
3.10.4	show acl-traptimer	3 - 32
3.10.5	acl-traptimer	3 - 32
3.10.6	show ip access-lists	3 - 33
3.10.7	show access-lists	3 - 34
3.11	IPv6 Access Control List (ACL) Commands	3 - 34
3.11.1	ipv6 access-list	3 - 34
3.11.2	ipv6 access-list rename	3 - 35
3.11.3	{deny permit} (IPv6)	3 - 35
3.11.4	ipv6 traffic-filter	3 - 36
3.11.5	show ipv6 access-lists	3 - 36

Chapter 4

4.	Utility Commands	4 - 2
----	------------------------	-------

4.1	Commands for update and startup Configuration	4 - 2
4.1.1	download ipmifw	4 - 2
4.1.2	download frudata	4 - 2
4.1.3	download fwum	4 - 3
4.1.4	download amcipmifw	4 - 3
4.2	Dual Image Commands	4 - 3
4.2.1	delete	4 - 3
4.2.2	boot system	4 - 3
4.2.3	show bootvar	4 - 4
4.2.4	filedescr	4 - 4
4.3	ATCA commands	4 - 4
4.3.1	set board sensor threshold	4 - 4
4.3.2	set board device-id	4 - 4
4.3.3	show atca ekeying	4 - 4
4.3.4	ekeying (interface)	4 - 5
4.3.5	ekeying all (configure)	4 - 5
4.4	System Information and Statistics Commands	4 - 5
4.4.1	show arp switch	4 - 5
4.4.2	show eventlog	4 - 6
4.4.3	show hardware	4 - 6
4.4.4	show version	4 - 6
4.4.5	show interface	4 - 7
4.4.6	show interface ethernet	4 - 8
4.4.7	show mac-addr-table	4 - 14
4.4.8	show running-config	4 - 15
4.4.9	show sysinfo	4 - 16
4.4.10	show tech-support	4 - 16
4.4.11	terminal length	4 - 17
4.4.12	show terminal length	4 - 17
4.4.13	show boardinfo post-status	4 - 17
4.4.14	show boardinfo sensors	4 - 17
4.4.15	show boardinfo event-log	4 - 18
4.4.16	show boardinfo update-status	4 - 18
4.4.17	show boardinfo version	4 - 18
4.4.18	show boardinfo address	4 - 19
4.4.19	show boardinfo fru	4 - 19
4.4.20	show boardinfo ipmidev	4 - 19
4.4.21	show boardinfo amc connection	4 - 19
4.4.22	show boardinfo amc fru	4 - 19
4.4.23	show boardinfo amc ipmidev	4 - 19
4.5	Logging Commands	4 - 20
4.5.1	logging buffered	4 - 20
4.5.2	logging buffered wrap	4 - 20
4.5.3	logging cli-command	4 - 20
4.5.4	logging console	4 - 21

4.5.5	logging host	4 - 21
4.5.6	logging host remove	4 - 21
4.5.7	logging port	4 - 21
4.5.8	logging syslog	4 - 22
4.5.9	show logging	4 - 22
4.5.10	show logging buffered	4 - 23
4.5.11	show logging hosts	4 - 23
4.5.12	show logging traplogs	4 - 23
4.5.13	clear board event-log	4 - 24
4.5.14	show logging backtrace	4 - 24
4.5.15	show logging errcounter	4 - 24
4.5.16	clear errcounter	4 - 24
4.6	System Utility and Clear Commands	4 - 24
4.6.1	traceroute	4 - 25
4.6.2	clear config	4 - 26
4.6.3	clear counters	4 - 26
4.6.4	clear igmpsnooping	4 - 26
4.6.5	clear pass	4 - 26
4.6.6	clear port-channel	4 - 26
4.6.7	clear traplog	4 - 27
4.6.8	clear vlan	4 - 27
4.6.9	enable passwd	4 - 27
4.6.10	enable passwd encrypted <password>	4 - 27
4.6.11	logout	4 - 27
4.6.12	ping	4 - 27
4.6.13	quit	4 - 29
4.6.14	reload	4 - 29
4.6.15	reload fast	4 - 29
4.6.16	copy	4 - 29
4.6.17	delete nvram:extra-profile	4 - 31
4.6.18	set bootstopkey	4 - 31
4.7	Keying for Advanced Features	4 - 31
4.7.1	license advanced	4 - 31
4.7.2	no license advanced	4 - 32
4.7.3	show key-features	4 - 32
4.8	Simple Network Time Protocol (SNTP) Commands	4 - 32
4.8.1	sntp broadcast client poll-interval	4 - 32
4.8.2	sntp client mode	4 - 32
4.8.3	sntp client port	4 - 33
4.8.4	sntp unicast client poll-interval	4 - 33
4.8.5	sntp unicast client poll-timeout	4 - 33
4.8.6	sntp unicast client poll-retry	4 - 34
4.8.7	sntp multicast client poll-interval	4 - 34
4.8.8	sntp server	4 - 34
4.8.9	show sntp	4 - 35

4.8.10	show snmp client	4 - 35
4.8.11	show snmp server	4 - 35
4.9	DHCP Server Commands	4 - 36
4.9.1	ip dhcp pool	4 - 36
4.9.2	client-identifier	4 - 37
4.9.3	client-name	4 - 37
4.9.4	default-router	4 - 37
4.9.5	dns-server	4 - 38
4.9.6	hardware-address	4 - 38
4.9.7	host	4 - 38
4.9.8	lease	4 - 39
4.9.9	network (DHCP Pool Config)	4 - 39
4.9.10	bootfile	4 - 39
4.9.11	domain-name	4 - 40
4.9.12	netbios-name-server	4 - 40
4.9.13	netbios-node-type	4 - 40
4.9.14	next-server	4 - 41
4.9.15	option	4 - 41
4.9.16	ip dhcp excluded-address	4 - 42
4.9.17	ip dhcp ping packets	4 - 42
4.9.18	service dhcp	4 - 42
4.9.19	ip dhcp bootp automatic	4 - 43
4.9.20	ip dhcp conflict logging	4 - 43
4.9.21	clear ip dhcp binding	4 - 43
4.9.22	clear ip dhcp server statistics	4 - 43
4.9.23	clear ip dhcp conflict	4 - 44
4.9.24	show ip dhcp binding	4 - 44
4.9.25	show ip dhcp global configuration	4 - 44
4.9.26	show ip dhcp pool configuration	4 - 44
4.9.27	show ip dhcp server statistics	4 - 45
4.9.28	show ip dhcp conflict	4 - 46
4.10	DHCP Filtering	4 - 46
4.10.1	ip dhcp filtering	4 - 46
4.10.2	ip dhcp filtering trust	4 - 47
4.10.3	show ip dhcp filtering	4 - 47
4.11	DNS Client Commands	4 - 47
4.11.1	ip domain lookup	4 - 47
4.11.2	ip domain name	4 - 48
4.11.3	ip domain list	4 - 48
4.11.4	ip name server	4 - 48
4.11.5	ip host	4 - 49
4.11.6	ip domain retry	4 - 49
4.11.7	ip domain timeout	4 - 49
4.11.8	clear host	4 - 50
4.11.9	show hosts	4 - 50



- 4.12 Serviceability Packet Tracing Commands 4 - 51
 - 4.12.1 debug console 4 - 51
 - 4.12.2 debug clear 4 - 51
 - 4.12.3 debug spanning-tree bpd transmit 4 - 52
 - 4.12.4 debug spanning-tree bpd receive 4 - 52
 - 4.12.5 debug spanning-tree bpd 4 - 53
 - 4.12.6 debug igmpsnooping packet transmit 4 - 53
 - 4.12.7 debug igmpsnooping packet receive 4 - 54
 - 4.12.8 debug igmpsnooping packet 4 - 55
 - 4.12.9 debug ping packet 4 - 55
 - 4.12.10 debug lacp packet 4 - 56
 - 4.12.11 logging persistent 4 - 56

Chapter 5

- 5. Management Commands 5 - 2
 - 5.1 Network Interface Commands 5 - 2
 - 5.1.1 enable (Privileged EXEC access) 5 - 2
 - 5.1.2 serviceport ip 5 - 2
 - 5.1.3 serviceport protocol 5 - 3
 - 5.1.4 network parms 5 - 3
 - 5.1.5 network protocol 5 - 3
 - 5.1.6 network mac-address 5 - 3
 - 5.1.7 network mac-type 5 - 4
 - 5.1.8 show network 5 - 4
 - 5.1.9 show serviceport 5 - 5
 - 5.2 Console Port Access Commands 5 - 5
 - 5.2.1 configuration 5 - 6
 - 5.2.2 lineconfig 5 - 6
 - 5.2.3 serial baudrate 5 - 6
 - 5.2.4 serial timeout 5 - 6
 - 5.2.5 show serial 5 - 7
 - 5.3 Telnet Commands 5 - 7
 - 5.3.1 ip telnet server enable 5 - 7
 - 5.3.2 telnet 5 - 7
 - 5.3.3 transport input telnet 5 - 8
 - 5.3.4 transport output telnet 5 - 8
 - 5.3.5 session-limit 5 - 9
 - 5.3.6 session-timeout 5 - 9
 - 5.3.7 telnetcon maxsessions 5 - 9
 - 5.3.8 telnetcon timeout 5 - 10
 - 5.3.9 show telnet 5 - 10
 - 5.3.10 show telnetcon 5 - 10

5.4	Secure Shell (SSH) Commands	5 - 11
5.4.1	ip ssh	5 - 11
5.4.2	ip ssh protocol	5 - 11
5.4.3	ip ssh server enable	5 - 11
5.4.4	sshcon maxsessions	5 - 12
5.4.5	sshcon timeout	5 - 12
5.4.6	show ip ssh	5 - 12
5.5	Management Security Commands	5 - 13
5.5.1	crypto certificate generate	5 - 13
5.5.2	crypto key generate rsa	5 - 13
5.5.3	crypto key generate dsa	5 - 14
5.6	Access Commands	5 - 14
5.6.1	disconnect	5 - 14
5.6.2	show loginsession	5 - 14
5.7	User Account Commands	5 - 15
5.7.1	users name	5 - 15
5.7.2	users name <username> unlock	5 - 15
5.7.3	users passwd	5 - 15
5.7.4	users passwd <username> encrypted <password>	5 - 16
5.7.5	users snmpv3 accessmode	5 - 16
5.7.6	users snmpv3 authentication	5 - 17
5.7.7	users snmpv3 encryption	5 - 17
5.7.8	show users	5 - 18
5.7.9	show users accounts	5 - 18
5.7.10	passwd	5 - 18
5.7.11	passwords min-length	5 - 19
5.7.12	passwords history	5 - 19
5.7.13	passwords aging	5 - 19
5.7.14	passwords lock-out	5 - 20
5.7.15	show passwords configuration	5 - 20
5.7.16	write memory	5 - 20
5.8	SNMP Commands	5 - 20
5.8.1	snmp-server	5 - 21
5.8.2	snmp-server community	5 - 21
5.8.3	snmp-server community ipaddr	5 - 21
5.8.4	snmp-server community ipmask	5 - 22
5.8.5	snmp-server community mode	5 - 22
5.8.6	snmp-server community ro	5 - 22
5.8.7	snmp-server enable traps violation	5 - 23
5.8.8	snmp-server enable traps	5 - 23
5.8.9	snmp-server enable traps linkmode	5 - 24
5.8.10	snmp-server enable traps multiusers	5 - 24
5.8.11	snmp-server enable traps stpmode	5 - 24
5.8.12	snmptrap	5 - 25
5.8.13	snmptrap snmpversion	5 - 25



5.8.14	snmptrap ipaddr	5 - 25
5.8.15	snmptrap mode	5 - 26
5.8.16	snmp trap link-status	5 - 26
5.8.17	snmp trap link-status all	5 - 26
5.8.18	show snmpcommunity	5 - 27
5.8.19	show snmptrap	5 - 27
5.8.20	show trapflags	5 - 28
5.8.21	snmptrap	5 - 29
5.8.22	snmptrap notification	5 - 29
5.9	RADIUS Commands	5 - 29
5.9.1	authorization network radius	5 - 29
5.9.2	radius accounting mode	5 - 29
5.9.3	radius server attribute 4	5 - 30
5.9.4	radius server host	5 - 30
5.9.5	radius server key	5 - 31
5.9.6	radius server msgauth	5 - 31
5.9.7	radius server primary	5 - 32
5.9.8	radius server retransmit	5 - 32
5.9.9	radius server timeout	5 - 32
5.9.10	show radius	5 - 33
5.9.11	show radius accounting	5 - 33
5.9.12	show radius statistics	5 - 34
5.10	TACACS+ Commands	5 - 35
5.10.1	tacacs-server host	5 - 35
5.10.2	tacacs-server key	5 - 35
5.10.3	tacacs-server timeout	5 - 36
5.10.4	key	5 - 36
5.10.5	port	5 - 37
5.10.6	priority	5 - 37
5.10.7	timeout	5 - 37
5.10.8	show tacacs	5 - 37
5.11	Configuration Scripting Commands	5 - 37
5.11.1	script apply	5 - 38
5.11.2	script delete	5 - 38
5.11.3	script list	5 - 39
5.11.4	script show	5 - 39
5.11.5	script validate	5 - 39
5.12	Pre-login Banner and System Prompt Commands	5 - 39
5.12.1	copy (pre-login banner)	5 - 39
5.12.2	set prompt	5 - 40
5.13	Diagnostics Commands	5 - 40
5.13.1	diagnostics	5 - 40
5.13.2	show logging diag-report	5 - 40



Appendix

A

A. Getting Help	A - 2
-----------------------	-------

Appendix

B

B. FASTPATH Log Messages	B - 2
B.1 Core	B - 2
B.2 Utilities	B - 3
B.3 Management	B - 5
B.4 Switching	B - 7
B.5 QoS	B - 12
B.6 Technologies	B - 13
B.7 O/S Support	B - 14

Appendix

C

C. List of Commands	C - 2
---------------------------	-------



Chapter

1

Using the Command-Line Interface



1. Using the Command-Line Interface

The command-line interface (CLI) is a text-based way to manage and monitor the system. You can access the CLI by using a direct serial connection or by using a remote logical connection with telnet or SSH.

This chapter describes the CLI syntax, conventions, and modes. It contains the following sections:

- 1.1 “Command Syntax” on page 1 - 2
- 1.2 “Command Conventions” on page 1 - 2
- 1.3 “Common Parameter Values” on page 1 - 3
- 1.4 “Slot/Port Naming Convention” on page 1 - 4
- 1.5 “Using the “No” Form of a Command” on page 1 - 4
- 1.6 “FASTPATH Modules” on page 1 - 4
- 1.7 “Command Modes” on page 1 - 5
- 1.8 “Command Completion and Abbreviation” on page 1 - 7
- 1.9 “CLI Error Messages” on page 1 - 7
- 1.10 “CLI Line-Editing Conventions” on page 1 - 7
- 1.11 “Using CLI Help” on page 1 - 8
- 1.12 “Accessing the CLI” on page 1 - 8

1.1 Command Syntax

A command is one or more words that might be followed by one or more parameters. Parameters can be required or optional values.

Some commands, such as `show network` or `clear vlan`, do not require parameters. Other commands, such as `network parms`, require that you supply a value after the command. You must type the parameter values in a specific order, and optional parameters follow required parameters. The following example describes the `network parms` command syntax:

Format `network parms` *<ipaddr>* *<netmask>* [*gateway*]

- `network parms` is the command name.
- *<ipaddr>* and *<netmask>* are parameters and represent required values that you must enter after you type the command keywords.
- [*gateway*] is an optional parameter, so you are not required to enter a value in place of the parameter.

The *CLI Command Reference* lists each command by the command name and provides a brief description of the command. Each command reference also contains the following information:

- Format shows the command keywords and the required and optional parameters.
- Mode identifies the command mode you must be in to access the command.
- Default shows the default value, if any, of a configurable setting on the device.

The `show` commands also contain a description of the information that the command shows.

1.2 Command Conventions

In this document, the command name is in **bold** font. Parameters are in *italic font*. You must replace the parameter name with an appropriate value, which might be a name or number. Parameters are order dependent.



The parameters for a command might include mandatory values, optional values, or keyword choices. [Table 1](#) describes the conventions this document uses to distinguish between value types.

Table 1: Parameter Conventions

Symbol	Example	Description
<> angle brackets	<value>	Indicates that you must enter a value in place of the brackets and text inside them.
[] square brackets	[value]	Indicates an optional parameter that you can enter in place of the brackets and text inside them.
{ } curly braces	{choice1 choice2}	Indicates that you must select a parameter from the list of choices.
Vertical bars	choice1 choice2	Separates the mutually exclusive choices.
[{}] Braces within square brackets	[{choice1 choice2}]	Indicates a choice within an optional element.

1.3 Common Parameter Values

Parameter values might be names (strings) or numbers. To use spaces as part of a name parameter, enclose the name value in double quotes. For example, the expression “System Name with Spaces” forces the system to accept the spaces. Empty strings (“”) are not valid user-defined strings. [Table 2](#) describes common parameter values and value formatting.

Table 2: Parameter Descriptions

Parameter	Description
ipaddr	This parameter is a valid IP address. You can enter the IP address in the following formats: a (32 bits) a.b (8.24 bits) a.b.c (8.8.16 bits) a.b.c.d (8.8.8.8) In addition to these formats, the CLI accepts decimal, hexadecimal and octal formats through the following input formats (where <i>n</i> is any valid hexadecimal, octal or decimal number): 0xn (CLI assumes hexadecimal format) 0n (CLI assumes octal format with leading zeros) n (CLI assumes decimal format)
ipv6-address	FE80:0000:0000:0000:020F:24FF:FEBF:DBCB, or FE80:0:0:0:20F:24FF:FEBF:DBCB, or FE80::20F24FF:FEBF:DBCB, or FE80:0:0:0:20F:24FF:128:141:49:32 For additional information, refer to RFC 3513.
Interface or slot/port	Valid slot and port number separated by a forward slash. For example, 0/1 represents slot number 0 and port number 1.
Logical Interface	Represents a logical slot and port number. This is applicable in the case of a port-channel (LAG). You can use the logical slot/port to configure the port-channel.
Character strings	Use double quotation marks to identify character strings, for example, “System Name with Spaces”. An empty string (“”) is not valid.



1.4 Slot/Port Naming Convention

FASTPATH software references physical entities such as cards and ports by using a slot/port naming convention. The FASTPATH software also uses this convention to identify certain logical entities, such as Port-Channel interfaces.

The slot number has two uses. In the case of physical ports, it identifies the card containing the ports. In the case of logical and CPU ports it also identifies the type of interface or port.

Table 3: Type of Slots

Slot Type	Description
Physical slot numbers	Physical slot numbers begin with zero, and are allocated up to the maximum number of physical slots.
Logical slot numbers	Logical slots immediately follow physical slots and identify port-channel (LAG) or router interfaces.
CPU slot numbers	The CPU slots immediately follow the logical slots.

The port identifies the specific physical port or logical interface being managed on a given slot.

Table 4: Type of Ports

Port Type	Description
Physical Ports	The physical ports for each slot are numbered sequentially starting from zero.
Logical Interfaces	Port-channel or Link Aggregation Group (LAG) interfaces are logical interfaces that are only used for bridging functions. VLAN routing interfaces are only used for routing functions. Loopback interfaces are logical interfaces that are always up. Tunnel interfaces are logical point-to-point links that carry encapsulated packets.
CPU ports	CPU ports are handled by the driver as one or more physical entities located on physical slots.



Note: In the CLI, loopback and tunnel interfaces do not use the slot/port format. To specify a loopback interface, you use the loopback ID. To specify a tunnel interface, you use the tunnel ID.

1.5 Using the “No” Form of a Command

The `no` keyword is a specific form of an existing command and does not represent a new or distinct command. Almost every configuration command has a `no` form. In general, use the `no` form to reverse the action of a command or reset a value back to the default. For example, the `no shutdown` configuration command reverses the shutdown of an interface. Use the command without the keyword `no` to re-enable a disabled feature or to enable a feature that is disabled by default. Only the configuration commands are available in the `no` form.

1.6 FASTPATH Modules

FASTPATH software consists of flexible modules that can be applied in various combinations to develop advanced Layer 2/3/4+ products. The commands and command modes available on your switch depend on the installed



modules. Additionally, for some `show` commands, the output fields might change based on the modules included in the FASTPATH software.

The FASTPATH software suite includes the following modules:

- Switching (Layer 2)
- Quality of Service
- Management (CLI and SNMP)

Not all modules are available for all platforms or software releases.

1.7 Command Modes

The CLI groups commands into modes according to the command function. Each of the command modes supports specific FASTPATH software commands. The commands in one mode are not available until you switch to that particular mode, with the exception of the User EXEC mode commands. You can execute the User EXEC mode commands in the Privileged EXEC mode.

The command prompt changes in each command mode to help you identify the current mode. [Table 5](#) describes the command modes and the prompts visible in that mode.



Note: The command modes available on your switch depend on the software modules that are installed.

Table 5: CLI Command Modes

Command Mode	Prompt	Mode Description
User EXEC	<code>Switch></code>	Contains a limited set of commands to view basic system information.
Privileged EXEC	<code>Switch#</code>	Allows you to issue any EXEC command, enter the VLAN mode, or enter the Global Configuration mode.
Global Config	<code>Switch (Config)#</code>	Groups general setup commands and permits you to make modifications to the running configuration.
VLAN Config	<code>Switch (Vlan)#</code>	Groups all the VLAN commands.
Interface Config	<code>Switch (Interface <slot/port>)#</code>	Manages the operation of an interface and provides access to the router interface configuration commands.
	<code>Switch (Interface Loopback <id>)#</code>	Use this mode to set up a physical port for a specific logical connection operation.
	<code>Switch (Interface Tunnel <id>)#</code>	
Line Config	<code>Switch (line)#</code>	Contains commands to configure outbound telnet settings and console interface settings.
Policy Map Config	<code>Switch (Config-policy-map)#</code>	Contains the QoS Policy-Map configuration commands.
Policy Class Config	<code>Switch (Config-policy-class-map)#</code>	Consists of class creation, deletion, and matching commands. The class match commands specify Layer 2, Layer 3, and general match criteria.
Class Map Config	<code>Switch (Config-class-map)#</code>	Contains the QoS class map configuration commands for IPv4.

Table 5: CLI Command Modes (Continued)

Command Mode	Prompt	Mode Description
MAC Access-list Config	Switch (Config-mac-access-list) #	Allows you to create a MAC Access-List and to enter the mode containing MAC Access-List configuration commands.
TACACS Config	Switch (Tacacs) #	Contains commands to configure properties for the TACACS servers.
DHCP Pool Config	Switch (Config dhcp-pool) #	Contains the DHCP server IP address pool configuration commands.

Table 6 explains how to enter or exit each mode.

Table 6: CLI Mode Access and Exit

Command Mode	Access Method	Exit or Access Previous Mode
User EXEC	This is the first level of access.	To exit, enter <code>logout</code> .
Privileged EXEC	From the User EXEC mode, enter <code>enable</code> .	To exit to the User EXEC mode, enter <code>exit</code> or press <code>Ctrl-Z</code> .
Global Config	From the Privileged EXEC mode, enter <code>configure</code> .	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .
VLAN Config	From the Privileged EXEC mode, enter <code>vlan database</code> .	To exit to the Privileged EXEC mode, enter <code>exit</code> , or press <code>Ctrl-Z</code> .
Interface Config	From the Global Config mode, enter <code>interface <slot/port></code> or <code>interface loopback <id></code> or <code>interface tunnel <id></code>	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Line Config	From the Global Config mode, enter <code>lineconfig</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Policy-Map Config	From the Global Config mode, enter <code>policy-map</code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Policy-Class-Map Config	From the Policy Map mode enter <code>class</code> .	To exit to the Policy Map mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
Class-Map Config	From the Global Config mode, enter <code>class-map</code> , and specify the optional keyword <code>ipv4</code> to specify the Layer 3 protocol for this class. See 3.5.1 “class-map” on page 3 - 10 for more information.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
MAC Access-list Config	From the Global Config mode, enter <code>mac access-list extended <name></code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
TACACS Config	From the Global Config mode, enter <code>tacacs-server host <ip-addr></code> , where <code><ip-addr></code> is the IP address of the TACACS server on your network.	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .
DHCP Pool Config	From the Global Config mode, enter <code>ip dhcp pool <pool-name></code> .	To exit to the Global Config mode, enter <code>exit</code> . To return to the Privileged EXEC mode, enter <code>Ctrl-Z</code> .



1.8 Command Completion and Abbreviation

Command completion finishes spelling the command when you type enough letters of a command to uniquely identify the command keyword. Once you have entered enough letters, press the SPACEBAR or TAB key to complete the word.

Command abbreviation allows you to execute a command when you have entered there are enough letters to uniquely identify the command. You must enter all of the required keywords and parameters before you enter the command.

1.9 CLI Error Messages

If you enter a command and the system is unable to execute it, an error message appears. [Table 7](#) describes the most common CLI error messages.

Table 7: CLI Error Messages

Message Text	Description
% Invalid input detected at '^' marker.	Indicates that you entered an incorrect or unavailable command. The carat (^) shows where the invalid text is detected. This message also appears if any of the parameters or values are not recognized.
Command not found / Incomplete command. Use ? to list commands.	Indicates that you did not enter the required keywords or values.
Ambiguous command	Indicates that you did not enter enough letters to uniquely identify the command.

1.10 CLI Line-Editing Conventions

[Table 8](#) describes the key combinations you can use to edit commands or increase the speed of command entry. You can access this list from the CLI by entering `help` from the User or Privileged EXEC modes.

Table 8: CLI Editing Conventions

Key Sequence	Description
DEL or Backspace	Delete previous character
Ctrl-A	Go to beginning of line
Ctrl-E	Go to end of line
Ctrl-F	Go forward one character
Ctrl-B	Go backward one character
Ctrl-D	Delete current character
Ctrl-U, X	Delete to beginning of line
Ctrl-K	Delete to end of line
Ctrl-W	Delete previous word
Ctrl-T	Transpose previous character
Ctrl-P	Go to previous line in history buffer
Ctrl-R	Rewrites or pastes the line
Ctrl-N	Go to next line in history buffer
Ctrl-Y	Prints last deleted character
Ctrl-Q	Enables serial flow



Table 8: CLI Editing Conventions (Continued)

Key Sequence	Description
Ctrl-S	Disables serial flow
Ctrl-Z	Return to root command prompt
Tab, <SPACE>	Command-line completion
Exit	Go to next lower command prompt
?	List available commands, keywords, or parameters

1.11 Using CLI Help

Enter a question mark (?) at the command prompt to display the commands available in the current mode.

```
(switch) >?
```

```
enable          Enter into user privilege mode.
help            Display help for various special keys.
logout         Exit this session. Any unsaved changes are lost.
ping           Send ICMP echo packets to a specified IP address.
quit           Exit this session. Any unsaved changes are lost.
show           Display Switch Options and Settings.
telnet         Telnet to a remote host.
```

Enter a question mark (?) after each word you enter to display available command keywords or parameters.

```
(switch) #network ?
```

```
javamode        Enable/Disable.
mgmt_vlan       Configure the Management VLAN ID of the switch.
parms           Configure Network Parameters of the router.
protocol        Select DHCP, BootP, or None as the network config
                protocol.
```

If the help output shows a parameter in angle brackets, you must replace the parameter with a value.

```
(switch) #network parms ?
```

```
<ipaddr>        Enter the IP address.
```

If there are no additional command keywords or parameters, or if additional parameters are optional, the following message appears in the output:

```
<cr>           Press Enter to execute the command
```

You can also enter a question mark (?) after typing one or more characters of a word to list the available command or parameters that begin with the letters, as shown in the following example:

```
(switch) #show m?
```

```
mac-addr-table      mac-address-table      monitor
```

1.12 Accessing the CLI

You can access the CLI by using a direct console connection or by using a telnet or SSH connection from a remote management host.



For the initial connection, you must use a direct connection to the console port. You cannot access the system remotely until the system has an IP address, subnet mask, and default gateway. You can set the network configuration information manually, or you can configure the system to accept these settings from a BOOTP or DHCP server on your network. For more information, see 5.1 “Network Interface Commands” on page 5 - 2.





Chapter **2**

Switching Commands



2. Switching Commands

This chapter describes the switching commands available in the FASTPATH CLI.

The Switching Commands chapter includes the following sections:

- 2.1 “Port Configuration Commands” on page 2 - 2
- 2.2 “Spanning Tree Protocol (STP) Commands” on page 2 - 7
- 2.3 “VLAN Commands” on page 2 - 19
- 2.4 “Double VLAN Commands” on page 2 - 29
- 2.5 “Voice VLAN Commands” on page 2 - 31
- 2.6 “Provisioning (IEEE 802.1p) Commands” on page 2 - 33
- 2.7 “Protected Ports Commands” on page 2 - 33
- 2.8 “GARP Commands” on page 2 - 35
- 2.9 “GVRP Commands” on page 2 - 37
- 2.10 “GMRP Commands” on page 2 - 38
- 2.11 “Port-Based Network Access Control Commands” on page 2 - 40
- 2.12 “Storm-Control Commands” on page 2 - 50
- 2.13 “Port-Channel/LAG (802.3ad) Commands” on page 2 - 55
- 2.14 “Port Mirroring” on page 2 - 69
- 2.15 “Static MAC Filtering” on page 2 - 70
- 2.16 “IGMP Snooping Configuration Commands” on page 2 - 74
- 2.17 “IGMP Snooping Querier Commands” on page 2 - 80
- 2.18 “Port Security Commands” on page 2 - 83
- 2.19 “LLDP (802.1AB) Commands” on page 2 - 85
- 2.20 “LLDP-MED Commands” on page 2 - 92
- 2.21 “Denial of Service Commands” on page 2 - 98
- 2.22 “MAC Database Commands” on page 2 - 101



Caution! The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

2.1 Port Configuration Commands

This section describes the commands you use to view and configure port settings.

2.1.1 interface

This command gives you access to the Interface Config mode, which allows you to enable or modify the operation of an interface (port).

Format `interface <slot/port>`

Mode Global Config



2.1.2 auto-negotiate

This command enables automatic negotiation on a port.

Default	enabled
Format	<code>auto-negotiate</code>
Mode	Interface Config

2.1.2.1 no auto-negotiate

This command disables automatic negotiation on a port.



Note: Automatic sensing is disabled when automatic negotiation is disabled.

Format	<code>no auto-negotiate</code>
Mode	Interface Config

2.1.3 auto-negotiate all

This command enables automatic negotiation on all ports.

Default	enabled
Format	<code>auto-negotiate all</code>
Mode	Global Config

2.1.3.1 no auto-negotiate all

This command disables automatic negotiation on all ports.

Format	<code>no auto-negotiate all</code>
Mode	Global Config

2.1.4 advertise speed

This command sets auto-negotiation advertised speed parameters. If full/half-duplex is not specified the speed is valid for both modes.

Format	<code>advertise speed <1000 100 10> [<half-duplex full-duplex>]</code>
Mode	Interface Config

2.1.4.1 no advertise speed

This command resets auto-negotiation advertised speed parameters.

Format	<code>no advertise speed <1000 100 10> [<half-duplex full-duplex>]</code>
Mode	Interface Config



2.1.5 show advertise speed

This command lists the auto-negotiation advertised speed parameters. The values are listed for a specified interface.

Format `show advertise speed <slot/port>`
Mode Privileged Exec

2.1.6 description

Use this command to create an alpha-numeric description of the port.

Format `description <description>`
Mode Interface Config

2.1.7 mtu

Use the `mtu` command to set the maximum transmission unit (MTU) size, in bytes, for frames that ingress or egress the interface. You can use the `mtu` command to configure jumbo frame support for physical and port-channel (LAG) interfaces. For the standard FASTPATH implementation, the MTU size is a valid integer between 1522 - 9216 for tagged packets and a valid integer between 1518 - 9216 for untagged packets.



Note: To receive and process packets, the Ethernet MTU must include any extra bytes that Layer-2 headers might require.

Default 1518 (untagged)
Format `mtu <1518-9216>`
Mode Interface Config

2.1.7.1 no mtu

This command sets the default MTU size (in bytes) for the interface.

Format `no mtu`
Mode Interface Config

2.1.8 shutdown

This command disables a port.



Note: You can use the `shutdown` command on physical and port-channel (LAG) interfaces, but not on VLAN routing interfaces.

Default enabled
Format `shutdown`
Mode Interface Config



2.1.8.1 no shutdown

This command enables a port.

Format `no shutdown`

Mode Interface Config

2.1.9 shutdown all

This command disables all ports.



Note: You can use the `shutdown all` command on physical and port-channel (LAG) interfaces, but not on VLAN routing interfaces.

Default enabled

Format `shutdown all`

Mode Global Config

2.1.9.1 no shutdown all

This command enables all ports.

Format `no shutdown all`

Mode Global Config

2.1.10 speed

This command sets the speed and duplex setting for the interface.

Format `speed {<100 | 10> <half-duplex | full-duplex>}`

Mode Interface Config

Acceptable Values	Definition
100h	100BASE-T half duplex
100f	100BASE-T full duplex
10h	10BASE-T half duplex
10f	10BASE-T full duplex

2.1.11 speed all

This command sets the speed and duplex setting for all interfaces.

Format `speed all {<100 | 10> <half-duplex | full-duplex>}`

Mode Global Config

Acceptable Values	Definition
100h	100BASE-T half duplex



Acceptable Values	Definition
100f	100BASE-T full duplex
10h	10BASE-T half duplex
10f	10BASE-T full duplex

2.1.12 show port

This command displays port information.

Format `show port {<slot/port> | all}`

Mode Privileged EXEC

Term	Definition
Interface	Valid slot and port number separated by a forward slash.
Type	If not blank, this field indicates that this port is a special type of port. The possible values are: <ul style="list-style-type: none"> • Mirror - this port is a monitoring port. For more information, see 2.14 “Port Mirroring” on page 2 - 69. • PC Mbr- this port is a member of a port-channel (LAG). • Probe - this port is a probe port.
Admin Mode	The Port control administration state. The port must be enabled in order for it to be allowed into the network. - May be enabled or disabled. The factory default is enabled.
Physical Mode	The desired port speed and duplex mode. If auto-negotiation support is selected, then the duplex mode and speed is set from the auto-negotiation process. Note that the maximum capability of the port (full duplex -100M) is advertised. Otherwise, this object determines the port's duplex mode and transmission rate. The factory default is Auto.
Physical Status	The port speed and duplex mode.
Link Status	The Link is up or down.
Link Trap	This object determines whether or not to send a trap when link status changes. The factory default is enabled.
LACP Mode	LACP is enabled or disabled on this port.

2.1.13 show port protocol

This command displays the Protocol-Based VLAN information for either the entire system, or for the indicated group.

Format `show port protocol {<groupid> | all}`

Mode Privileged EXEC

Term	Definition
Group Name	The group name of an entry in the Protocol-based VLAN table.
Group ID	The group identifier of the protocol group.
Protocol(s)	The type of protocol(s) for this group.
VLAN	The VLAN associated with this Protocol Group.
Interface(s)	Lists the slot/port interface(s) that are associated with this Protocol Group.



2.2 Spanning Tree Protocol (STP) Commands

This section describes the commands you use to configure Spanning Tree Protocol (STP). STP helps prevent network loops, duplicate messages, and network instability.



Note: STP is disabled by default. When you enable STP on the switch, STP is still disabled on each port.



Note: If STP is disabled, the system does not forward BPDU messages.

2.2.1 spanning-tree

This command sets the spanning-tree operational mode to enabled.

Default	disabled
Format	<code>spanning-tree</code>
Mode	Global Config

2.2.1.1 no spanning-tree

This command sets the spanning-tree operational mode to disabled. While disabled, the spanning-tree configuration is retained and can be changed, but is not activated.

Format	<code>no spanning-tree</code>
Mode	Global Config

2.2.2 spanning-tree bpdudfilter

Use this command to enable BPDU Filter on the interface.

Default	disabled
Format	<code>spanning-tree bpdudfilter</code>
Mode	Interface Config

2.2.2.1 no spanning-tree bpdudfilter

Use this command to disable BPDU Filter on the interface.

Default	disabled
Format	<code>no spanning-tree bpdudfilter</code>
Mode	Interface Config

2.2.3 spanning-tree bpdudfilter default

Use this command to enable BPDU Filter on all the edge port interfaces.



Default disabled
Format `spanning-tree bpdufilter`
Mode Global Config

2.2.3.1 no spanning-tree bpdufilter default

Use this command to disable BPDU Filter on all the edge port interfaces.

Default disabled
Format `no spanning-tree bpdufilter default`
Mode Global Config

2.2.4 spanning-tree bpduflood

Use this command to enable BPDU Flood on the interface.

Default disabled
Format `spanning-tree bpduflood`
Mode Interface Config

2.2.4.1 no spanning-tree bpduflood

Use this command to disable BPDU Flood on the interface.

Default disabled
Format `no spanning-tree bpduflood`
Mode Interface Config

2.2.5 spanning-tree bpduguard

Use this command to enable BPDU Guard on the switch.

Default disabled
Format `spanning-tree bpduguard`
Mode Global Config

2.2.5.1 no spanning-tree bpduguard

Use this command to disable BPDU Guard on the switch.

Default disabled
Format `no spanning-tree bpduguard`
Mode Global Config



2.2.6 spanning-tree bpdumigrationcheck

Use this command to force a transmission of rapid spanning tree (RSTP) and multiple spanning tree (MSTP) BPDUs. Use the `<slot/port>` parameter to transmit a BPDU from a specified interface, or use the `all` keyword to transmit BPDUs from all interfaces. This command forces the BPDU transmission when you execute it, so the command does not change the system configuration or have a “no” version.

Format `spanning-tree bpdumigrationcheck {<slot/port> | all}`

Mode Global Config

2.2.7 spanning-tree configuration name

This command sets the Configuration Identifier Name for use in identifying the configuration that this switch is currently using. The `<name>` is a string of up to 32 characters.

Default base MAC address in hexadecimal notation

Format `spanning-tree configuration name <name>`

Mode Global Config

2.2.7.1 no spanning-tree configuration name

This command resets the Configuration Identifier Name to its default.

Format `no spanning-tree configuration name`

Mode Global Config

2.2.8 spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using. The Configuration Identifier Revision Level is a number in the range of 0 to 65535.

Default 0

Format `spanning-tree configuration revision <0-65535>`

Mode Global Config

2.2.8.1 no spanning-tree configuration revision

This command sets the Configuration Identifier Revision Level for use in identifying the configuration that this switch is currently using to the default value.

Format `no spanning-tree configuration revision`

Mode Global Config

2.2.9 spanning-tree edgeport

This command specifies that this port is an Edge Port within the common and internal spanning tree. This allows this port to transition to Forwarding State without delay.

Format `spanning-tree edgeport`

Mode Interface Config



2.2.9.1 no spanning-tree edgeport

This command specifies that this port is not an Edge Port within the common and internal spanning tree.

Format no spanning-tree edgeport

Mode Interface Config

spanning-tree forceversion

This command sets the Force Protocol Version parameter to a new value.

Default 802.1s

Format spanning-tree forceversion <802.1d | 802.1s | 802.1w>

Mode Global Config

- Use 802.1d to specify that the switch transmits ST BPDUs rather than MST BPDUs (IEEE 802.1d functionality supported).
- Use 802.1s to specify that the switch transmits MST BPDUs (IEEE 802.1s functionality supported).
- Use 802.1w to specify that the switch transmits RST BPDUs rather than MST BPDUs (IEEE 802.1w functionality supported).

2.2.9.2 no spanning-tree forceversion

This command sets the Force Protocol Version parameter to the default value.

Format no spanning-tree forceversion

Mode Global Config

2.2.10 spanning-tree forward-time

This command sets the Bridge Forward Delay parameter to a new value for the common and internal spanning tree. The forward-time value is in seconds within a range of 4 to 30, with the value being greater than or equal to "(Bridge Max Age / 2) + 1".

Default 15

Format spanning-tree forward-time <4-30>

Mode Global Config

2.2.10.1 no spanning-tree forward-time

This command sets the Bridge Forward Delay parameter for the common and internal spanning tree to the default value.

Format no spanning-tree forward-time

Mode Global Config



2.2.11 spanning-tree hello-time

This command sets the Admin Hello Time parameter to a new value for the common and internal spanning tree. The hello time *<value>* is in whole seconds within a range of 1 to 10, with the value being less than or equal to (*Bridge Max Age / 2*) - 1.

Default 2
Format `spanning-tree hello-time <1-10>`
Mode Interface Config

2.2.11.1 no spanning-tree hello-time

This command sets the admin Hello Time parameter for the common and internal spanning tree to the default value.

Format `no spanning-tree hello-time`
Mode Interface Config

2.2.12 spanning-tree max-age

This command sets the Bridge Max Age parameter to a new value for the common and internal spanning tree. The max-age value is in seconds within a range of 6 to 40, with the value being less than or equal to $2 \times (\text{Bridge Forward Delay} - 1)$.

Default 20
Format `spanning-tree max-age <6-40>`
Mode Global Config

2.2.12.1 no spanning-tree max-age

This command sets the Bridge Max Age parameter for the common and internal spanning tree to the default value.

Format `no spanning-tree max-age`
Mode Global Config

2.2.13 spanning-tree max-hops

This command sets the MSTP Max Hops parameter to a new value for the common and internal spanning tree. The max-hops value is a range from 1 to 127.

Default 20
Format `spanning-tree max-hops <1-127>`
Mode Global Config

2.2.13.1 no spanning-tree max-hops

This command sets the Bridge Max Hops parameter for the common and internal spanning tree to the default value.

Format `no spanning-tree max-hops`
Mode Global Config



2.2.14 spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance or in the common and internal spanning tree. If you specify an *<mstid>* parameter that corresponds to an existing multiple spanning tree instance, the configurations are done for that multiple spanning tree instance. If you specify 0 (defined as the default CIST ID) as the *<mstid>*, the configurations are done for the common and internal spanning tree instance.

If you specify the **cost** option, the command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the *<mstid>* parameter. You can set the path cost as a number in the range of 1 to 200000000 or **auto**. If you select **auto** the path cost value is set based on Link Speed.

If you specify the **external-cost** option, this command sets the external-path cost for MST instance '0' i.e. CIST instance. You can set the external cost as a number in the range of 1 to 200000000 or **auto**. If you specify **auto**, the external path cost value is set based on Link Speed.

If you specify the **port-priority** option, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the *<mstid>* parameter. The port-priority value is a number in the range of 0 to 240 in increments of 16.

Default	<ul style="list-style-type: none"> • cost—auto • external-cost—auto • port-priority—128
Format	spanning-tree mst <i><mstid></i> <i>{cost <1-200000000> auto}</i> <i>{external-cost <1-200000000> auto}</i> <i>port-priority <0-240></i>
Mode	Interface Config

2.2.14.1 no spanning-tree mst

This command sets the Path Cost or Port Priority for this port within the multiple spanning tree instance, or in the common and internal spanning tree to the respective default values. If you specify an *<mstid>* parameter that corresponds to an existing multiple spanning tree instance, you are configuring that multiple spanning tree instance. If you specify 0 (defined as the default CIST ID) as the *<mstid>*, you are configuring the common and internal spanning tree instance.

If the you specify **cost**, this command sets the path cost for this port within a multiple spanning tree instance or the common and internal spanning tree instance, depending on the *<mstid>* parameter, to the default value, i.e. a path cost value based on the Link Speed.

If you specify **external-cost**, this command sets the external path cost for this port for mst '0' instance, to the default value, i.e. a path cost value based on the Link Speed.

If you specify **port-priority**, this command sets the priority for this port within a specific multiple spanning tree instance or the common and internal spanning tree instance, depending on the *<mstid>* parameter, to the default value.

Format	no spanning-tree mst <i><mstid></i> <i><cost external-cost port-priority></i>
Mode	Interface Config



2.2.15 spanning-tree mst instance

This command adds a multiple spanning tree instance to the switch. The parameter *<mstid>* is a number within a range of 1 to 4094, that corresponds to the new instance ID to be added. The maximum number of multiple instances supported by the switch is 4.

Default	none
Format	<code>spanning-tree mst instance <mstid></code>
Mode	Global Config

2.2.15.1 no spanning-tree mst instance

This command removes a multiple spanning tree instance from the switch and reallocates all VLANs allocated to the deleted instance to the common and internal spanning tree. The parameter *<mstid>* is a number that corresponds to the desired existing multiple spanning tree instance to be removed.

Format	<code>no spanning-tree mst instance <mstid></code>
Mode	Global Config

2.2.16 spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance. The parameter *<mstid>* is a number that corresponds to the desired existing multiple spanning tree instance. The priority value is a number within a range of 0 to 61440 in increments of 4096.

If you specify 0 (defined as the default CIST ID) as the *<mstid>*, this command sets the Bridge Priority parameter to a new value for the common and internal spanning tree. The bridge priority value is a number within a range of 0 to 61440. The twelve least significant bits are masked according to the 802.1s specification. This causes the priority to be rounded down to the next lower valid priority.

Default	32768
Format	<code>spanning-tree mst priority <mstid> <0-61440></code>
Mode	Global Config

2.2.16.1 no spanning-tree mst priority

This command sets the bridge priority for a specific multiple spanning tree instance to the default value. The parameter *<mstid>* is a number that corresponds to the desired existing multiple spanning tree instance.

If 0 (defined as the default CIST ID) is passed as the *<mstid>*, this command sets the Bridge Priority parameter for the common and internal spanning tree to the default value.

Format	<code>no spanning-tree mst priority <mstid></code>
Mode	Global Config

2.2.17 spanning-tree mst vlan

This command adds an association between a multiple spanning tree instance and a VLAN so that the VLAN is no longer associated with the common and internal spanning tree. The parameter *<mstid>* is a number that



corresponds to the desired existing multiple spanning tree instance. The `<vlanid>` corresponds to an existing VLAN ID.

Format `spanning-tree mst vlan <mstid> <vlanid>`
Mode Global Config

2.2.17.1 no spanning-tree mst vlan

This command removes an association between a multiple spanning tree instance and a VLAN so that the VLAN is again be associated with the common and internal spanning tree. The parameter `<mstid>` is a number that corresponds to the desired existing multiple spanning tree instance. The `<vlanid>` corresponds to an existing VLAN ID.

Format `no spanning-tree mst vlan <mstid> <vlanid>`
Mode Global Config

2.2.18 spanning-tree port mode

This command sets the Administrative Switch Port State for this port to enabled.

Default disabled
Format `spanning-tree port mode`
Mode Interface Config

2.2.18.1 no spanning-tree port mode

This command sets the Administrative Switch Port State for this port to disabled.

Format `no spanning-tree port mode`
Mode Interface Config

2.2.19 spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to enabled.

Default disabled
Format `spanning-tree port mode all`
Mode Global Config

2.2.19.1 no spanning-tree port mode all

This command sets the Administrative Switch Port State for all ports to disabled.

Format `no spanning-tree port mode all`
Mode Global Config

2.2.20 spanning-tree rootguard

Use this command to enable root BPDU Guard on the interface.



Default	disabled
Format	<code>spanning-tree rootguard</code>
Mode	Interface Config

2.2.20.1 no spanning-tree rootguard

Use this command to disable root BPDU Guard on the interface.

Format	<code>no spanning-tree rootguard</code>
Mode	Interface Config

2.2.21 show spanning-tree

This command displays spanning tree settings for the common and internal spanning tree. The following details are displayed.

Format	<code>show spanning-tree</code>
Mode	<ul style="list-style-type: none"> • Privileged EXEC • User EXEC

Term	Definition
Bridge Priority	Specifies the bridge priority for the Common and Internal Spanning tree (CST). The value lies between 0 and 61440. It is displayed in multiples of 4096.
Bridge Identifier	The bridge identifier for the CST. It is made up using the bridge priority and the base MAC address of the bridge.
Time Since Topology Change	Time in seconds.
Topology Change Count	Number of times changed.
Topology Change	Boolean value of the Topology Change parameter for the switch indicating if a topology change is in progress on any port assigned to the common and internal spanning tree.
Designated Root	The bridge identifier of the root bridge. It is made up from the bridge priority and the base MAC address of the bridge.
Root Path Cost	Value of the Root Path Cost parameter for the common and internal spanning tree.
Root Port Identifier	Identifier of the port to access the Designated Root for the CST
Root Port Max Age	Derived value.
Root Port Bridge Forward Delay	Derived value
Hello Time	Configured value of the parameter for the CST.
Bridge Hold Time	Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs).
Bridge Max Hops	Bridge max-hops count for the device.
CST Regional Root	Bridge Identifier of the CST Regional Root. It is made up using the bridge priority and the base MAC address of the bridge.
Regional Root Path Cost	Path Cost to the CST Regional Root.
Associated FIDs	List of forwarding database identifiers currently associated with this instance.
Associated VLANs	List of VLAN IDs currently associated with this instance.



2.2.22 show spanning-tree brief

This command displays spanning tree settings for the bridge. The following information appears.

Format `show spanning-tree brief`

- Mode**
- Privileged EXEC
 - User EXEC

<i>Term</i>	<i>Definition</i>
Bridge Priority	Configured value.
Bridge Identifier	The bridge identifier for the selected MST instance. It is made up using the bridge priority and the base MAC address of the bridge.
Bridge Max Age	Configured value.
Bridge Max Hops	Bridge max-hops count for the device.
Bridge Hello Time	Configured value.
Bridge Forward Delay	Configured value.
Bridge Hold Time	Minimum time between transmission of Configuration Bridge Protocol Data Units (BPDUs).

2.2.23 show spanning-tree interface

This command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The `<slot/port>` is the desired switch port. The following details are displayed on execution of the command.

Format `show spanning-tree interface <slot/port>`

- Mode**
- Privileged EXEC
 - User EXEC

<i>Term</i>	<i>Definition</i>
Hello Time	Admin hello time for this port.
Port Mode	Enabled or disabled.
BPDU Filter	Enabled or disabled.
BPDU Flood	Enabled or disabled.
BPDU Guard	Enabled or disabled.
Root Guard	Enabled or disabled.
Port Up Time Since Counters Last Cleared	Time since port was reset, displayed in days, hours, minutes, and seconds.
STP BPDUs Transmitted	Spanning Tree Protocol Bridge Protocol Data Units sent.
STP BPDUs Received	Spanning Tree Protocol Bridge Protocol Data Units received.
RST BPDUs Transmitted	Rapid Spanning Tree Protocol Bridge Protocol Data Units sent.
RST BPDUs Received	Rapid Spanning Tree Protocol Bridge Protocol Data Units received.
MSTP BPDUs Transmitted	Multiple Spanning Tree Protocol Bridge Protocol Data Units sent.



<i>Term</i>	<i>Definition</i>
MSTP BPDUs Received	Multiple Spanning Tree Protocol Bridge Protocol Data Units received.

2.2.24 show spanning-tree mst port detailed

This command displays the detailed settings and parameters for a specific switch port within a particular multiple spanning tree instance. The parameter *<mstid>* is a number that corresponds to the desired existing multiple spanning tree instance. The *<slot/port>* is the desired switch port.

Format	<code>show spanning-tree mst port detailed <mstid> <slot/port></code>
Mode	<ul style="list-style-type: none"> Privileged EXEC User EXEC

<i>Term</i>	<i>Definition</i>
MST Instance ID	The ID of the existing MST instance.
Port Identifier	The port identifier for the specified port within the selected MST instance. It is made up from the port priority and the interface number of the port.
Port Priority	The priority for a particular port within the selected MST instance. The port priority is displayed in multiples of 16.
Port Forwarding State	Current spanning tree state of this port.
Port Role	Each enabled MST Bridge Port receives a Port Role for each spanning tree. The port role is one of the following values: Root Port, Designated Port, Alternate Port, Backup Port, Master Port or Disabled Port
Auto-Calculate Port Path Cost	Indicates whether auto calculation for port path cost is enabled.
Port Path Cost	Configured value of the Internal Port Path Cost parameter.
Auto-Calculate External Port Path Cost	Indicates whether auto calculation for external port path cost is enabled.
External Port Path Cost	Configured value of the external Port Path Cost parameter.
Designated Root	The Identifier of the designated root for this port.
Designated Port Cost	Path Cost offered to the LAN by the Designated Port.
Designated Bridge	Bridge Identifier of the bridge with the Designated Port.
Designated Port Identifier	Port on the Designated Bridge that offers the lowest cost to the LAN.

If you specify 0 (defined as the default CIST ID) as the *<mstid>*, this command displays the settings and parameters for a specific switch port within the common and internal spanning tree. The *<slot/port>* is the desired switch port. In this case, the following are displayed.

<i>Term</i>	<i>Definition</i>
Port Identifier	The port identifier for this port within the CST.
Port Priority	The priority of the port within the CST.
Port Forwarding State	The forwarding state of the port within the CST.
Port Role	The role of the specified interface within the CST.



<i>Term</i>	<i>Definition</i>
Port Path Cost	The configured path cost for the specified interface.
Designated Root	Identifier of the designated root for this port within the CST.
Designated Port Cost	Path Cost offered to the LAN by the Designated Port.
Designated Bridge	The bridge containing the designated port.
Designated Port Identifier	Port on the Designated Bridge that offers the lowest cost to the LAN.
Topology Change Acknowledgement	Value of flag in next Configuration Bridge Protocol Data Unit (BPDU) transmission indicating if a topology change is in progress for this port.
Hello Time	The hello time in use for this port.
Edge Port	The configured value indicating if this port is an edge port.
Edge Port Status	The derived value of the edge port status. True if operating as an edge port; false otherwise.
Point To Point MAC Status	Derived value indicating if this port is part of a point to point link.
CST Regional Root	The regional root identifier in use for this port.
CST Port Cost	The configured path cost for this port.

2.2.25 show spanning-tree mst port summary

This command displays the settings of one or all ports within the specified multiple spanning tree instance. The parameter `<mstid>` indicates a particular MST instance. The parameter `{<slot/port> | all}` indicates the desired switch port or all ports.

If you specify 0 (defined as the default CIST ID) as the `<mstid>`, the status summary displays for one or all ports within the common and internal spanning tree.

Format `show spanning-tree mst port summary <mstid> {<slot/port> | all}`

Mode

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
MST Instance ID	The MST instance associated with this port.
Interface	Valid slot and port number separated by a forward slash.
Type	Currently not used.
STP State	The forwarding state of the port in the specified spanning tree instance.
Port Role	The role of the specified port within the spanning tree.
Link Status	The operational status of the link. Possible values are "Up" or "Down".
Link Trap	The link trap configuration for the specified interface.

2.2.26 show spanning-tree mst summary

This command displays summary information about all multiple spanning tree instances in the switch. On execution, the following details are displayed.

Format `show spanning-tree mst summary`

Mode

- Privileged EXEC
- User EXEC



<i>Term</i>	<i>Definition</i>
MST Instance ID List	List of multiple spanning trees IDs currently configured.
For each MSTID:	<ul style="list-style-type: none"> List of forwarding database identifiers associated with this instance.
• Associated FIDs	• List of VLAN IDs associated with this instance.
• Associated VLANs	

2.2.27 **show spanning-tree summary**

This command displays spanning tree settings and parameters for the switch. The following details are displayed on execution of the command.

Format	<code>show spanning-tree summary</code>
Mode	<ul style="list-style-type: none"> Privileged EXEC User EXEC

<i>Term</i>	<i>Definition</i>
Spanning Tree Adminmode	Enabled or disabled.
Spanning Tree Version	Version of 802.1 currently supported (IEEE 802.1s, IEEE 802.1w, or IEEE 802.1d) based upon the Force Protocol Version parameter.
BPDU Guard Mode	Enabled or disabled.
BPDU Filter Mode	Enabled or disabled.
Configuration Name	Identifier used to identify the configuration currently being used.
Configuration Revision Level	Identifier used to identify the configuration currently being used.
Configuration Digest Key	Identifier used to identify the configuration currently being used.
MST Instances	List of all multiple spanning tree instances configured on the switch.

2.2.28 **show spanning-tree vlan**

This command displays the association between a VLAN and a multiple spanning tree instance. The `<vlanid>` corresponds to an existing VLAN ID.

Format	<code>show spanning-tree vlan <vlanid></code>
Mode	<ul style="list-style-type: none"> Privileged EXEC User EXEC

<i>Term</i>	<i>Definition</i>
VLAN Identifier	The VLANs associated with the selected MST instance.
Associated Instance	Identifier for the associated multiple spanning tree instance or "CST" if associated with the common and internal spanning tree.

2.3 **VLAN Commands**

This section describes the commands you use to configure VLAN settings.



2.3.1 vlan database

This command gives you access to the VLAN Config mode, which allows you to configure VLAN characteristics.

Format `vlan database`

Mode Privileged EXEC

2.3.2 network mgmt_vlan

This command configures the Management VLAN ID.

Default 1

Format `network mgmt_vlan <1-4069>`

Mode Privileged EXEC

2.3.2.1 no network mgmt_vlan

This command sets the Management VLAN ID to the default.

Format `no network mgmt_vlan`

Mode Privileged EXEC

2.3.3 vlan

This command creates a new VLAN and assigns it an ID. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). VLAN range is 2-4094.

Format `vlan <2-4094>`

Mode VLAN Config

2.3.3.1 no vlan

This command deletes an existing VLAN. The ID is a valid VLAN identification number (ID 1 is reserved for the default VLAN). The VLAN range is 2-4094.

Format `no vlan <2-4094>`

Mode VLAN Config

2.3.4 vlan acceptframe

This command sets the frame acceptance mode per interface. For VLAN Only mode, untagged frames or priority frames received on this interface are discarded. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Default all

Format `vlan acceptframe {vlanonly | all}`

Mode Interface Config



2.3.4.1 no vlan acceptframe

This command resets the frame acceptance mode for the interface to the default value.

Format no vlan acceptframe

Mode Interface Config

2.3.5 vlan ingressfilter

This command enables ingress filtering. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default disabled

Format vlan ingressfilter

Mode Interface Config

2.3.5.1 no vlan ingressfilter

This command disables ingress filtering. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format no vlan ingressfilter

Mode Interface Config

2.3.6 vlan makestatic

This command changes a dynamically created VLAN (one that is created by GVRP registration) to a static VLAN (one that is permanently configured and defined). The ID is a valid VLAN identification number. VLAN range is 2-4094.

Format vlan makestatic <2-4094>

Mode VLAN Config

2.3.7 vlan name

This command changes the name of a VLAN. The name is an alphanumeric string of up to 32 characters, and the ID is a valid VLAN identification number. ID range is 1-4094.

Default

- VLAN ID 1 - default
- other VLANS - blank string

Format vlan name <2-4094> <name>

Mode VLAN Config

2.3.7.1 no vlan name

This command sets the name of a VLAN to a blank string.

Format no vlan name <2-4094>



Mode VLAN Config

2.3.8 vlan participation

This command configures the degree of participation for a specific interface in a VLAN. The ID is a valid VLAN identification number, and the interface is a valid interface number.

Format `vlan participation {exclude | include | auto} <1-4094>`

Mode Interface Config

Participation options are:

Participation Options	Definition
include	The interface is always a member of this VLAN. This is equivalent to registration fixed.
exclude	The interface is never a member of this VLAN. This is equivalent to registration forbidden.
auto	The interface is dynamically registered in this VLAN by GVRP. The interface will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

2.3.9 vlan participation all

This command configures the degree of participation for all interfaces in a VLAN. The ID is a valid VLAN identification number.

Format `vlan participation all {exclude | include | auto} <1-4094>`

Mode Global Config

You can use the following participation options:

Participation Options	Definition
include	The interface is always a member of this VLAN. This is equivalent to registration fixed.
exclude	The interface is never a member of this VLAN. This is equivalent to registration forbidden.
auto	The interface is dynamically registered in this VLAN by GVRP. The interface will not participate in this VLAN unless a join request is received on this interface. This is equivalent to registration normal.

2.3.10 vlan port acceptframe all

This command sets the frame acceptance mode for all interfaces.

Default all

Format `vlan port acceptframe all {vlanonly | all}`

Mode Global Config

The modes defined as follows:

Mode	Definition
VLAN Only mode	Untagged frames or priority frames received on this interface are discarded.



<i>Mode</i>	<i>Definition</i>
Admit All mode	Untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port.

With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

2.3.10.1 no vlan port acceptframe all

This command sets the frame acceptance mode for all interfaces to Admit All. For Admit All mode, untagged frames or priority frames received on this interface are accepted and assigned the value of the interface VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN Specification.

Format no vlan port acceptframe all
Mode Global Config

2.3.11 vlan port ingressfilter all

This command enables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Default disabled
Format vlan port ingressfilter all
Mode Global Config

2.3.11.1 no vlan port ingressfilter all

This command disables ingress filtering for all ports. If ingress filtering is disabled, frames received with VLAN IDs that do not match the VLAN membership of the receiving interface are admitted and forwarded to ports that are members of that VLAN.

Format no vlan port ingressfilter all
Mode Global Config

2.3.12 vlan port pvid all

This command changes the VLAN ID for all interface.

Default 1
Format vlan port pvid all <1-4094>
Mode Global Config

2.3.12.1 no vlan port pvid all

This command sets the VLAN ID for all interfaces to 1.

Format no vlan port pvid all
Mode Global Config



2.3.13 vlan port tagging all

This command configures the tagging behavior for all interfaces in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format `vlan port tagging all <1-4094>`

Mode Global Config

2.3.13.1 no vlan port tagging all

This command configures the tagging behavior for all interfaces in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format `no vlan port tagging all`

Mode Global Config

2.3.14 vlan protocol group

This command adds protocol-based VLAN groups to the system. The *<groupName>* is a character string of 1 to 16 characters. When it is created, the protocol group will be assigned a unique number that will be used to identify the group in subsequent commands.

Format `vlan protocol group <groupname>`

Mode Global Config

2.3.15 vlan protocol group add protocol

This command adds the *<protocol>* to the protocol-based VLAN identified by *<groupid>*. A group may have more than one protocol associated with it. Each interface and protocol combination can only be associated with one group. If adding a protocol to a group causes any conflicts with interfaces currently associated with the group, this command fails and the protocol is not added to the group. The possible values for protocol are *ip*, *arp*, and *ipx*.



Note: FASTPATH software supports IPv4 protocol-based VLANs.

Default none

Format `vlan protocol group add protocol <groupid> <protocol>`

Mode Global Config

2.3.15.1 no vlan protocol group add protocol

This command removes the *<protocol>* from this protocol-based VLAN group that is identified by this *<groupid>*. The possible values for protocol are *ip*, *arp*, and *ipx*.

Format `no vlan protocol group add protocol <groupid> <protocol>`

Mode Global Config



2.3.16 `vlan protocol group remove`

This command removes the protocol-based VLAN group that is identified by this `<groupid>`.

Format `vlan protocol group remove <groupid>`

Mode Global Config

2.3.17 `protocol group`

This command attaches a `<vlanid>` to the protocol-based VLAN identified by `<groupid>`. A group may only be associated with one VLAN at a time, however the VLAN association can be changed.

Default none

Format `protocol group <groupid> <vlanid>`

Mode VLAN Config

2.3.17.1 `no protocol group`

This command removes the `<vlanid>` from this protocol-based VLAN group that is identified by this `<groupid>`.

Format `no protocol group <groupid> <vlanid>`

Mode VLAN Config

2.3.18 `protocol vlan group`

This command adds the physical interface to the protocol-based VLAN identified by `<groupid>`. You can associate multiple interfaces with a group, but you can only associate each interface and protocol combination with one group. If adding an interface to a group causes any conflicts with protocols currently associated with the group, this command fails and the interface(s) are not added to the group.

Default none

Format `protocol vlan group <groupid>`

Mode Interface Config

2.3.18.1 `no protocol vlan group`

This command removes the interface from this protocol-based VLAN group that is identified by this `<groupid>`.

Format `no protocol vlan group <groupid>`

Mode Interface Config

2.3.19 `protocol vlan group all`

This command adds all physical interfaces to the protocol-based VLAN identified by `<groupid>`. You can associate multiple interfaces with a group, but you can only associate each interface and protocol combination with one group. If adding an interface to a group causes any conflicts with protocols currently associated with the group, this command will fail and the interface(s) will not be added to the group.

Default none



Format `protocol vlan group all <groupid>`

Mode Global Config

2.3.19.1 no protocol vlan group all

This command removes all interfaces from this protocol-based VLAN group that is identified by this *<groupid>*.

Format `no protocol vlan group all <groupid>`

Mode Global Config

2.3.20 vlan pvid

This command changes the VLAN ID per interface.

Default 1

Format `vlan pvid <1-4094>`

Mode Interface Config

2.3.20.1 no vlan pvid

This command sets the VLAN ID per interface to 1.

Format `no vlan pvid`

Mode Interface Config

2.3.21 vlan tagging

This command configures the tagging behavior for a specific interface in a VLAN to enabled. If tagging is enabled, traffic is transmitted as tagged frames. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format `vlan tagging <1-4094>`

Mode Interface Config

2.3.21.1 no vlan tagging

This command configures the tagging behavior for a specific interface in a VLAN to disabled. If tagging is disabled, traffic is transmitted as untagged frames. The ID is a valid VLAN identification number.

Format `no vlan tagging <1-4094>`

Mode Interface Config

2.3.22 vlan association subnet

This command associates a VLAN to a specific IP-subnet.

Format `vlan association subnet <ipaddr> <netmask> <vlanid>`

Mode VLAN Config



2.3.22.1 no vlan association subnet

This command removes association of a specific IP-subnet to a VLAN.

Format `no vlan association subnet <ipaddr> <netmask>`

Mode VLAN Config

2.3.23 vlan association mac

This command associates a MAC address to a VLAN.

Format `vlan association mac <macaddr> <vlanid>`

Mode VLAN database

2.3.23.1 no vlan association mac

This command removes the association of a MAC address to a VLAN.

Format `no vlan association mac <macaddr>`

Mode VLAN database

2.3.24 show vlan

This command displays detailed information, including interface information, for a specific VLAN. The ID is a valid VLAN identification number.

Format `show vlan <vlanid>`

Mode

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN. The range of the VLAN ID is 1 to 4094.
VLAN Name	A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of "Default." This field is optional.
VLAN Type	Type of VLAN, which can be Default (VLAN ID = 1) or static (one that is configured and permanently defined), or Dynamic (one that is created by GVRP registration).
Interface	Valid slot and port number separated by a forward slash. It is possible to set the parameters for all ports by using the selectors on the top line.
Current	The degree of participation of this port in this VLAN. The permissible values are: <ul style="list-style-type: none"> • Include - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard. • Exclude - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard. • Autodetect - To allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.



<i>Term</i>	<i>Definition</i>
Configured	The configured degree of participation of this port in this VLAN. The permissible values are: <ul style="list-style-type: none"> • Include - This port is always a member of this VLAN. This is equivalent to registration fixed in the IEEE 802.1Q standard. • Exclude - This port is never a member of this VLAN. This is equivalent to registration forbidden in the IEEE 802.1Q standard. • Autodetect - To allow the port to be dynamically registered in this VLAN via GVRP. The port will not participate in this VLAN unless a join request is received on this port. This is equivalent to registration normal in the IEEE 802.1Q standard.
Tagging	The tagging behavior for this port in this VLAN. <ul style="list-style-type: none"> • Tagged - Transmit traffic for this VLAN as tagged frames. • Untagged - Transmit traffic for this VLAN as untagged frames.

2.3.25 show vlan brief

This command displays a list of all configured VLANs.

Format	<code>show vlan brief</code>
Mode	<ul style="list-style-type: none"> • Privileged EXEC • User EXEC

<i>Term</i>	<i>Definition</i>
VLAN ID	There is a VLAN Identifier (vlanid) associated with each VLAN. The range of the VLAN ID is 1 to 4094.
VLAN Name	A string associated with this VLAN as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. VLAN ID 1 always has a name of "Default." This field is optional.
VLAN Type	Type of VLAN, which can be Default (VLAN ID = 1) or static (one that is configured and permanently defined), or a Dynamic (one that is created by GVRP registration).

2.3.26 show vlan port

This command displays VLAN port information.

Format	<code>show vlan port {<slot/port> all}</code>
Mode	<ul style="list-style-type: none"> • Privileged EXEC • User EXEC

<i>Term</i>	<i>Definition</i>
Interface	Valid slot and port number separated by a forward slash. It is possible to set the parameters for all ports by using the selectors on the top line.
Port VLAN ID	The VLAN ID that this port will assign to untagged frames or priority tagged frames received on this port. The value must be for an existing VLAN. The factory default is 1.
Acceptable Frame Types	The types of frames that may be received on this port. The options are 'VLAN only' and 'Admit All'. When set to 'VLAN only', untagged frames or priority tagged frames received on this port are discarded. When set to 'Admit All', untagged frames or priority tagged frames received on this port are accepted and assigned the value of the Port VLAN ID for this port. With either option, VLAN tagged frames are forwarded in accordance to the 802.1Q VLAN specification.



<i>Term</i>	<i>Definition</i>
Ingress Filtering	May be enabled or disabled. When enabled, the frame is discarded if this port is not a member of the VLAN with which this frame is associated. In a tagged frame, the VLAN is identified by the VLAN ID in the tag. In an untagged frame, the VLAN is the Port VLAN ID specified for the port that received this frame. When disabled, all frames are forwarded in accordance with the 802.1Q VLAN bridge specification. The factory default is disabled.
GVRP	May be enabled or disabled.
Default Priority	The 802.1p priority assigned to tagged packets arriving on the port.

2.3.27 show vlan association subnet

This command displays the VLAN associated with a specific configured IP-Address and net mask. If no IP address and net mask are specified, the VLAN associations of all the configured IP-subnets are displayed.

Format `show vlan association subnet [<ipaddr> <netmask>]`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
IP Address	The IP address assigned to each interface.
Net Mask	The subnet mask.
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN.

2.3.28 show vlan association mac

This command displays the VLAN associated with a specific configured MAC address. If no MAC address is specified, the VLAN associations of all the configured MAC addresses are displayed.

Format `show vlan association mac [<macaddr>]`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Mac Address	A MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address will be displayed as 8 bytes.
VLAN ID	There is a VLAN Identifier (VID) associated with each VLAN.

2.4 Double VLAN Commands

This section describes the commands you use to configure double VLAN (DVLAN). Double VLAN tagging is a way to pass VLAN traffic from one customer domain to another through a Metro Core in a simple and cost effective manner. The additional tag on the traffic helps differentiate between customers in the MAN while preserving the VLAN identification of the individual customers when they enter their own 802.1Q domain.

2.4.1 dvlan-tunnel ether-type

This command configures the ether-type for all interfaces. The ether-type may have the values of *802.1Q*, *vMAN*, or *custom*. If the ether-type has a value of *custom*, the optional value of the custom ether type must be set to a value from 0 to 65535.



Default	vman
Format	<code>dvlan-tunnel ethertype {802.1Q vman custom} [0-65535]</code>
Mode	Global Config

2.4.2 mode dot1q-tunnel

This command is used to enable Double VLAN Tunneling on the specified interface.

Default	disabled
Format	<code>mode dot1q-tunnel</code>
Mode	Interface Config

2.4.2.1 no mode dot1q-tunnel

This command is used to disable Double VLAN Tunneling on the specified interface. By default, Double VLAN Tunneling is disabled.

Format	<code>no mode dot1q-tunnel</code>
Mode	Interface Config

2.4.3 mode dvlan-tunnel

Use this command to enable Double VLAN Tunneling on the specified interface.



Note: When you use the `mode dvlan-tunnel` command on an interface, it becomes a service provider port. Ports that do not have double VLAN tunneling enabled are customer ports.

Default	disabled
Format	<code>mode dvlan-tunnel</code>
Mode	Interface Config

2.4.3.1 no mode dvlan-tunnel

This command is used to disable Double VLAN Tunneling on the specified interface. By default, Double VLAN Tunneling is disabled.

Format	<code>no mode dvlan-tunnel</code>
Mode	Interface Config

2.4.4 show dot1q-tunnel

Use this command without the optional parameters to display all interfaces enabled for Double VLAN Tunneling. Use the optional parameters to display detailed information about Double VLAN Tunneling for the specified interface or all interfaces.

Format	<code>show dot1q-tunnel [interface {<slot/port> all}]</code>
---------------	--



- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Valid slot and port number separated by a forward slash.
Mode	The administrative mode through which Double VLAN Tunneling can be enabled or disabled. The default value for this field is disabled.
EtherType	A 2-byte hex EtherType to be used as the first 16 bits of the DVLAN tunnel. There are three different EtherType tags. The first is 802.1Q, which represents the commonly used value of 0x8100. The second is vMAN, which represents the commonly used value of 0x88A8. If EtherType is not one of these two values, then it is a custom tunnel value, representing any value in the range of 0 to 65535.

2.4.5 show dvlan-tunnel

Use this command without the optional parameters to display all interfaces enabled for Double VLAN Tunneling. Use the optional parameters to display detailed information about Double VLAN Tunneling for the specified interface or all interfaces.

- Format** `show dvlan-tunnel [interface {<slot/port> | all}]`
- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Valid slot and port number separated by a forward slash.
Mode	The administrative mode through which Double VLAN Tunneling can be enabled or disabled. The default value for this field is disabled.
EtherType	A 2-byte hex EtherType to be used as the first 16 bits of the DVLAN tunnel. There are three different EtherType tags. The first is 802.1Q, which represents the commonly used value of 0x8100. The second is vMAN, which represents the commonly used value of 0x88A8. If EtherType is not one of these two values, then it is a custom tunnel value, representing any value in the range of 0 to 65535.

2.5 Voice VLAN Commands

This section describes the commands you use for Voice VLAN. Voice VLAN enables switch ports to carry voice traffic with defined priority so as to enable separation of voice and data traffic coming onto the port. The benefits of using Voice VLAN is to ensure that the sound quality of an IP phone could be safeguarded from deteriorating when the data traffic on the port is high.

Also the inherent isolation provided by VLANs ensures that inter-VLAN traffic is under management control and that network- attached clients cannot initiate a direct attack on voice components. QoS-based on IEEE 802.1P class of service (CoS) uses classification and scheduling to sent network traffic from the switch in a predictable manner. The system uses the source MAC of the traffic traveling through the port to identify the IP phone data flow.

2.5.1 voice vlan (Global Config)

Use this command to enable the Voice VLAN capability on the switch.



Default disabled
Format `voice vlan`
Mode Global Config

2.5.1.1 no voice vlan (Global Config)

Use this command to disable the Voice VLAN capability on the switch.

Format `no voice vlan`
Mode Global Config

2.5.2 voice vlan (Interface Config)

Use this command to enable the Voice VLAN capability on the interface.

Default disabled
Format `voice vlan {vlanid <id> | dot1p <priority> | none | untagged}`
Mode Interface Config

You can configure Voice VLAN in one of four different ways:

<i>Parameter</i>	<i>Description</i>
vlan-id	Configure the IP phone to forward all voice traffic through the specified VLAN. Valid VLAN ID's are from 1 to 4094 (the max supported by the platform).
dot1p	Configure the IP phone to use 802.1p priority tagging for voice traffic and to use the default native VLAN (VLAN 0) to carry all traffic. Valid <priority> range is 0 to 7.
none	Allow the IP phone to use its own configuration to send untagged voice traffic.
untagged	Configure the phone to send untagged voice traffic.

2.5.2.1 no voice vlan (Interface Config)

Use this command to disable the Voice VLAN capability on the interface.

Format `no voice vlan`
Mode Interface Config

2.5.3 voice vlan data priority

Use this command to either trust or untrust the data traffic arriving on the Voice VLAN port.

Default trust
Format `voice vlan data priority untrust | trust`
Mode Interface Config

2.5.4 show voice vlan

Format `show voice vlan [interface {<slot/port> | all}]`



Mode Privileged EXEC

When the `interface` parameter is not specified, only the global mode of the Voice VLAN is displayed.

<i>Term</i>	<i>Definition</i>
Administrative Mode	The Global Voice VLAN mode.

When the `interface` is specified:

<i>Term</i>	<i>Definition</i>
Voice VLAN Mode	The admin mode of the Voice VLAN on the interface.
Voice VLAN ID	The Voice VLAN ID
Voice VLAN Priority	The do1p priority for the Voice VLAN on the port.
Voice VLAN Untagged	The tagging option for the Voice VLAN traffic.
Voice VLAN CoS Override	The Override option for the voice traffic arriving on the port.
Voice VLAN Status	The operational status of Voice VLAN on the port.

2.6 Provisioning (IEEE 802.1p) Commands

This section describes the commands you use to configure provisioning, which allows you to prioritize ports.

2.6.1 `vlan port priority all`

This command configures the port priority assigned for untagged packets for all ports presently plugged into the device. The range for the priority is 0-7. Any subsequent per port configuration will override this configuration setting.

Format `vlan port priority all <priority>`
Mode Global Config

2.6.2 `vlan priority`

This command configures the default 802.1p port priority assigned for untagged packets for a specific interface. The range for the priority is 0-7.

Default 0
Format `vlan priority <priority>`
Mode Interface Config

2.7 Protected Ports Commands

This section describes commands you use to configure and view protected ports on a switch. Protected ports do not forward traffic to each other, even if they are on the same VLAN. However, protected ports can forward traffic to all unprotected ports in their group. Unprotected ports can forward traffic to both protected and unprotected ports. Ports are unprotected by default.



If an interface is configured as a protected port, and you add that interface to a Port Channel or Link Aggregation Group (LAG), the protected port status becomes operationally disabled on the interface, and the interface follows the configuration of the LAG port. However, the protected port configuration for the interface remains unchanged. Once the interface is no longer a member of a LAG, the current configuration for that interface automatically becomes effective.

2.7.1 switchport protected (Global Config)

Use this command to create a protected port group. The *<groupid>* parameter identifies the set of protected ports. Use the *name <name>* pair to assign a name to the protected port group. The name can be up to 32 alphanumeric characters long, including blanks. The default is blank.



Note: Port protection occurs within a single switch. Protected port configuration does not affect traffic between ports on two different switches. No traffic forwarding is possible between two protected ports.

Default unprotected
Format **switchport protected** *<groupid>* name *<name>*
Mode Global Config

2.7.1.1 no switchport protected (Global Config)

Use this command to remove a protected port group. The *groupid* parameter identifies the set of protected ports. Use the **name** keyword to remove the name from the group.

Format **NO switchport protected** *<groupid>* name
Mode Global Config

2.7.2 switchport protected (Interface Config)

Use this command to add an interface to a protected port group. The *<groupid>* parameter identifies the set of protected ports to which this interface is assigned. You can only configure an interface as protected in one group.



Note: Port protection occurs within a single switch. Protected port configuration does not affect traffic between ports on two different switches. No traffic forwarding is possible between two protected ports.

Default unprotected
Format **switchport protected** *<groupid>*
Mode Interface Config

2.7.2.1 no switchport protected (Interface Config)

Use this command to configure a port as unprotected. The *groupid* parameter identifies the set of protected ports to which this interface is assigned.

Format **no switchport protected** *<groupid>*
Mode Interface Config



2.7.3 show switchport protected

This command displays the status of all the interfaces, including protected and unprotected interfaces.

Format `show switchport protected <groupid>`

- Mode**
- Privileged EXEC
 - User EXEC

<i>Term</i>	<i>Definition</i>
Group ID	The number that identifies the protected port group.
Name	An optional name of the protected port group. The name can be up to 32 alphanumeric characters long, including blanks. The default is blank.
List of Physical Ports	List of ports, which are configured as protected for the group identified with <groupid>. If no port is configured as protected for this group, this field is blank.

2.7.4 show interfaces switchport

This command displays the status of the interface (protected/unprotected) under the groupid.

Format `show interfaces switchport <slot/port> <groupid>`

- Mode**
- Privileged EXEC
 - User EXEC

<i>Term</i>	<i>Definition</i>
Name	A string associated with this group as a convenience. It can be up to 32 alphanumeric characters long, including blanks. The default is blank. This field is optional.
Protected	Indicates whether the interface is protected or not. It shows TRUE or FALSE. If the group is a multiple groups then it shows TRUE in Group <groupid>.

2.8 GARP Commands

This section describes the commands you use to configure Generic Attribute Registration Protocol (GARP) and view GARP status. The commands in this section affect both GARP VLAN Registration Protocol (GVRP) and Garp Multicast Registration Protocol (GMRP). GARP is a protocol that allows client stations to register with the switch for membership in VLANs (by using GVMP) or multicast groups (by using GVMP).

2.8.1 set garp timer join

This command sets the GVRP join time for one port (Interface Config mode) or all (Global Config mode) and per GARP. Join time is the interval between the transmission of GARP Protocol Data Units (PDUs) registering (or re-registering) membership for a VLAN or multicast group. This command has an effect only when GVRP is enabled. The time is from 10 to 100 (centiseconds). The value 20 centiseconds is 0.2 seconds.

Default 20

Format `set garp timer join <10-100>`

- Mode**
- Interface Config
 - Global Config



2.8.1.1 no set garp timer join

This command sets the GVRP join time (for one or all ports and per GARP) to the default and only has an effect when GVRP is enabled.

Format `no set garp timer join`

Mode • Interface Config
 • Global Config

2.8.2 set garp timer leave

This command sets the GVRP leave time for one port (Interface Config mode) or all ports (Global Config mode) and only has an effect when GVRP is enabled. Leave time is the time to wait after receiving an unregister request for a VLAN or a multicast group before deleting the VLAN entry. This can be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. The leave time is 20 to 600 (centiseconds). The value 60 centiseconds is 0.6 seconds.

Default 60

Format `set garp timer leave <20-600>`

Mode • Interface Config
 • Global Config

2.8.2.1 no set garp timer leave

This command sets the GVRP leave time on all ports or a single port to the default and only has an effect when GVRP is enabled.

Format `no set garp timer leave`

Mode • Interface Config
 • Global Config

2.8.3 set garp timer leaveall

This command sets how frequently Leave All PDUs are generated. A Leave All PDU indicates that all registrations will be unregistered. Participants would need to rejoin in order to maintain registration. The value applies per port and per GARP participation. The time may range from 200 to 6000 (centiseconds). The value 1000 centiseconds is 10 seconds. You can use this command on all ports (Global Config mode) or a single port (Interface Config mode), and it only has an effect only when GVRP is enabled.

Default 1000

Format `set garp timer leaveall <200-6000>`

Mode • Interface Config
 • Global Config

2.8.3.1 no set garp timer leaveall

This command sets how frequently Leave All PDUs are generated the default and only has an effect when GVRP is enabled.

Format `no set garp timer leaveall`



- Mode**
- Interface Config
 - Global Config

2.8.4 show garp

This command displays GARP information.

- Format** `show garp`
- Mode**
- Privileged EXEC
 - User EXEC

<i>Term</i>	<i>Definition</i>
GMRP Admin Mode	The administrative mode of GARP Multicast Registration Protocol (GMRP) for the system.
GVRP Admin Mode	The administrative mode of GARP VLAN Registration Protocol (GVRP) for the system.

2.9 GVRP Commands

This section describes the commands you use to configure and view GARP VLAN Registration Protocol (GVRP) information. GVRP-enabled switches exchange VLAN configuration information, which allows GVRP to provide dynamic VLAN creation on trunk ports and automatic VLAN pruning.



Note: If GVRP is disabled, the system does not forward GVRP messages.

2.9.1 set gvrp adminmode

This command enables GVRP on the system.

- Default** disabled
- Format** `set gvrp adminmode`
- Mode** Privileged EXEC

2.9.1.1 no set gvrp adminmode

This command disables GVRP.

- Format** `no set gvrp adminmode`
- Mode** Privileged EXEC

2.9.2 set gvrp interfacemode

This command enables GVRP on a single port (Interface Config mode) or all ports (Global Config mode).

- Default** disabled
- Format** `set gvrp interfacemode`
- Mode**
- Interface Config
 - Global Config



2.9.2.1 no set gvrp interfacemode

This command disables GVRP on a single port (Interface Config mode) or all ports (Global Config mode). If GVRP is disabled, Join Time, Leave Time and Leave All Time have no effect.

Format `no set gvrp interfacemode`

- Mode**
- Interface Config
 - Global Config

2.9.3 show gvrp configuration

This command displays Generic Attributes Registration Protocol (GARP) information for one or all interfaces.

Format `show gvrp configuration {<slot/port> | all}`

- Mode**
- Privileged EXEC
 - User EXEC

Term	Definition
Interface	Valid slot and port number separated by a forward slash.
Join Timer	The interval between the transmission of GARP PDUs registering (or re-registering) membership for an attribute. Current attributes are a VLAN or multicast group. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is one centisecond (0.01 seconds).
Leave Timer	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. Current attributes are a VLAN or multicast group. This may be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 60 centiseconds (0.6 seconds).
LeaveAll Timer	This Leave All Time controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration. There is an instance of this timer on a per-Port, per-GARP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 1000 centiseconds (10 seconds).
Port GMRP Mode	The GMRP administrative mode for the port, which is enabled or disabled (default). If this parameter is disabled, Join Time, Leave Time and Leave All Time have no effect.

2.10 GMRP Commands

This section describes the commands you use to configure and view GARP Multicast Registration Protocol (GMRP) information. Like IGMP snooping, GMRP helps control the flooding of multicast packets. GMRP-enabled switches dynamically register and de-register group membership information with the MAC networking devices attached to the same segment. GMRP also allows group membership information to propagate across all networking devices in the bridged LAN that support Extended Filtering Services.



Note: If GMRP is disabled, the system does not forward GMRP messages.



2.10.1 set gmrp adminmode

This command enables GARP Multicast Registration Protocol (GMRP) on the system.

Default disabled
Format `set gmrp adminmode`
Mode Privileged EXEC

2.10.1.1 no set gmrp adminmode

This command disables GARP Multicast Registration Protocol (GMRP) on the system.

Format `no set gmrp adminmode`
Mode Privileged EXEC

2.10.2 set gmrp interfacemode

This command enables GARP Multicast Registration Protocol on a single interface (Interface Config mode) or all interfaces (Global Config mode). If an interface which has GARP enabled is enabled for routing or is enlisted as a member of a port-channel (LAG), GARP functionality is disabled on that interface. GARP functionality is subsequently re-enabled if routing is disabled and port-channel (LAG) membership is removed from an interface that has GARP enabled.

Default disabled
Format `set gmrp interfacemode`
Mode

- Interface Config
- Global Config

2.10.2.1 no set gmrp interfacemode

This command disables GARP Multicast Registration Protocol on a single interface or all interfaces. If an interface which has GARP enabled is enabled for routing or is enlisted as a member of a port-channel (LAG), GARP functionality is disabled. GARP functionality is subsequently re-enabled if routing is disabled and port-channel (LAG) membership is removed from an interface that has GARP enabled.

Format `no set gmrp interfacemode`
Mode

- Interface Config
- Global Config

2.10.3 show gmrp configuration

This command displays Generic Attributes Registration Protocol (GARP) information for one or all interfaces.

Format `show gmrp configuration {<slot/port> | all}`
Mode

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
Interface	The slot/port of the interface that this row in the table describes.



Term	Definition
Join Timer	The interval between the transmission of GARP PDUs registering (or re-registering) membership for an attribute. Current attributes are a VLAN or multicast group. There is an instance of this timer on a per-port, per-GARP participant basis. Permissible values are 10 to 100 centiseconds (0.1 to 1.0 seconds). The factory default is 20 centiseconds (0.2 seconds). The finest granularity of specification is 1 centisecond (0.01 seconds).
Leave Timer	The period of time to wait after receiving an unregister request for an attribute before deleting the attribute. Current attributes are a VLAN or multicast group. This may be considered a buffer time for another station to assert registration for the same attribute in order to maintain uninterrupted service. There is an instance of this timer on a per-Port, per-GARP participant basis. Permissible values are 20 to 600 centiseconds (0.2 to 6.0 seconds). The factory default is 60 centiseconds (0.6 seconds).
LeaveAll Timer	This Leave All Time controls how frequently LeaveAll PDUs are generated. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration. There is an instance of this timer on a per-Port, per-GARP participant basis. The Leave All Period Timer is set to a random value in the range of LeaveAllTime to 1.5*LeaveAllTime. Permissible values are 200 to 6000 centiseconds (2 to 60 seconds). The factory default is 1000 centiseconds (10 seconds).
Port GMRP Mode	The GMRP administrative mode for the port. It may be enabled or disabled. If this parameter is disabled, Join Time, Leave Time and Leave All Time have no effect.

2.10.4 show mac-address-table gmrp

This command displays the GMRP entries in the Multicast Forwarding Database (MFDB) table.

Format `show mac-address-table gmrp`

Mode Privileged EXEC

Term	Definition
Mac Address	A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address is displayed as 8 bytes.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

2.11 Port-Based Network Access Control Commands

This section describes the commands you use to configure port-based network access control (802.1x). Port-based network access control allows you to permit access to network services only to and devices that are authorized and authenticated.

2.11.1 authentication login

This command creates an authentication login list. The `<listname>` is any character string and is not case sensitive. Up to 10 authentication login lists can be configured on the switch. When a list is created, the authentication method "local" is set as the first method.

When the optional parameters "Option1", "Option2" and/or "Option3" are used, an ordered list of methods are set in the authentication login list. If the authentication login list does not exist, a new authentication login list is first created



and then the authentication methods are set in the authentication login list. The maximum number of authentication login methods is three. The possible method values are `local`, `radius` and `reject`.

The value of `local` indicates that the user's locally stored ID and password are used for authentication. The value of `radius` indicates that the user's ID and password will be authenticated using the RADIUS server. The value of `reject` indicates the user is never authenticated.

To authenticate a user, the first authentication method in the user's login (authentication login list) is attempted. FASTPATH software does not utilize multiple entries in the user's login. If the first entry returns a timeout, the user authentication attempt fails.



Note: The default login list included with the default configuration can not be changed.

Format `authentication login <listname> [<method1> [<method2> [<method3>]]]`
Mode Global Config

2.11.1.1 no authentication login

This command deletes the specified authentication login list. The attempt to delete fails if any of the following conditions are true:

- The login list name is invalid or does not match an existing authentication login list
- The specified authentication login list is assigned to any user or to the non configured user for any component
- The login list is the default login list included with the default configuration and was not created using 'authentication login'. The default login list cannot be deleted.

Format `no authentication login <listname>`
Mode Global Config

2.11.2 clear dot1x statistics

This command resets the 802.1x statistics for the specified port or for all ports.

Format `clear dot1x statistics {<slot/port> | all}`
Mode Privileged EXEC

2.11.3 clear radius statistics

This command is used to clear all RADIUS statistics.

Format `clear radius statistics`
Mode Privileged EXEC

2.11.4 dot1x default-login

This command assigns the authentication login list to use for non-configured users for 802.1x port security. This setting is over-riden by the authentication login list assigned to a specific user if the user is configured locally. If this value is not configured, users will be authenticated using local authentication only.



Format `dot1x default-login <listname>`
Mode Global Config

2.11.5 dot1x guest-vlan

This command configures VLAN as guest vlan on a per port basis. The command specifies an active VLAN as an IEEE 802.1x guest VLAN. The range is 1 to the maximum VLAN ID supported by the platform.

Default disabled
Format `dot1x guest-vlan <vlan-id>`
Mode Interface Config

2.11.5.1 no dot1x guest-vlan

This command disables Guest VLAN on the interface.

Default disabled
Format `no dot1x guest-vlan`
Mode Interface Config

2.11.6 dot1x guest-vlan supplicant

This command configures Guest VLAN to be assigned to supplicants that have failed authentication.

Default disabled
Format `dot1x guest-vlan supplicant`
Mode Global Config

2.11.6.1 no dot1x guest-vlan supplicant

This command disables Guest VLAN supplicant on the switch.

Default disabled
Format `no dot1x guest-vlan supplicant`
Mode Global Config

2.11.7 dot1x initialize

This command begins the initialization sequence on the specified port. This command is only valid if the control mode for the specified port is 'auto'. If the control mode is not 'auto' an error will be returned.

Format `dot1x initialize <slot/port>`
Mode Privileged EXEC



2.11.8 dot1x login

This command assigns the specified authentication login list to the specified user for 802.1x port security. The *<user>* parameter must be a configured user and the *<listname>* parameter must be a configured authentication login list.

Format `dot1x login <user> <listname>`
Mode Global Config

2.11.9 dot1x max-req

This command sets the maximum number of times the authenticator state machine on this port will transmit an EAPOL EAP Request/Identity frame before timing out the supplicant. The *<count>* value must be in the range 1 - 10.

Default 2
Format `dot1x max-req <count>`
Mode Interface Config

2.11.9.1 no dot1x max-req

This command sets the maximum number of times the authenticator state machine on this port will transmit an EAPOL EAP Request/Identity frame before timing out the supplicant.

Format `no dot1x max-req`
Mode Interface Config

2.11.10 dot1x port-control

This command sets the authentication mode to use on the specified port. Select *force-unauthorized* to specify that the authenticator PAE unconditionally sets the controlled port to unauthorized. Select *force-authorized* to specify that the authenticator PAE unconditionally sets the controlled port to authorized. Select *auto* to specify that the authenticator PAE sets the controlled port mode to reflect the outcome of the authentication exchanges between the supplicant, authenticator and the authentication server.

Default auto
Format `dot1x port-control {force-unauthorized | force-authorized | auto}`
Mode Interface Config

2.11.10.1 no dot1x port-control

This command sets the authentication mode on the specified port to the default value.

Format `no dot1x port-control`
Mode Interface Config



2.11.11 dot1x port-control all

This command sets the authentication mode to use on all ports. Select *force-unauthorized* to specify that the authenticator PAE unconditionally sets the controlled port to unauthorized. Select *force-authorized* to specify that the authenticator PAE unconditionally sets the controlled port to authorized. Select *auto* to specify that the authenticator PAE sets the controlled port mode to reflect the outcome of the authentication exchanges between the supplicant, authenticator and the authentication server.

Default auto
Format `dot1x port-control all {force-unauthorized | force-authorized | auto}`
Mode Global Config

2.11.11.1 no dot1x port-control all

This command sets the authentication mode on all ports to the default value.

Format `no dot1x port-control all`
Mode Global Config

2.11.12 dot1x re-authenticate

This command begins the re-authentication sequence on the specified port. This command is only valid if the control mode for the specified port is 'auto'. If the control mode is not 'auto' an error will be returned.

Format `dot1x re-authenticate <slot/port>`
Mode Privileged EXEC

2.11.13 dot1x re-authentication

This command enables re-authentication of the supplicant for the specified port.

Default disabled
Format `dot1x re-authentication`
Mode Interface Config

2.11.13.1 no dot1x re-authentication

This command disables re-authentication of the supplicant for the specified port.

Format `no dot1x re-authentication`
Mode Interface Config

2.11.14 dot1x system-auth-control

Use this command to enable the dot1x authentication support on the switch. While disabled, the dot1x configuration is retained and can be changed, but is not activated.

Default disabled
Format `dot1x system-auth-control`



Mode Global Config

2.11.14.1 no dot1x system-auth-control

This command is used to disable the dot1x authentication support on the switch.

Format `no dot1x system-auth-control`

Mode Global Config

2.11.15 dot1x timeout

This command sets the value, in seconds, of the timer used by the authenticator state machine on this port. Depending on the token used and the value (in seconds) passed, various timeout configurable parameters are set. The following tokens are supported:

Tokens	Definition
reauth-period	The value, in seconds, of the timer used by the authenticator state machine on this port to determine when re-authentication of the supplicant takes place. The reauth-period must be a value in the range 1 - 65535.
quiet-period	The value, in seconds, of the timer used by the authenticator state machine on this port to define periods of time in which it will not attempt to acquire a supplicant. The quiet-period must be a value in the range 0 - 65535.
tx-period	The value, in seconds, of the timer used by the authenticator state machine on this port to determine when to send an EAPOL EAP Request/Identity frame to the supplicant. The quiet-period must be a value in the range 1 - 65535.
supp-timeout	The value, in seconds, of the timer used by the authenticator state machine on this port to timeout the supplicant. The supp-timeout must be a value in the range 1 - 65535.
server-timeout	The value, in seconds, of the timer used by the authenticator state machine on this port to timeout the authentication server. The supp-timeout must be a value in the range 1 - 65535.

Default

- reauth-period: 3600 seconds
- quiet-period: 60 seconds
- tx-period: 30 seconds
- supp-timeout: 30 seconds
- server-timeout: 30 seconds

Format `dot1x timeout {{reauth-period <seconds>} | {quiet-period <seconds>} | {tx-period <seconds>} | {supp-timeout <seconds>} | {server-timeout <seconds>}}`

Mode Interface Config

2.11.15.1 no dot1x timeout

This command sets the value, in seconds, of the timer used by the authenticator state machine on this port to the default values. Depending on the token used, the corresponding default values are set.

Format `no dot1x timeout {reauth-period | quiet-period | tx-period | supp-timeout | server-timeout}`

Mode Interface Config



2.11.16 dot1x user

This command adds the specified user to the list of users with access to the specified port or all ports. The *<user>* parameter must be a configured user.

Format `dot1x user <user> {<slot/port> | all}`
Mode Global Config

2.11.16.1 no dot1x user

This command removes the user from the list of users with access to the specified port or all ports.

Format `no dot1x user <user> {<slot/port> | all}`
Mode Global Config

2.11.17 users defaultlogin

This command assigns the authentication login list to use for non-configured users when attempting to log in to the system. This setting is overridden by the authentication login list assigned to a specific user if the user is configured locally. If this value is not configured, users will be authenticated using local authentication only.

Format `users defaultlogin <listname>`
Mode Global Config

2.11.18 users login

This command assigns the specified authentication login list to the specified user for system login. The *<user>* must be a configured *<user>* and the *<listname>* must be a configured login list.

If the user is assigned a login list that requires remote authentication, all access to the interface from all CLI, web, and telnet sessions will be blocked until the authentication is complete.

Note that the login list associated with the 'admin' user can not be changed to prevent accidental lockout from the switch.

Format `users login <user> <listname>`
Mode Global Config

2.11.19 show authentication

This command displays the ordered authentication methods for all authentication login lists.

Format `show authentication`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Authentication Login List	The authentication login listname.
Method 1	The first method in the specified authentication login list, if any.



Term	Definition
Method 2	The second method in the specified authentication login list, if any.
Method 3	The third method in the specified authentication login list, if any.

2.11.20 show authentication users

This command displays information about the users assigned to the specified authentication login list. If the login is assigned to non-configured users, the user “default” will appear in the user column.

Format `show authentication users <listname>`
Mode Privileged EXEC

Term	Definition
User	The user assigned to the specified authentication login list.
Component	The component (User or 802.1x) for which the authentication login list is assigned.

2.11.21 show dot1x

This command is used to show a summary of the global dot1x configuration, summary information of the dot1x configuration for a specified port or all ports, the detailed dot1x configuration for a specified port and the dot1x statistics for a specified port - depending on the tokens used.

Format `show dot1x [{summary {<slot/port> | all} | detail <slot/port> |
statistics <slot/port>}]`
Mode Privileged EXEC

If you do not use the optional parameters *<slot/port>* or *<vlanid>*, the command displays the global dot1x mode and the Guest VLAN supplicant mode.

Term	Definition
Administrative mode	Indicates whether authentication control on the switch is enabled or disabled.
Supplicant Allowed in Guest VLAN	Indicates whether Guest VLAN is enabled or disabled.

If you use the optional parameter *summary {<slot/port> | all}*, the dot1x configuration for the specified port or all ports are displayed.

Term	Definition
Port	The interface whose configuration is displayed.
Control Mode	The configured control mode for this port. Possible values are force-unauthorized force-authorized auto.
Operating Control Mode	The control mode under which this port is operating. Possible values are authorized unauthorized.
Reauthentication Enabled	Indicates whether re-authentication is enabled on this port.
Key Transmission Enabled	Indicates if the key is transmitted to the supplicant for the specified port.

The command `show dot1x detail <slot/port>` displays guest-vlan. The configured guest-vlan ID is displayed. If the optional parameter '`detail <slot/port>`' is used, the detailed dot1x configuration for the specified port is displayed.

Term	Definition
Port	The interface whose configuration is displayed.
Protocol Version	The protocol version associated with this port. The only possible value is 1, corresponding to the first version of the dot1x specification.
PAE Capabilities	The port access entity (PAE) functionality of this port. Possible values are Authenticator or Supplicant.
Authenticator PAE State	Current state of the authenticator PAE state machine. Possible values are Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuthorized, and ForceUnauthorized.
Backend Authentication State	Current state of the backend authentication state machine. Possible values are Request, Response, Success, Fail, Timeout, Idle, and Initialize.
Quiet Period	The timer used by the authenticator state machine on this port to define periods of time in which it will not attempt to acquire a supplicant. The value is expressed in seconds and will be in the range 0 and 65535.
Transmit Period	The timer used by the authenticator state machine on the specified port to determine when to send an EAPOL EAP Request/Identity frame to the supplicant. The value is expressed in seconds and will be in the range of 1 and 65535.
Guest-VLAN ID	The guest VLAN identifier configured on the interface.
Guest-Vlan Operational Mode	Indicates whether guest-vlan operational mode is enabled or disabled.
Supplicant Timeout	The timer used by the authenticator state machine on this port to timeout the supplicant. The value is expressed in seconds and will be in the range of 1 and 65535.
Server Timeout	The timer used by the authenticator on this port to timeout the authentication server. The value is expressed in seconds and will be in the range of 1 and 65535.
Maximum Requests	The maximum number of times the authenticator state machine on this port will retransmit an EAPOL EAP Request/Identity before timing out the supplicant. The value will be in the range of 1 and 10.
Vlan-assigned	The VLAN assigned to the port by the radius server.
Reauthentication Period	The timer used by the authenticator state machine on this port to determine when reauthentication of the supplicant takes place. The value is expressed in seconds and will be in the range of 1 and 65535.
Reauthentication Enabled	Indicates if reauthentication is enabled on this port. Possible values are "True" or "False".
Key Transmission Enabled	Indicates if the key is transmitted to the supplicant for the specified port. Possible values are True or False.
Control Direction	The control direction for the specified port or ports. Possible values are both or in.

If you use the optional parameter `statistics <slot/port>`, the following dot1x statistics for the specified port appear.

Term	Definition
Port	The interface whose statistics are displayed.
EAPOL Frames Received	The number of valid EAPOL frames of any type that have been received by this authenticator.
EAPOL Frames Transmitted	The number of EAPOL frames of any type that have been transmitted by this authenticator.



Term	Definition
EAPOL Start Frames Received	The number of EAPOL start frames that have been received by this authenticator.
EAPOL Logoff Frames Received	The number of EAPOL logoff frames that have been received by this authenticator.
Last EAPOL Frame Version	The protocol version number carried in the most recently received EAPOL frame.
Last EAPOL Frame Source	The source MAC address carried in the most recently received EAPOL frame.
EAP Response/Id Frames Received	The number of EAP response/identity frames that have been received by this authenticator.
EAP Response Frames Received	The number of valid EAP response frames (other than resp/id frames) that have been received by this authenticator.
EAP Request/Id Frames Transmitted	The number of EAP request/identity frames that have been transmitted by this authenticator.
EAP Request Frames Transmitted	The number of EAP request frames (other than request/identity frames) that have been transmitted by this authenticator.
Invalid EAPOL Frames Received	The number of EAPOL frames that have been received by this authenticator in which the frame type is not recognized.
EAP Length Error Frames Received	The number of EAPOL frames that have been received by this authenticator in which the frame type is not recognized.

2.11.22 show dot1x users

This command displays 802.1x port security user information for locally configured users.

Format `show dot1x users <slot/port>`
Mode Privileged EXEC

Term	Definition
Users	Users configured locally to have access to the specified port.

2.11.23 show users authentication

This command displays all user and all authentication login information. It also displays the authentication login list assigned to the default user.

Format `show users authentication`
Mode Privileged EXEC

Term	Definition
User	Lists every user that has an authentication login list assigned.
System Login	The authentication login list assigned to the user for system login.
802.1x Port Security	The authentication login list assigned to the user for 802.1x port security.



2.12 Storm-Control Commands

This section describes commands you use to configure storm control and view storm-control configuration information. The Storm Control feature allows you to limit the rate of specific types of packets through the switch on a per-port, per-type, basis. The Storm Control feature can help maintain network performance.

2.12.1 storm-control broadcast

Use this command to enable broadcast storm recovery mode for a specific interface. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of broadcast traffic will be limited to the configured threshold.

Default disabled
Format `storm-control broadcast`
Mode Interface Config

2.12.1.1 no storm-control broadcast

Use this command to disable broadcast storm recovery mode for a specific interface.

Format `no storm-control broadcast`
Mode Interface Config

2.12.2 storm-control broadcast level

Use this command to configure the broadcast storm recovery threshold in terms of percentage of the interface speed for an interface. When you use this command, broadcast storm recovery mode is enabled on the interface and broadcast storm recovery is active. If the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic is dropped. Therefore, the rate of broadcast traffic is limited to the configured threshold.

Default 5
Format `storm-control broadcast level <0-100>`
Mode Interface Config

2.12.2.1 no storm-control broadcast level

This command sets the broadcast storm recovery threshold to the default value for an interface and disables broadcast storm recovery.

Format `no storm-control broadcast level`
Mode Interface Config

2.12.3 storm-control broadcast all

This command enables broadcast storm recovery mode for all interfaces. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of broadcast traffic will be limited to the configured threshold.



Default disabled
Format `storm-control broadcast all`
Mode Global Config

2.12.3.1 no storm-control broadcast all

This command disables broadcast storm recovery mode for all interfaces.

Format `no storm-control broadcast all`
Mode Global Config

2.12.4 storm-control broadcast all level

This command configures the broadcast storm recovery threshold in terms of percentage of the interface speed for all interfaces. If the mode is enabled, broadcast storm recovery is active, and if the rate of L2 broadcast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of broadcast traffic will be limited to the configured threshold. This command also enables broadcast storm recovery mode for all interfaces.

Default 5
Format `storm-control broadcast all level <0-100>`
Mode Global Config

2.12.4.1 no storm-control broadcast all level

This command sets the broadcast storm recovery threshold to the default value for all interfaces and disables broadcast storm recovery.

Format `no storm-control broadcast all level`
Mode Global Config

2.12.5 storm-control multicast

This command enables multicast storm recovery mode for an interface. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default disabled
Format `storm-control multicast`
Mode Interface Config

2.12.5.1 no storm-control multicast

This command disables multicast storm recovery mode for an interface.

Format `no storm-control multicast`
Mode Interface Config



2.12.6 storm-control multicast level

This command configures the multicast storm recovery threshold in terms of percentage of the interface speed for an interface and enables multicast storm recovery mode. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default 5
Format `storm-control multicast level <0-100>`
Mode Interface Config

2.12.6.1 no storm-control multicast level

This command sets the multicast storm recovery threshold to the default value for an interface and disables multicast storm recovery.

Format `no storm-control multicast level <0-100>`
Mode Interface Config

2.12.7 storm-control multicast all

This command enables multicast storm recovery mode for all interfaces. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default disabled
Format `storm-control multicast all`
Mode Global Config

2.12.7.1 no storm-control multicast all

This command disables multicast storm recovery mode for all interfaces.

Format `no storm-control multicast all`
Mode Global Config

2.12.8 storm-control multicast all level

This command configures the multicast storm recovery threshold, in terms of percentage of the interface speed, for all interfaces and enables multicast storm recovery mode. If the mode is enabled, multicast storm recovery is active, and if the rate of L2 multicast traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of multicast traffic will be limited to the configured threshold.

Default 5
Format `storm-control multicast all level <0-100>`
Mode Global Config



2.12.8.1 no storm-control multicast all level

This command sets the multicast storm recovery threshold to the default value for all interfaces and disables multicast storm recovery.

Format `no storm-control multicast all level`
Mode Global Config

2.12.9 storm-control unicast

This command enables unicast storm recovery mode for an interface. If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold.

Default disabled
Format `storm-control unicast`
Mode Interface Config

2.12.9.1 no storm-control unicast

This command disables unicast storm recovery mode for an interface.

Format `no storm-control unicast`
Mode Interface Config

2.12.10 storm-control unicast level

This command configures the unicast storm recovery threshold in terms of percentage of the interface speed for an interface, and enables unicast storm recovery. If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold. This command also enables unicast storm recovery mode for an interface.

Default 5
Format `storm-control unicast level <0-100>`
Mode Interface Config

2.12.10.1 no storm-control unicast level

This command sets the unicast storm recovery threshold to the default value for an interface and disables unicast storm recovery.

Format `no storm-control unicast level`
Mode Interface Config



2.12.11 storm-control unicast all

This command enables unicast storm recovery mode for all interfaces. If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold.

Default	disabled
Format	<code>storm-control unicast all</code>
Mode	Global Config

2.12.11.1 no storm-control unicast all

This command disables unicast storm recovery mode for all interfaces.

Format	<code>no storm-control unicast all</code>
Mode	Global Config

2.12.12 storm-control unicast all level

This command configures the unicast storm recovery threshold in terms of percentage of the interface speed for an interface, and enables unicast storm recovery for all interfaces. If the mode is enabled, unicast storm recovery is active, and if the rate of unknown L2 unicast (destination lookup failure) traffic ingressing on an interface increases beyond the configured threshold, the traffic will be dropped. Therefore, the rate of unknown unicast traffic will be limited to the configured threshold.

Default	5
Format	<code>storm-control unicast all level <0-100></code>
Mode	Global Config

2.12.12.1 no storm-control unicast all level

This command returns the unicast storm recovery threshold to the default value and disables unicast storm recovery for all interfaces.

Format	<code>no storm-control unicast all level</code>
Mode	Global Config

2.12.13 storm-control flowcontrol

This command enables 802.3x flow control for the switch and only applies to full-duplex mode ports.



Note: 802.3x flow control works by pausing a port when the port becomes oversubscribed and dropping all traffic for small bursts of time during the congestion condition. This can lead to high-priority and/or network control traffic loss.

Default	disabled
Format	<code>storm-control flowcontrol</code>
Mode	Global Config



2.12.13.1 no storm-control flowcontrol

This command disables 802.3x flow control for the switch.



Note: This command only applies to full-duplex mode ports.

Format `no storm-control flowcontrol`

Mode Global Config

2.12.14 show storm-control

This command displays switch configuration information. If you do not use any of the optional parameters, this command displays global storm control configuration parameters. Use the `all` keyword to display the per-port configuration parameters for all interfaces, or specify the `slot/port` to display information about a specific interface.

Format `show storm-control [all | <slot/port>]`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Bcast Mode	Shows whether the broadcast storm control mode is enabled or disabled.
Bcast Level	The broadcast storm control level.
Mcast Mode	Shows whether the multicast storm control mode is enabled or disabled.
Mcast Level	The multicast storm control level.
Ucast Mode	Shows whether the Unknown Unicast or DLF (Destination Lookup Failure) storm control mode is enabled or disabled.
Ucast Level	The Unknown Unicast or DLF (Destination Lookup Failure) storm control level.

2.13 Port-Channel/LAG (802.3ad) Commands

This section describes the commands you use to configure port-channels, which are also known as link aggregation groups (LAGs). Link aggregation allows you to combine multiple full-duplex Ethernet links into a single logical link. Network devices treat the aggregation as if it were a single link, which increases fault tolerance and provides load sharing. The LAG feature initially load shares traffic based upon the source and destination MAC address. Assign the port-channel (LAG) VLAN membership after you create a port-channel. If you do not assign VLAN membership, the port-channel might become a member of the management VLAN which can result in learning and switching issues.

A port-channel (LAG) interface can be either static or dynamic, but not both. All members of a port channel must participate in the same protocols.) A static port-channel interface does not require a partner system to be able to aggregate its member ports.



Note: If you configure the maximum number of dynamic port-channels (LAGs) that your platform supports, additional port-channels that you configure are automatically static.



2.13.1 port-channel

This command configures a new port-channel (LAG) and generates a logical slot/port number for the port-channel. The *<name>* field is a character string which allows the dash “-” character as well as alphanumeric characters. Use the `show port channel` command to display the slot/port number for the logical interface.



Note: Before you include a port in a port-channel, set the port physical mode. For more information, see 2.1.10 “speed” on page 2 - 5.

Format `port-channel <name>`

Mode Global Config

2.13.1.1 no port-channel

This command deletes a port-channel (LAG).

Format `no port-channel {<logical slot/port> | all}`

Mode Global Config

2.13.2 addport

This command adds one port to the port-channel (LAG). The first interface is a logical slot/port number of a configured port-channel.



Note: Before adding a port to a port-channel, set the physical mode of the port. For more information, see 2.1.10 “speed” on page 2 - 5.

Format `addport <logical slot/port>`

Mode Interface Config

2.13.3 deleteport (Interface Config)

This command deletes the port from the port-channel (LAG). The interface is a logical slot/port number of a configured port-channel.

Format `deleteport <logical slot/port>`

Mode Interface Config

2.13.4 deleteport (Global Config)

This command deletes all configured ports from the port-channel (LAG). The interface is a logical slot/port number of a configured port-channel. To clear the port channels, see 4.6.6 “clear port-channel” on page 4 - 26.

Format `deleteport {<logical slot/port> | all}`

Mode Global Config



2.13.5 lacp admin key

Use this command to configure the administrative value of the key for the port-channel. The value range of *<key>* is 0 to 65535.

Default 0x8000
Format lacp admin key *<key>*
Mode Interface Config



Note: This command is only applicable to port-channel interfaces.

2.13.5.1 no lacp admin key

Use this command to configure the default administrative value of the key for the port-channel.

Format no lacp admin key
Mode Interface Config

2.13.6 lacp collector max-delay

Use this command to configure the port-channel collector max delay. The valid range of *<delay>* is 0-65535.

Default 0x8000
Format lacp collector max delay *<delay>*
Mode Interface Config



Note: This command is only applicable to port-channel interfaces.

2.13.6.1 no lacp collector max delay

Use this command to configure the default port-channel collector max delay.

Format no lacp collector max delay
Mode Interface Config

2.13.7 lacp actor admin

Use this command to configure the LACP actor admin parameters.



2.13.8 lacp actor admin key

Use this command to configure the administrative value of the LACP actor admin key. The valid range for *<key>* is 0-65535.

Default	Internal Interface Number of this Physical Port
Format	<code>lacp actor admin key <key></code>
Mode	Interface Config



Note: This command is only applicable to physical interfaces.

2.13.8.1 no lacp actor admin key

Use this command to configure the default administrative value of the key.

Format	<code>no lacp actor admin key</code>
Mode	Interface Config

2.13.9 lacp actor admin state

Use this command to configure the administrative value of actor state as transmitted by the Actor in LACPDU. The valid value range is 0x00-0xFF.

Default	0x07
Format	<code>lacp actor admin state {individual longtimeout passive}</code>
Mode	Interface Config



Note: This command is only applicable to physical interfaces.

2.13.9.1 no lacp actor admin state

Use this command to configure the default administrative values of actor state as transmitted by the Actor in LACPDU.

Format	<code>no lacp actor admin state {individual longtimeout passive}</code>
Mode	Interface Config

2.13.10 lacp actor admin state individual

Use this command to set LACP actor admin state to individual.

Format	<code>lacp actor admin state individual</code>
Mode	Interface Config



Note: This command is only applicable to physical interfaces.

2.13.10.1 no lacp actor admin state individual

Use this command to set the LACP actor admin state to aggregation.

Format no lacp actor admin state individual

Mode Interface Config

2.13.11 lacp actor admin state longtimeout

Use this command to set LACP actor admin state to longtimeout.

Format lacp actor admin state longtimeout

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.11.1 no lacp actor admin state longtimeout

Use this command to set the LACP actor admin state to short timeout.

Format no lacp actor admin state longtimeout

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.12 lacp actor admin state passive

Use this command to set the LACP actor admin state to passive.

Format lacp actor admin state passive

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.12.1 no lacp actor admin state passive

Use this command to set the LACP actor admin state to active.

Format no lacp actor admin state passive

Mode Interface Config



2.13.13 lacp actor port

Use this command to configure LACP actor port priority key.

2.13.14 lacp actor port priority

Use this command to configure the priority value assigned to the Aggregation Port. The valid range for *<priority>* is 0 to 255.

Default	0x80
Format	<code>lacp actor port priority <priority></code>
Mode	Interface Config



Note: This command is only applicable to physical interfaces.

2.13.14.1 no lacp actor port priority

Use this command to configure the default priority value assigned to the Aggregation Port.

Format	<code>no lacp actor port priority</code>
Mode	Interface Config

2.13.15 lacp actor system priority

Use this command to configure the priority value associated with the LACP Actor's SystemID. The range for *<priority>* is 0 to 255.

Default	0x80
Format	<code>lacp actor system priority <priority></code>
Mode	Interface Config



Note: This command is only applicable to physical interfaces.

2.13.15.1 no lacp actor system priority

Use this command to configure the priority value associated with the Actor's SystemID.

Format	<code>lacp actor system priority</code>
Mode	Interface Config

2.13.16 lacp partner admin key

Use this command to configure the administrative value of the Key for the protocol partner. The valid range for *<key>* is 0 to 65535.

Default	0x0
----------------	-----



Format `lacp partner admin key <key>`
Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.16.1 `no lacp partner admin key`

Use this command to configure the administrative value of the Key for the protocol partner.

Format `no lacp partner admin key <key>`
Mode Interface Config

2.13.17 `lacp partner admin state`

Use this command to configure the current administrative value of actor state for the protocol Partner. The valid value range is 0x00-0xFF.

Default 0x07
Format `lacp partner admin state {individual|longtimeout|passive}`
Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.17.1 `no lacp partner admin state`

Use this command the configure the default current administrative value of actor state for the protocol partner.

Format `no lacp partner admin state {individual|longtimeout|passive}`
Mode Interface Config

2.13.18 `lacp partner admin state individual`

Use this command to set LACP partner admin state to individual.

Format `lacp partner admin state individual`
Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.18.1 `no lacp partner admin state individual`

Use this command to set the LACP partner admin state to aggregation.

Format `no lacp partner admin state individual`



Mode Interface Config

2.13.19 lacp partner admin state longtimeout

Use this command to set LACP partner admin state to longtimeout.

Format lacp partner admin state longtimeout

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.19.1 no lacp partner admin state longtimeout

Use this command to set the LACP partner admin state to short timeout.

Format no lacp partner admin state longtimeout

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.20 lacp partner admin state passive

Use this command to set the LACP partner admin state to passive.

Format lacp partner admin state passive

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.20.1 no lacp partner admin state passive

Use this command to set the LACP partner admin state to active.

Format no lacp partner admin state passive

Mode Interface Config

2.13.21 lacp partner port id

Use this command to configure the LACP partner port id. The valid range for *<port-id>* is 0 to 65535.

Default 0x80

Format lacp partner port-id *<port-id>*

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.21.1 no lacp partner port id

Use this command to set the LACP partner port id to the default.

Format lacp partner port-id
Mode Interface Config

2.13.22 lacp partner port priority

Use this command to configure the LACP partner port priority. The valid range for *<priority>* is 0 to 255.

Default 0x0
Format lacp partner port priority *<priority>*
Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.22.1 no lacp partner port priority

Use this command to configure the default LACP partner port priority.

Format no lacp partner port priority
Mode Interface Config

2.13.23 lacp partner system-id

Use this command to configure the 6-octet MAC Address value representing the administrative value of the Aggregation Port's protocol Partner's System ID. The valid range of *<system-id>* is 00:00:00:00:00:00 - FF:FF:FF:FF:FF:FF.

Default 00:00:00:00:00:00
Format lacp partner system-id *<system-id>*
Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.23.1 no lacp partner system-id

Use this command to configure the default value representing the administrative value of the Aggregation Port's protocol Partner's System ID.

Format no lacp partner system-id



Mode Interface Config

2.13.24 lacp partner system priority

Use this command to configure the administrative value of the priority associated with the Partner's System ID. The valid range for *<priority>* is 0 to 255.

Default 0x0

Format lacp partner system priority *<priority>*

Mode Interface Config



Note: This command is only applicable to physical interfaces.

2.13.24.1 no lacp partner system priority

Use this command to configure the default administrative value of priority associated with the Partner's System ID.

Format no lacp partner system priority

Mode Interface Config

2.13.25 port-channel static

This command enables the static mode on a port-channel (LAG) interface. By default the static mode for a new port-channel is disabled, which means the port-channel is dynamic. However if the maximum number of allowable dynamic port-channels are already present in the system, the static mode for a new port-channel enabled, which means the port-channel is static. You can only use this command on port-channel interfaces.

Default disabled

Format port-channel static

Mode Interface Config

2.13.25.1 no port-channel static

This command sets the static mode on a particular port-channel (LAG) interface to the default value. This command will be executed only for interfaces of type port-channel (LAG).

Format no port-channel static

Mode Interface Config

2.13.26 port lacpmode

This command enables Link Aggregation Control Protocol (LACP) on a port.

Default enabled

Format port lacpmode

Mode Interface Config



2.13.26.1 no port lacpmode

This command disables Link Aggregation Control Protocol (LACP) on a port.

Format `no port lacpmode`

Mode Interface Config

2.13.27 port lacpmode all

This command enables Link Aggregation Control Protocol (LACP) on all ports.

Format `port lacpmode all`

Mode Global Config

2.13.27.1 no port lacpmode all

This command disables Link Aggregation Control Protocol (LACP) on all ports.

Format `no port lacpmode all`

Mode Global Config

2.13.28 port lacptimeout (Interface Config)

This command sets the timeout on a physical interface of a particular device type (**actor** or **partner**) to either **long** or **short** timeout.

Default long

Format `port lacptimeout {actor | partner} {long | short}`

Mode Interface Config

2.13.28.1 no port lacptimeout

This command sets the timeout back to its default value on a physical interface of a particular device type (**actor** or **partner**).

Format `no port lacptimeout {actor | partner}`

Mode Interface Config

2.13.29 port lacptimeout (Global Config)

This command sets the timeout for all interfaces of a particular device type (**actor** or **partner**) to either **long** or **short** timeout.

Default long

Format `port lacptimeout {actor | partner} {long | short}`

Mode Global Config

Default long

Format `port lacptimeout {actor | partner} {long | short}`



Mode Global Config

2.13.29.1 no port lacptimeout

This command sets the timeout for all physical interfaces of a particular device type (**actor** or **partner**) back to their default values.

Format no port lacptimeout {actor | partner}

Mode Global Config

2.13.30 port-channel adminmode

This command enables a port-channel (LAG). The option **all** sets every configured port-channel with the same administrative mode setting.

Format port-channel adminmode [all]

Mode Global Config

2.13.30.1 no port-channel adminmode

This command disables a port-channel (LAG). The option **all** sets every configured port-channel with the same administrative mode setting.

Format no port-channel adminmode [all]

Mode Global Config

2.13.31 port-channel linktrap

This command enables link trap notifications for the port-channel (LAG). The interface is a logical slot/port for a configured port-channel. The option **all** sets every configured port-channel with the same administrative mode setting.

Default enabled

Format port-channel linktrap {<logical slot/port> | all}

Mode Global Config

2.13.31.1 no port-channel linktrap

This command disables link trap notifications for the port-channel (LAG). The interface is a logical slot and port for a configured port-channel. The option **all** sets every configured port-channel with the same administrative mode setting.

Format no port-channel linktrap {<logical slot/port> | all}

Mode Global Config



2.13.32 port-channel name

This command defines a name for the port-channel (LAG). The interface is a logical slot/port for a configured port-channel, and *<name>* is an alphanumeric string up to 15 characters.

Format `port-channel name {<logical slot/port> | all | <name>}`
Mode Global Config

2.13.33 port-channel system priority

Use this command to configure port-channel system priority. The valid range of *<priority>* is 0-65535.

Default 0x8000
Format `port-channel system priority <priority>`
Mode Global Config

2.13.33.1 no port-channel system priority

Use this command to configure the default port-channel system priority value.

Format `no port-channel system priority`
Mode Global Config

2.13.34 show lacp actor

Use this command to display LACP actor attributes.

Format `show lacp actor {<slot/port>|all}`
Mode Global Config

The following output parameters are displayed.

<i>Parameter</i>	<i>Description</i>
System Priority	The administrative value of the Key.
Actor Admin Key	The administrative value of the Key.
Port Priority	The priority value assigned to the Aggregation Port.
Admin State	The administrative values of the actor state as transmitted by the Actor in LACPDUs.

2.13.35 show lacp partner

Use this command to display LACP partner attributes.

Format `show lacp actor {<slot/port>|all}`
Mode Privileged EXEC

The following output parameters are displayed.

<i>Parameter</i>	<i>Description</i>
System Priority	The administrative value of priority associated with the Partner's System ID.



<i>Parameter</i>	<i>Description</i>
System-ID	The value representing the administrative value of the Aggregation Port's protocol Partner's System ID.
Admin Key	The administrative value of the Key for the protocol Partner.
Port Priority	The administrative value of the Key for protocol Partner.
Port-ID	The administrative value of the port number for the protocol Partner.
Admin State	The administrative values of the actor state for the protocol Partner.

2.13.36 show port-channel brief

This command displays the static capability of all port-channel (LAG) interfaces on the device as well as a summary of individual port-channel interfaces.

Format `show port-channel brief`

Mode

- Privileged EXEC
- User EXEC

For each port-channel the following information is displayed:

<i>Term</i>	<i>Definition</i>
Logical Interface	The slot/port of the logical interface.
Port-channel Name	The name of port-channel (LAG) interface.
Link-State	Shows whether the link is up or down.
Type	Shows whether the port-channel is statically or dynamically maintained.
LACP Device Type/ Timeout	The timeout (long or short) for the type of device (actor or partner).
Mbr Ports	The members of this port-channel.
Active Ports	The ports that are actively participating in the port-channel.

2.13.37 show port-channel

This command displays an overview of all port-channels (LAGs) on the switch.

Format `show port-channel {<logical slot/port> | all}`

Mode

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
Logical Interface	Valid slot and port number separated by a forward slash.
Port-Channel Name	The name of this port-channel (LAG). You may enter any string of up to 15 alphanumeric characters.
Link State	Indicates whether the Link is up or down.
Admin Mode	May be enabled or disabled. The factory default is enabled.
Mbr Ports	A listing of the ports that are members of this port-channel (LAG), in slot/port notation. There can be a maximum of eight ports assigned to a given port-channel (LAG).
Device Timeout	For each port, lists the timeout (long or short) for Device Type (actor or partner).
Port Speed	Speed of the port-channel port.



Term	Definition
Type	The status designating whether a particular port-channel (LAG) is statically or dynamically maintained. <ul style="list-style-type: none"> • Static - The port-channel is statically maintained. • Dynamic - The port-channel is dynamically maintained.
Active Ports	This field lists ports that are actively participating in the port-channel (LAG).

2.13.38 show port-channel system priority

Use this command to display the port-channel system priority.

Format `show port-channel system priority`

Mode Privileged EXEC

2.14 Port Mirroring

Port mirroring, which is also known as port monitoring, selects network traffic that you can analyze with a network analyzer, such as a SwitchProbe device or other Remote Monitoring (RMON) probe.

2.14.1 monitor session

This command configures a probe port and a monitored port for monitor session (port monitoring). Use the *source interface* `<slot/port>` parameter to specify the interface to monitor. Use *rx* to monitor only ingress packets, or use *tx* to monitor only egress packets. If you do not specify an `{rx | tx}` option, the destination port monitors both ingress and egress packets. Use the *destination interface* `<slot/port>` to specify the interface to receive the monitored traffic. Use the *mode* parameter to enable the administrative mode of the session. If enabled, the probe port monitors all the traffic received and transmitted on the physical monitored port.

Format `monitor session <session-id> {source interface <slot/port> [{rx | tx}] | destination interface <slot/port> | mode}`

Mode Global Config

2.14.1.1 no monitor session

Use this command without optional parameters to remove the monitor session (port monitoring) designation from the source probe port, the destination monitored port and all VLANs. Once the port is removed from the VLAN, you must manually add the port to any desired VLANs. Use the *source interface* `<slot/port>` parameter or *destination interface* `<slot/port>` to remove the specified interface from the port monitoring session. Use the *mode* parameter to disable the administrative mode of the session.



Note: Since the current version of FASTPATH software only supports one session, if you do not supply optional parameters, the behavior of this command is similar to the behavior of the `no monitor` command.

Format `no monitor session <session-id> [{source interface <slot/port> | destination interface <slot/port> | mode}]`

Mode Global Config



2.14.2 no monitor

This command removes all the source ports and a destination port for the and restores the default value for mirroring session mode for all the configured sessions.



Note: This is a stand-alone “no” command. This command does not have a “normal” form.

Default	enabled
Format	<code>no monitor</code>
Mode	Global Config

2.14.3 show monitor session

This command displays the Port monitoring information for a particular mirroring session.



Note: The `<session-id>` parameter is an integer value used to identify the session. In the current version of the software, the `<session-id>` parameter is always one (1).

Format	<code>show monitor session <session-id></code>
Mode	Privileged EXEC

Term	Definition
Session ID	An integer value used to identify the session. Its value can be anything between 1 and the maximum number of mirroring sessions allowed on the platform.
Monitor Session Mode	Indicates whether the Port Mirroring feature is enabled or disabled for the session identified with <code><session-id></code> . The possible values are Enabled and Disabled.
Probe Port	Probe port (destination port) for the session identified with <code><session-id></code> . If probe port is not set then this field is blank.
Source Port	The port, which is configured as mirrored port (source port) for the session identified with <code><session-id></code> . If no source port is configured for the session then this field is blank.
Type	Direction in which source port configured for port mirroring. Types are tx for transmitted packets and rx for receiving packets.

2.15 Static MAC Filtering

The commands in this section describe how to configure static MAC filtering. Static MAC filtering allows you to configure destination ports for a static multicast MAC filter irrespective of the platform.

2.15.1 macfilter

This command adds a static MAC filter entry for the MAC address `<macaddr>` on the VLAN `<vlanid>`. The value of the `<macaddr>` parameter is a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The restricted MAC Addresses are: 00:00:00:00:00:00, 01:80:C2:00:00:00 to 01:80:C2:00:00:0F, 01:80:C2:00:00:20 to 01:80:C2:00:00:21, and FF:FF:FF:FF:FF:FF. The `<vlanid>` parameter must identify a valid VLAN.

The number of static mac filters supported on the system is different for MAC filters where source ports are configured and MAC filters where destination ports are configured.



- For unicast MAC address filters and multicast MAC address filters with source port lists, the maximum number of static MAC filters supported is 20.
- For multicast MAC address filters with destination ports configured, the maximum number of static filters supported is 256.

i.e. For current Broadcom platforms, you can configure the following combinations:

- Unicast MAC and source port (max = 20)
- Multicast MAC and source port (max=20)
- Multicast MAC and destination port (only) (max=256)
- Multicast MAC and source ports and destination ports (max=20)

Format **macfilter** <macaddr> <vlanid>
Mode Global Config

2.15.1.1 no macfilter

This command removes all filtering restrictions and the static MAC filter entry for the MAC address <macaddr> on the VLAN <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The <vlanid> parameter must identify a valid VLAN.

Format **no macfilter** <macaddr> <vlanid>
Mode Global Config

2.15.2 macfilter adddest

Use this command to add the interface to the destination filter set for the MAC filter with the given <macaddr> and VLAN of <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The <vlanid> parameter must identify a valid VLAN.



Note: Configuring a destination port list is only valid for multicast MAC addresses.

Format **macfilter adddest** <macaddr>
Mode Interface Config

2.15.2.1 no macfilter adddest

This command removes a port from the destination filter set for the MAC filter with the given <macaddr> and VLAN of <vlanid>. The <macaddr> parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The <vlanid> parameter must identify a valid VLAN.

Format **no macfilter adddest** <macaddr>
Mode Interface Config



2.15.3 macfilter adddest all

This command adds all interfaces to the destination filter set for the MAC filter with the given *<macaddr>* and VLAN of *<vlanid>*. The *<macaddr>* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *<vlanid>* parameter must identify a valid VLAN.



Note: Configuring a destination port list is only valid for multicast MAC addresses.

Format `macfilter adddest all <macaddr>`

Mode Global Config

2.15.3.1 no macfilter adddest all

This command removes all ports from the destination filter set for the MAC filter with the given *<macaddr>* and VLAN of *<vlanid>*. The *<macaddr>* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *<vlanid>* parameter must identify a valid VLAN.

Format `no macfilter adddest all <macaddr>`

Mode Global Config

2.15.4 macfilter addsrc

This command adds the interface to the source filter set for the MAC filter with the MAC address of *<macaddr>* and VLAN of *<vlanid>*. The *<macaddr>* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *<vlanid>* parameter must identify a valid VLAN.

Format `macfilter addsrc <macaddr> <vlanid>`

Mode Interface Config

2.15.4.1 no macfilter addsrc

This command removes a port from the source filter set for the MAC filter with the MAC address of *<macaddr>* and VLAN of *<vlanid>*. The *<macaddr>* parameter must be specified as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *<vlanid>* parameter must identify a valid VLAN.

Format `no macfilter addsrc <macaddr> <vlanid>`

Mode Interface Config

2.15.5 macfilter addsrc all

This command adds all interfaces to the source filter set for the MAC filter with the MAC address of *<macaddr>* and *<vlanid>*. You must specify the *<macaddr>* parameter as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6. The *<vlanid>* parameter must identify a valid VLAN.

Format `macfilter addsrc all <macaddr> <vlanid>`

Mode Global Config



2.15.5.1 no macfilter addsrc all

This command removes all interfaces to the source filter set for the MAC filter with the MAC address of *<macaddr>* and VLAN of *<vlanid>*. You must specify the *<macaddr>* parameter as a 6-byte hexadecimal number in the format of b1:b2:b3:b4:b5:b6.

The *<vlanid>* parameter must identify a valid VLAN.

Format `no macfilter addsrc all <macaddr> <vlanid>`
Mode Global Config

2.15.6 show mac-address-table static

This command displays the Static MAC Filtering information for all Static MAC Filters. If you select *<all>*, all the Static MAC Filters in the system are displayed. If you supply a value for *<macaddr>*, you must also enter a value for *<vlanid>*, and the system displays Static MAC Filter information only for that MAC address and VLAN.

Format `show mac-address-table static {<macaddr> <vlanid> | all}`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
MAC Address	The MAC Address of the static MAC filter entry.
VLAN ID	The VLAN ID of the static MAC filter entry.
Source Port(s)	The source port filter set's slot and port(s).



Note: Only multicast address filters will have destination port lists.

2.15.7 show mac-address-table staticfiltering

This command displays the Static Filtering entries in the Multicast Forwarding Database (MFDB) table.

Format `show mac-address-table staticfiltering`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Mac Address	A unicast MAC address for which the switch has forwarding and or filtering information. As the data is gleaned from the MFDB, the address will be a multicast address. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address will be displayed as 8 bytes.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:.) and filtering (Fit:).



2.16 IGMP Snooping Configuration Commands

This section describes the commands you use to configure IGMP snooping. FASTPATH software supports IGMP Versions 1, 2, and 3. The IGMP snooping feature can help conserve bandwidth because it allows the switch to forward IP multicast traffic only to connected hosts that request multicast traffic. IGMPv3 adds source filtering capabilities to IGMP versions 1 and 2.

2.16.1 set igmp

This command enables IGMP Snooping on the system (Global Config Mode) or an interface (Interface Config Mode). This command also enables IGMP snooping on a particular VLAN (VLAN Config Mode) and can enable IGMP snooping on all interfaces participating in a VLAN.

If an interface has IGMP Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), IGMP Snooping functionality is disabled on that interface. IGMP Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has IGMP Snooping enabled.

The IGMP application supports the following activities:

- Validation of the IP header checksum (as well as the IGMP header checksum) and discarding of the frame upon checksum error.
- Maintenance of the forwarding table entries based on the MAC address versus the IP address.
- Flooding of unregistered multicast data packets to all ports in the VLAN.

Default disabled
Format `set igmp`
Mode

- Global Config
- Interface Config

Format `set igmp <vlanid>`
Mode VLAN Config

2.16.1.1 no set igmp

This command disables IGMP Snooping on the system, an interface or a VLAN.

Format `no set igmp`
Mode

- Global Config
- Interface Config

Format `no set igmp <vlanid>`
Mode VLAN Config

2.16.2 set igmp interfacemode

This command enables IGMP Snooping on all interfaces. If an interface has IGMP Snooping enabled and you enable this interface for routing or enlist it as a member of a port-channel (LAG), IGMP Snooping functionality is



disabled on that interface. IGMP Snooping functionality is re-enabled if you disable routing or remove port-channel (LAG) membership from an interface that has IGMP Snooping enabled.

Default disabled
Format `set igmp interfacemode`
Mode Global Config

2.16.2.1 no set igmp interfacemode

This command disables IGMP Snooping on all interfaces.

Format `no set igmp interfacemode`
Mode Global Config

2.16.3 set igmp fast-leave

This command enables or disables IGMP Snooping fast-leave admin mode on a selected interface or VLAN. Enabling fast-leave allows the switch to immediately remove the layer 2 LAN interface from its forwarding table entry upon receiving an IGMP leave message for that multicast group without first sending out MAC-based general queries to the interface.

You should enable fast-leave admin mode only on VLANs where only one host is connected to each layer 2 LAN port. This prevents the inadvertent dropping of the other hosts that were connected to the same layer 2 LAN port but were still interested in receiving multicast traffic directed to that group. Also, fast-leave processing is supported only with IGMP version 2 hosts.

Default disabled
Format `set igmp fast-leave`
Mode Interface Config

Format `set igmp fast-leave <vlan_id>`
Mode VLAN Config

2.16.3.1 no set igmp fast-leave

This command disables IGMP Snooping fast-leave admin mode on a selected interface.

Format `no set igmp fast-leave`
Mode Interface Config

Format `no set igmp fast-leave <vlan_id>`
Mode VLAN Config

2.16.4 set igmp groupmembership-interval

This command sets the IGMP Group Membership Interval time on a VLAN, one interface or all interfaces. The Group Membership Interval time is the amount of time in seconds that a switch waits for a report from a particular group on



a particular interface before deleting the interface from the entry. This value must be greater than the IGMPv3 Maximum Response time value. The range is 2 to 3600 seconds.

Default 260 seconds
Format `set igmp groupmembership-interval <2-3600>`
Mode

- Interface Config
- Global Config

Format `set igmp groupmembership-interval <vlan_id> <2-3600>`
Mode VLAN Config

2.16.4.1 no set igmp groupmembership-interval

This command sets the IGMPv3 Group Membership Interval time to the default value.

Format `no set igmp groupmembership-interval`
Mode

- Interface Config
- Global Config

Format `no set igmp groupmembership-interval <vlan_id>`
Mode VLAN Config

2.16.5 set igmp maxresponse

This command sets the IGMP Maximum Response time for the system, or on a particular interface or VLAN. The Maximum Response time is the amount of time in seconds that a switch will wait after sending a query on an interface because it did not receive a report for a particular group in that interface. This value must be less than the IGMP Query Interval time value. The range is 1 to 25 seconds.

Default 10 seconds
Format `set igmp maxresponse <1-25>`
Mode

- Global Config
- Interface Config

Format `set igmp maxresponse <vlan_id> <1-25>`
Mode VLAN Config

2.16.5.1 no set igmp maxresponse

This command sets the max response time (on the interface or VLAN) to the default value.

Format `no set igmp maxresponse`
Mode

- Global Config
- Interface Config

Format `no set igmp maxresponse <vlan_id>`
Mode VLAN Config



2.16.6 set igmp mcrtreptime

This command sets the Multicast Router Present Expiration time. The time is set for the system, on a particular interface or VLAN. This is the amount of time in seconds that a switch waits for a query to be received on an interface before the interface is removed from the list of interfaces with multicast routers attached. The range is 0 to 3600 seconds. A value of 0 indicates an infinite time-out, i.e. no expiration.

Default 0
Format `set igmp mcrtreptime <0-3600>`
Mode

- Global Config
- Interface Config

Format `set igmp mcrtreptime <vlan_id> <0-3600>`
Mode VLAN Config

2.16.6.1 no set igmp mcrtreptime

This command sets the Multicast Router Present Expiration time to 0. The time is set for the system, on a particular interface or a VLAN.

Format `no set igmp mcrtreptime`
Mode

- Global Config
- Interface Config

Format `no set igmp mcrtreptime <vlan_id>`
Mode VLAN Config

2.16.7 set igmp mrouter

This command configures the VLAN ID (<vlanId>) that has the multicast router mode enabled.

Format `set igmp mrouter <vlan_id>`
Mode Interface Config

2.16.7.1 no set igmp mrouter

This command disables multicast router mode for a particular VLAN ID (<vlan_id>).

Format `no set igmp mrouter <vlan_id>`
Mode Interface Config

2.16.8 set igmp mrouter interface

This command configures the interface as a multicast router interface. When configured as a multicast router interface, the interface is treated as a multicast router interface in all VLANs.

Default disabled
Format `set igmp mrouter interface`
Mode Interface Config



2.16.8.1 no set igmp mrouter interface

This command disables the status of the interface as a statically configured multicast router interface.

Format `no set igmp mrouter interface`

Mode Interface Config

2.16.9 show igmpsnooping

This command displays IGMP Snooping information. Configured information is displayed whether or not IGMP Snooping is enabled.

Format `show igmpsnooping [<slot/port> | <vlan_id>]`

Mode Privileged EXEC

When the optional arguments `<slot/port>` or `<vlan_id>` are not used, the command displays the following information:

Term	Definition
Admin Mode	Indicates whether or not IGMP Snooping is active on the switch.
Multicast Control Frame Count	The number of multicast control frames that are processed by the CPU.
Interface Enabled for IGMP Snooping	The list of interfaces on which IGMP Snooping is enabled.
VLANS Enabled for IGMP Snooping	The list of VLANS on which IGMP Snooping is enabled.

When you specify the `<slot/port>` values, the following information appears:

Term	Definition
IGMP Snooping Admin Mode	Indicates whether IGMP Snooping is active on the interface.
Fast Leave Mode	Indicates whether IGMP Snooping Fast-leave is active on the interface.
Group Membership Interval	The amount of time in seconds that a switch will wait for a report from a particular group on a particular interface before deleting the interface from the entry. This value may be configured.
Maximum Response Time	The amount of time the switch waits after it sends a query on an interface because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Expiry Time	The amount of time to wait before removing an interface from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.

When you specify a value for `<vlan_id>`, the following information appears:

Term	Definition
VLAN ID	The VLAN ID.
IGMP Snooping Admin Mode	Indicates whether IGMP Snooping is active on the VLAN.
Fast Leave Mode	Indicates whether IGMP Snooping Fast-leave is active on the VLAN.
Group Membership Interval	The amount of time in seconds that a switch will wait for a report from a particular group on a particular interface, which is participating in the VLAN, before deleting the interface from the entry. This value may be configured.



<i>Term</i>	<i>Definition</i>
Maximum Response Time	The amount of time the switch waits after it sends a query on an interface, participating in the VLAN, because it did not receive a report for a particular group on that interface. This value may be configured.
Multicast Router Expiry Time	The amount of time to wait before removing an interface that is participating in the VLAN from the list of interfaces with multicast routers attached. The interface is removed if a query is not received. This value may be configured.

2.16.10 show igmpsnooping mrouter interface

This command displays information about statically configured ports.

Format `show igmpsnooping mrouter interface <slot/port>`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Interface	The port on which multicast router information is being displayed.
Multicast Router Attached	Indicates whether multicast router is statically enabled on the interface.
VLAN ID	The list of VLANs of which the interface is a member.

2.16.11 show igmpsnooping mrouter vlan

This command displays information about statically configured ports.

Format `show igmpsnooping mrouter vlan <slot/port>`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Interface	The port on which multicast router information is being displayed.
VLAN ID	The list of VLANs of which the interface is a member.

2.16.12 show mac-address-table igmpsnooping

This command displays the IGMP Snooping entries in the MFDB table.

Format `show mac-address-table igmpsnooping`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
MAC Address	A multicast MAC address for which the switch has forwarding or filtering information. The format is two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address is displayed as a MAC address and VLAN ID combination of 8 bytes.
Type	The type of the entry, which is either static (added by the user) or dynamic (added to the table as a result of a learning process or protocol).
Description	The text description of this multicast table entry.



Term	Definition
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).

2.17 IGMP Snooping Querier Commands

IGMP Snooping requires that one central switch or router periodically query all end-devices on the network to announce their multicast memberships. This central device is the “IGMP Querier”. The IGMP query responses, known as IGMP reports, keep the switch updated with the current multicast group membership on a port-by-port basis. If the switch does not receive updated membership information in a timely fashion, it will stop forwarding multicasts to the port where the end device is located.

This section describes commands used to configure and display information on IGMP Snooping Queriers on the network and, separately, on VLANs.

2.17.1 set igmp querier

Use this command to enable IGMP Snooping Querier on the system, using Global Config mode, or on a VLAN. Using this command, you can specify the IP Address that the Snooping Querier switch should use as the source address while generating periodic queries.

If a VLAN has IGMP Snooping Querier enabled and IGMP Snooping is operationally disabled on it, IGMP Snooping Querier functionality is disabled on that VLAN. IGMP Snooping functionality is re-enabled if IGMP Snooping is operational on the VLAN.



Note: The Querier IP Address assigned for a VLAN takes preference over global configuration.

The IGMP Snooping Querier application supports sending periodic general queries on the VLAN to solicit membership reports.

Default	disabled
Format	<code>set igmp querier [<vlan-id>] [address ipv4_address]</code>
Mode	<ul style="list-style-type: none"> • Global Config • VLAN Mode

2.17.1.1 no set igmp querier

Use this command to disable IGMP Snooping Querier on the system. Use the optional *address* parameter to reset the querier address to 0.0.0.0.

Format	<code>no set igmp querier [<vlan-id>] [address]</code>
Mode	<ul style="list-style-type: none"> • Global Config • VLAN Mode

2.17.2 set igmp querier query-interval

Use this command to set the IGMP Querier Query Interval time. It is the amount of time in seconds that the switch waits before sending another general query.

Default	disabled
----------------	----------



Format `set igmp querier query-interval <1-18000>`
Mode Global Config

2.17.2.1 no set igmp querier query-interval

Use this command to set the IGMP Querier Query Interval time to its default value.

Format `no set igmp querier query-interval`
Mode Global Config

2.17.3 set igmp querier timer expiry

Use this command to set the IGMP Querier timer expiration period. It is the time period that the switch remains in Non-Querier mode once it has discovered that there is a Multicast Querier in the network.

Default 60 seconds
Format `set igmp querier timer expiry <60-300>`
Mode Global Config

2.17.3.1 no set igmp querier timer expiry

Use this command to set the IGMP Querier timer expiration period to its default value.

Format `no set igmp querier timer expiry`
Mode Global Config

2.17.4 set igmp querier version

Use this command to set the IGMP version of the query that the snooping switch is going to send periodically.

Default 1
Format `set igmp querier version <1-2>`
Mode Global Config

2.17.4.1 no set igmp querier version

Use this command to set the IGMP Querier version to its default value.

Format `no set igmp querier version`
Mode Global Config

2.17.5 set igmp querier election participate

Use this command to enable the Snooping Querier to participate in the Querier Election process when it discovers the presence of another Querier in the VLAN. When this mode is enabled, if the Snooping Querier finds that the other Querier's source address is better (less) than the Snooping Querier's address, it stops sending periodic queries. If the Snooping Querier wins the election, then it will continue sending periodic queries.

Default disabled



Format `set igmp querier election participate`
Mode VLAN Config

2.17.5.1 no set igmp querier election participate

Use this command to set the Snooping Querier not to participate in querier election but go into non-querier mode as soon as it discovers the presence of another querier in the same VLAN.

Format `no set igmp querier election participate`
Mode VLAN Config

2.17.6 show igmpsnooping querier

Use this command to display IGMP Snooping Querier information. Configured information is displayed whether or not IGMP Snooping Querier is enabled.

Format `show igmpsnooping querier [{detail | vlan <vlanid>}]`
Mode Privileged EXEC

When the optional argument `<vlanid>` is not used, the command displays the following information.

Field	Description
Admin Mode	Indicates whether or not IGMP Snooping Querier is active on the switch.
Admin Version	The version of IGMP that will be used while sending out the queries.
Querier Address	The IP Address which will be used in the IPv4 header while sending out IGMP queries. It can be configured using the appropriate command.
Query Interval	The amount of time in seconds that a Snooping Querier waits before sending out the periodic general query.
Querier Timeout	The amount of time to wait in the Non-Querier operational state before moving to a Querier state.

When you specify a value for `<vlanid>`, the following additional information appears.

Field	Description
VLAN Admin Mode	Indicates whether iGMP Snooping Querier is active on the VLAN.
VLAN Operational State	Indicates whether IGMP Snooping Querier is in "Querier" or "Non-Querier" state. When the switch is in <i>Querier</i> state, it will send out periodic general queries. When in <i>Non-Querier</i> state, it will wait for moving to Querier state and does not send out any queries.
VLAN Operational Max Response Time	Indicates the time to wait before removing a Leave from a host upon receiving a Leave request. This value is calculated dynamically from the Queries received from the network. If the Snooping Switch is in Querier state, then it is equal to the configured value.
Querier Election Participation	Indicates whether the IGMP Snooping Querier participates in querier election if it discovers the presence of a querier in the VLAN.
Querier VLAN Address	The IP address will be used in the IPv4 header while sending out IGMP queries on this VLAN. It can be configured using the appropriate command.
Operational Version	The version of IPv4 will be used while sending out IGMP queries on this VLAN.
Last Querier Address	Indicates the IP address of the most recent Querier from which a Query was received.
Last Querier Version	Indicates the IGMP version of the most recent Querier from which a Query was received on this VLAN.



When the optional argument *detail* is used, the command shows the global information and the information for all Querier-enabled VLANs.

2.18 Port Security Commands

Default

Format

Mode

This section describes the command you use to configure Port Security on the switch. Port security, which is also known as port MAC locking, allows you to secure the network by locking allowable MAC addresses on a given port. Packets with a matching source MAC address are forwarded normally, and all other packets are discarded.



Note: To enable the SNMP trap specific to port security, see 5.8.7 “snmp-server enable traps violation” on page 5 - 23.

2.18.1 port-security

This command enables port locking at the system level (Global Config) or port level (Interface Config).

Default disabled

Format `port-security`

Mode

- Global Config
- Interface Config

2.18.1.1 no port-security

This command disables port locking for one (Interface Config) or all (Global Config) ports.

Format `no port-security`

Mode

- Global Config
- Interface Config

2.18.2 port-security max-dynamic

This command sets the maximum number of dynamically locked MAC addresses allowed on a specific port.

Default 600

Format `port-security max-dynamic <maxvalue>`

Mode Interface Config

2.18.2.1 no port-security max-dynamic

This command resets the maximum number of dynamically locked MAC addresses allowed on a specific port to its default value.

Format `no port-security max-dynamic`

Mode Interface Config



2.18.3 port-security max-static

This command sets the maximum number of statically locked MAC addresses allowed on a port.

Default 20
Format `port-security max-static <maxvalue>`
Mode Interface Config

2.18.3.1 no port-security max-static

This command sets maximum number of statically locked MAC addresses to the default value.

Format `no port-security max-static`
Mode Interface Config

2.18.4 port-security mac-address

This command adds a MAC address to the list of statically locked MAC addresses. The *<vid>* is the VLAN ID.

Format `port-security mac-address <mac-address> <vid>`
Mode Interface Config

2.18.4.1 no port-security mac-address

This command removes a MAC address from the list of statically locked MAC addresses.

Format `no port-security mac-address <mac-address> <vid>`
Mode Interface Config

2.18.5 port-security mac-address move

This command converts dynamically locked MAC addresses to statically locked addresses.

Format `port-security mac-address move`
Mode Interface Config

2.18.6 show port-security

This command displays the port-security settings. If you do not use a parameter, the command displays the settings for the entire system. Use the optional parameters to display the settings on a specific interface or on all interfaces.

Format `show port-security [{<slot/port> | all}]`
Mode Privileged EXEC

Term	Definition
Admin Mode	Port Locking mode for the entire system. This field displays if you do not supply any parameters.



For each interface, or for the interface you specify, the following information appears:

<i>Term</i>	<i>Definition</i>
Admin Mode	Port Locking mode for the Interface.
Dynamic Limit	Maximum dynamically allocated MAC Addresses.
Static Limit	Maximum statically allocated MAC Addresses.
Violation Trap Mode	Whether violation traps are enabled.

2.18.7 show port-security dynamic

This command displays the dynamically locked MAC addresses for the port.

Format `show port-security dynamic <slot/port>`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
MAC Address	MAC Address of dynamically locked MAC.

2.18.8 show port-security static

This command displays the statically locked MAC addresses for port.

Format `show port-security static <slot/port>`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
MAC Address	MAC Address of statically locked MAC.

2.18.9 show port-security violation

This command displays the source MAC address of the last packet discarded on a locked port.

Format `show port-security violation <slot/port>`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
MAC Address	MAC Address of discarded packet on locked port.

2.19 LLDP (802.1AB) Commands

This section describes the command you use to configure Link Layer Discovery Protocol (LLDP), which is defined in the IEEE 802.1AB specification. LLDP allows stations on an 802 LAN to advertise major capabilities and physical descriptions. The advertisements allow a network management system (NMS) to access and display this information.



2.19.1 lldp transmit

Use this command to enable the LLDP advertise capability.

Default	disabled
Format	<code>lldp transmit</code>
Mode	Interface Config

2.19.1.1 no lldp transmit

Use this command to return the local data transmission capability to the default.

Format	<code>no lldp transmit</code>
Mode	Interface Config

2.19.2 lldp receive

Use this command to enable the LLDP receive capability.

Default	disabled
Format	<code>lldp receive</code>
Mode	Interface Config

2.19.2.1 no lldp receive

Use this command to return the reception of LLDPDUs to the default value.

Format	<code>no lldp receive</code>
Mode	Interface Config

2.19.3 lldp timers

Use this command to set the timing parameters for local data transmission on ports enabled for LLDP. The *<interval-seconds>* determines the number of seconds to wait between transmitting local data LLDPDUs. The range is 1-32768 seconds. The *<hold-value>* is the multiplier on the transmit interval that sets the TTL in local data LLDPDUs. The multiplier range is 2-10. The *<reinit-seconds>* is the delay before re-initialization, and the range is 1-0 seconds.

Default	<ul style="list-style-type: none">interval—30 secondshold—4reinit—2 seconds
Format	<code>lldp timers [interval <interval-seconds>] [hold <hold-value>] [reinit <reinit-seconds>]</code>
Mode	Global Config



2.19.3.1 no lldp timers

Use this command to return any or all timing parameters for local data transmission on ports enabled for LLDP to the default values.

Format `no lldp timers [interval] [hold] [reinit]`
Mode Global Config

2.19.4 lldp transmit-tlv

Use this command to specify which optional type length values (TLVs) in the 802.1AB basic management set are transmitted in the LLDPDUs. Use *sys-name* to transmit the system name TLV. To configure the system name, see 5.8.1 “snmp-server” on page 5 - 21. Use *sys-desc* to transmit the system description TLV. Use *sys-cap* to transmit the system capabilities TLV. Use *port-desc* to transmit the port description TLV. To configure the port description, see 2.1.6 “description” on page 2 - 4.

Default no optional TLVs are included
Format `lldp transmit-tlv [sys-desc] [sys-name] [sys-cap] [port-desc]`
Mode Interface Config

2.19.4.1 no lldp transmit-tlv

Use this command to remove an optional TLV from the LLDPDUs. Use the command without parameters to remove all optional TLVs from the LLDPDU.

Format `no lldp transmit-tlv [sys-desc] [sys-name] [sys-cap] [port-desc]`
Mode Interface Config

2.19.5 lldp transmit-mgmt

Use this command to include transmission of the local system management address information in the LLDPDUs.

Format `lldp transmit-mgmt`
Mode Interface Config

2.19.5.1 no lldp transmit-mgmt

Use this command to include transmission of the local system management address information in the LLDPDUs. Use this command to cancel inclusion of the management information in LLDPDUs.

Format `no lldp transmit-mgmt`
Mode Interface Config

2.19.6 lldp notification

Use this command to enable remote data change notifications.

Default disabled
Format `lldp notification`
Mode Interface Config



2.19.6.1 no lldp notification

Use this command to disable notifications.

Default disabled
Format no lldp notification
Mode Interface Config

2.19.7 lldp notification-interval

Use this command to configure how frequently the system sends remote data change notifications. The *<interval>* parameter is the number of seconds to wait between sending notifications. The valid interval range is 5-3600 seconds.

Default 5
Format lldp notification-interval *<interval>*
Mode Global Config

2.19.7.1 no lldp notification-interval

Use this command to return the notification interval to the default value.

Format no lldp notification-interval
Mode Global Config

2.19.8 clear lldp statistics

Use this command to reset all LLDP statistics, including MED-related information.

Format clear lldp statistics
Mode Privileged Exec

2.19.9 clear lldp remote-data

Use this command to delete all information from the LLDP remote data table, including MED-related information.

Format clear lldp remote-data
Mode Global Config

2.19.10 show lldp

Use this command to display a summary of the current LLDP configuration.

Format show lldp
Mode Privileged Exec

Term	Definition
Transmit Interval	How frequently the system transmits local data LLDPDUs, in seconds.



Term	Definition
Transmit Hold Multiplier	The multiplier on the transmit interval that sets the TTL in local data LLDPDUs.
Re-initialization Delay	The delay before re-initialization, in seconds.
Notification Interval	How frequently the system sends remote data change notifications, in seconds.

2.19.11 show lldp interface

Use this command to display a summary of the current LLDP configuration for a specific interface or for all interfaces.

Format `show lldp interface {<slot/port> | all}`

Mode Privileged Exec

Term	Definition
Interface	The interface in a slot/port format.
Link	Shows whether the link is up or down.
Transmit	Shows whether the interface transmits LLDPDUs.
Receive	Shows whether the interface receives LLDPDUs.
Notify	Shows whether the interface sends remote data change notifications.
TLVs	Shows whether the interface sends optional TLVs in the LLDPDUs. The TLV codes can be 0 (Port Description), 1 (System Name), 2 (System Description), or 3 (System Capability).
Mgmt	Shows whether the interface transmits system management address information in the LLDPDUs.

2.19.12 show lldp statistics

Use this command to display the current LLDP traffic and remote table statistics for a specific interface or for all interfaces.

Format `show lldp statistics {<slot/port> | all}`

Mode Privileged Exec

Term	Definition
Last Update	The amount of time since the last update to the remote table in days, hours, minutes, and seconds.
Total Inserts	Total number of inserts to the remote data table.
Total Deletes	Total number of deletes from the remote data table.
Total Drops	Total number of times the complete remote data received was not inserted due to insufficient resources.
Total Ageouts	Total number of times a complete remote data entry was deleted because the Time to Live interval expired.

The table contains the following column headings:

Term	Definition
Interface	The interface in slot/port format.



<i>Term</i>	<i>Definition</i>
Transmit Total	Total number of LLDP packets transmitted on the port.
Receive Total	Total number of LLDP packets received on the port.
Discards	Total number of LLDP frames discarded on the port for any reason.
Errors	The number of invalid LLDP frames received on the port.
Ageouts	Total number of times a complete remote data entry was deleted for the port because the Time to Live interval expired.
TVL Discards	The number of TLVs discarded.
TVL Unknowns	Total number of LLDP TLVs received on the port where the type value is in the reserved range, and not recognized.

2.19.13 show lldp remote-device

Use this command to display summary information about remote devices that transmit current LLDP data to the system. You can show information about LLDP remote data received on all ports or on a specific port.

Format `show lldp remote-device {<slot/port> | all}`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Local Interface	The interface that received the LLDPDU from the remote device.
Chassis ID	The ID of the remote device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the remote device.

2.19.14 show lldp remote-device detail

Use this command to display detailed information about remote devices that transmit current LLDP data to an interface on the system.

Format `show lldp remote-device detail <slot/port>`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Local Interface	The interface that received the LLDPDU from the remote device.
Chassis ID Subtype	The type of identification used in the Chassis ID field.
Chassis ID	The chassis of the remote device.
Port ID Subtype	The type of port on the remote device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the remote device.
System Description	Describes the remote system by identifying the system name and versions of hardware, operating system, and networking software supported in the device.
Port Description	Describes the port in an alpha-numeric format. The port description is configurable.
System Capabilities Supported	Indicates the primary function(s) of the device.



Term	Definition
System Capabilities Enabled	Shows which of the supported system capabilities are enabled.
Management Address	For each interface on the remote device with an LLDP agent, lists the type of address the remote LLDP agent uses and specifies the address used to obtain information related to the device.
Time To Live	The amount of time (in seconds) the remote device's information received in the LLDPDU should be treated as valid information.

2.19.15 show lldp local-device

Use this command to display summary information about the advertised LLDP local data. This command can display summary information or detail for each interface.

Format	<code>show lldp local-device {<slot/port> all}</code>
Mode	Privileged EXEC

Term	Definition
Interface	The interface in a slot/port format.
Port ID	The port ID associated with this interface.
Port Description	The port description associated with the interface.

2.19.16 show lldp local-device detail

Use this command to display detailed information about the LLDP data a specific interface transmits.

Format	<code>show lldp local-device detail <slot/port></code>
Mode	Privileged EXEC

Term	Definition
Interface	The interface that sends the LLDPDU.
Chassis ID Subtype	The type of identification used in the Chassis ID field.
Chassis ID	The chassis of the local device.
Port ID Subtype	The type of port on the local device.
Port ID	The port number that transmitted the LLDPDU.
System Name	The system name of the local device.
System Description	Describes the local system by identifying the system name and versions of hardware, operating system, and networking software supported in the device.
Port Description	Describes the port in an alpha-numeric format.
System Capabilities Supported	Indicates the primary function(s) of the device.
System Capabilities Enabled	Shows which of the supported system capabilities are enabled.
Management Address	The type of address and the specific address the local LLDP agent uses to send and receive information.



2.20 LLDP-MED Commands

Link Layer Discovery Protocol - Media Endpoint Discovery (LLDP-MED) (ANSI-TIA-1057) provides an extension to the LLDP standard. Specifically, LLDP-MED provides extensions for network configuration and policy, device location, Power over Ethernet (PoE) management and inventory management.

2.20.1 `lldp med`

Use this command to enable MED. By enabling MED, you will be effectively enabling the transmit and receive function of LLDP.

Default disabled
Format `lldp med`
Mode Interface Config

2.20.1.1 `no lldp med`

Use this command to disable MED.

Format `no lldp med`
Mode Interface Config

2.20.2 `lldp med confignotification`

Use this command to configure all the ports to send the topology change notification.

Default disabled
Format `lldp med confignotification`
Mode Interface Config

2.20.2.1 `no lldp med confignotification`

Use this command to disable notifications.

Format `no lldp med confignotification`
Mode Interface Config

2.20.3 `lldp med transmit-tlv`

Use this command to specify which optional Type Length Values (TLVs) in the LLDP MED set will be transmitted in the Link Layer Discovery Protocol Data Units (LLDPDUs).

Default By default, the capabilities and network policy TLVs are included.
Format `lldp med transmit-tlv [capabilities] [ex-pd] [ex-pse] [inventory] [location] [network-policy]`
Mode Interface Config

Term	Definition
capabilities	Transmit the LLDP capabilities TLV.



Term	Definition
ex-pd	Transmit the LLDP extended PD TLV.
ex-pse	Transmit the LLDP extended PSE TLV.
inventory	Transmit the LLDP inventory TLV.
location	Transmit the LLDP location TLV.
network-policy	Transmit the LLDP network policy TLV.

2.20.3.1 no lldp med transmit-tlv

Use this command to remove a TLV.

Format `no lldp med transmit-tlv [capabilities] [network-policy] [ex-pse] [ex-pd] [location] [inventory]`

Mode Interface Config

2.20.4 lldp med all

Use this command to configure LLDP-MED on all the ports.

Format `lldp med all`

Mode Global Config

2.20.5 lldp med confignotification all

Use this command to configure all the ports to send the topology change notification.

Format `lldp med confignotification all`

Mode Global Config

2.20.6 lldp med faststartrepeatcount

Use this command to set the value of the fast start repeat count. *[count]* is then umber of LLDP PDUs that will be transmitted when the product is enabled. The range is 1 to 10.

Default 3

Format `lldp med faststartrepeatcount [count]`

Mode Global Config

2.20.6.1 no lldp med faststartrepeatcount

Use this command to return to the factory default value.

Format `no lldp med faststartrepeatcount`

Mode Global Config



2.20.7 lldp med transmit-tlv all

Use this command to specify which optional Type Length Values (TLVs) in the LLDP MED set will be transmitted in the Link Layer Discovery Protocol Data Units (LLDPDUs).

Default	By default, the capabilities and network policy TLVs are included.
Format	<code>lldp med transmit-tlv all [capabilities] [ex-pd] [ex-pse] [inventory] [location] [network-policy]</code>
Mode	Global Config

Term	Definition
capabilities	Transmit the LLDP capabilities TLV.
ex-pd	Transmit the LLDP extended PD TLV.
ex-pse	Transmit the LLDP extended PSE TLV.
inventory	Transmit the LLDP inventory TLV.
location	Transmit the LLDP location TLV.
network-policy	Transmit the LLDP network policy TLV.

2.20.7.1 no lldp med transmit-tlv

Use this command to remove a TLV.

Format	<code>no lldp med transmit-tlv [capabilities] [network-policy] [ex-pse] [ex-pd] [location] [inventory]</code>
Mode	Global Config

2.20.8 show lldp med

Use this command to display a summary of the current LLDP MED configuration.

Format	<code>show lldp med</code>
Mode	Privileged Exec

Example: The following shows example CLI display output for the command.

```
(Broadcom FASTPATH Routing) #show lldp med
LLDP MED Global Configuration
```

```
Fast Start Repeat Count: 3
Device Class: Network Connectivity
```

```
(Broadcom FASTPATH Routing) #
```

2.20.9 show lldp med interface

Use this command to display a summary of the current LLDP MED configuration for a specific interface. *<slot/port>* indicates a specific physical interface. *all* indicates all valid LLDP interfaces.

Format	<code>show lldp med interface {slot/port all}</code>
Mode	Privileged Exec



Example: The following shows example CLI display output for the command.

```
(Broadcom FASTPATH Routing) #show lldp med interface all
```

```
Interface  Link    configMED operMED    ConfigNotify TLVsTx
-----
0/1       Down   Disabled Disabled Disabled    0,1
0/2       Up     Disabled Disabled Disabled    0,1
0/3       Down   Disabled Disabled Disabled    0,1
0/4       Down   Disabled Disabled Disabled    0,1
0/5       Down   Disabled Disabled Disabled    0,1
0/6       Down   Disabled Disabled Disabled    0,1
0/7       Down   Disabled Disabled Disabled    0,1
0/8       Down   Disabled Disabled Disabled    0,1
0/9       Down   Disabled Disabled Disabled    0,1
0/10      Down   Disabled Disabled Disabled    0,1
0/11      Down   Disabled Disabled Disabled    0,1
0/12      Down   Disabled Disabled Disabled    0,1
0/13      Down   Disabled Disabled Disabled    0,1
0/14      Down   Disabled Disabled Disabled    0,1
```

```
TLV Codes: 0- Capabilities,      1- Network Policy
            2- Location,          3- Extended PSE
            4- Extended Pd,       5- Inventory
```

```
--More-- or (q)uit
```

```
(Broadcom FASTPATH Routing) #show lldp med interface 1/0/2
```

```
Interface  Link    configMED operMED    ConfigNotify TLVsTx
-----
0/2       Up     Disabled Disabled Disabled    0,1
```

```
TLV Codes: 0- Capabilities,      1- Network Policy
            2- Location,          3- Extended PSE
            4- Extended Pd,       5- Inventory
```

```
(Broadcom FASTPATH Routing) #
```

2.20.10 show lldp med local-device detail

Use this command to display detailed information about the LLDP MED data that a specific interface transmits. *<slot/port>* indicates a specific physical interface.

Format **show lldp med local-device detail** *<slot/port>*

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Broadcom FASTPATH Routing) #show lldp med local-device detail 1/0/8
```

```
LLDP MED Local Device Detail
```

```
Interface: 1/0/8
```

```
Network Policies
```

```
Media Policy Application Type : voice
```

```
Vlan ID: 10
```

```
Priority: 5
```



```
DSCP: 1
Unknown: False
Tagged: True
```

```
Media Policy Application Type : streamingvideo
Vlan ID: 20
Priority: 1
DSCP: 2
Unknown: False
Tagged: True
```

```
Inventory
Hardware Rev: xxx xxx xxx
Firmware Rev: xxx xxx xxx
Software Rev: xxx xxx xxx
Serial Num: xxx xxx xxx
Mfg Name: xxx xxx xxx
Model Name: xxx xxx xxx
Asset ID: xxx xxx xxx
```

```
Location
Subtype: elin
Info: xxx xxx xxx
```

```
Extended POE
Device Type: pseDevice
```

```
Extended POE PSE
Available: 0.3 Watts
Source: primary
Priority: critical
```

```
Extended POE PD
```

```
Required: 0.2 Watts
Source: local
Priority: low
```

2.20.11 show lldp med remote-device

Use this command to display the summary information about remote devices that transmit current LLDP MED data to the system. You can show information about LLDP MED remote data received on all valid LLDP interfaces or on a specific physical interface.

Format `show lldp med remote-device {<slot/port> | all}`
Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Broadcom FASTPATH Routing) #show lldp med remote-device all

LLDP MED Remote Device Summary

Local
Interface  Device Class
-----  -----
```




```

1/0/8      Class I
1/0/9      Not Defined
1/0/10     Class II
1/0/11     Class III
1/0/12     Network Con

```

2.20.12 show lldp med remote-device detail

Use this command to display detailed information about remote devices that transmit current LLDP MED data to an interface on the system.

Format `show lldp med remote-device detail <slot/port>`

Mode Privileged EXEC

Example: The following shows example CLI display output for the command.

```
(Broadcom FASTPATH Routing) #show lldp med remote-device detail 1/0/8
```

```
Local Interface: 1/0/8
```

```
Capabilities
```

```
MED Capabilities Supported: capabilities, networkpolicy, location, extendedpse
```

```
MED Capabilities Enabled: capabilities, networkpolicy
```

```
Device Class: Endpoint Class I
```

```
Network Policies
```

```
Media Policy Application Type : voice
```

```
Vlan ID: 10
```

```
Priority: 5
```

```
DSCP: 1
```

```
Unknown: False
```

```
Tagged: True
```

```
Media Policy Application Type : streamingvideo
```

```
Vlan ID: 20
```

```
Priority: 1
```

```
DSCP: 2
```

```
Unknown: False
```

```
Tagged: True
```

```
Inventory
```

```
Hardware Rev: xxx xxx xxx
```

```
Firmware Rev: xxx xxx xxx
```

```
Software Rev: xxx xxx xxx
```

```
Serial Num: xxx xxx xxx
```

```
Mfg Name: xxx xxx xxx
```

```
Model Name: xxx xxx xxx
```

```
Asset ID: xxx xxx xxx
```

```
Location
```

```
Subtype: elin
```

```
Info: xxx xxx xxx
```

```
Extended POE
```

```
Device Type: pseDevice
```



Extended POE PSE
 Available: 0.3 Watts
 Source: primary
 Priority: critical

Extended POE PD

Required: 0.2 Watts
 Source: local
 Priority: low

2.21 Denial of Service Commands

This section describes the commands you use to configure Denial of Service (DoS) Control. FASTPATH software provides support for classifying and blocking specific types of Denial of Service attacks. You can configure your system to monitor and block six types of attacks:

- **SIP=DIP:** Source IP address = Destination IP address.
- **First Fragment:** TCP Header size smaller than configured value.
- **TCP Fragment:** IP Fragment Offset = 1.
- **TCP Flag:** TCP Flag SYN set and Source Port < 1024 or TCP Control Flags = 0 and TCP Sequence Number = 0 or TCP Flags FIN, URG, and PSH set and TCP Sequence Number = 0 or TCP Flags SYN and FIN set.
- **L4 Port:** Source TCP/UDP Port = Destination TCP/UDP Port.
- **ICMP:** Limiting the size of ICMP Ping packets.

2.21.1 dos-control sipdip

This command enables Source IP address = Destination IP address (SIP=DIP) Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress with SIP=DIP, the packets will be dropped if the mode is enabled.

Default disabled
Format `dos-control sipdip`
Mode Global Config

2.21.1.1 no dos-control sipdip

This command disables Source IP address = Destination IP address (SIP=DIP) Denial of Service prevention.

Format `no dos-control sipdip`
Mode Global Config

2.21.2 dos-control firstfrag

This command enables Minimum TCP Header Size Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having a TCP Header Size smaller than the configured value, the packets will be dropped if the mode is enabled. The default is *disabled*. If you enable `dos-control firstfrag`, but do not provide a Minimum TCP Header Size, the system sets that value to *20*.

Default disabled <20>
Format `dos-control firstfrag [<0-255>]`



Mode Global Config

2.21.2.1 no dos-control firstfrag

This command sets Minimum TCP Header Size Denial of Service protection to the default value of *disabled*.

Format no dos-control firstfrag

Mode Global Config

2.21.3 dos-control tcpfrag

This command enables TCP Fragment Denial of Service protection. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having IP Fragment Offset equal to one (1), the packets will be dropped if the mode is enabled.

Default disabled

Format dos-control tcpfrag

Mode Global Config

2.21.3.1 no dos-control tcpfrag

This command disabled TCP Fragment Denial of Service protection.

Format no dos-control tcpfrag

Mode Global Config

2.21.4 dos-control tcpflag

This command enables TCP Flag Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attacks. If packets ingress having TCP Flag SYN set and a source port less than 1024 or having TCP Control Flags set to 0 and TCP Sequence Number set to 0 or having TCP Flags FIN, URG, and PSH set and TCP Sequence Number set to 0 or having TCP Flags SYN and FIN both set, the packets will be dropped if the mode is enabled.

Default disabled

Format dos-control tcpflag

Mode Global Config

2.21.4.1 no dos-control tcpflag

This command sets disables TCP Flag Denial of Service protections.

Format no dos-control tcpflag

Mode Global Config



2.21.5 dos-control l4port

This command enables L4 Port Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If packets ingress having Source TCP/UDP Port Number equal to Destination TCP/UDP Port Number, the packets will be dropped if the mode is enabled.



Note: Some applications mirror source and destination L4 ports - RIP for example uses 520 for both. If you enable dos-control l4port, applications such as RIP may experience packet loss which would render the application inoperable.

Default disabled
Format dos-control l4port
Mode Global Config

2.21.5.1 no dos-control l4port

This command disables L4 Port Denial of Service protections.

Format no dos-control l4port
Mode Global Config

2.21.6 dos-control icmp

This command enables Maximum ICMP Packet Size Denial of Service protections. If the mode is enabled, Denial of Service prevention is active for this type of attack. If ICMP Echo Request (PING) packets ingress having a size greater than the configured value, the packets will be dropped if the mode is enabled.

Default disabled <512>
Format dos-control icmp <0-1023>
Mode Global Config

2.21.6.1 no dos-control icmp

This command disables Maximum ICMP Packet Size Denial of Service protections.

Format no dos-control icmp
Mode Global Config

2.21.7 show dos-control

This command displays Denial of Service configuration information.

Format show dos-control
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
SIPDIP Mode	May be enabled or disabled. The factory default is disabled.
First Fragment Mode	May be enabled or disabled. The factory default is disabled.



<i>Term</i>	<i>Definition</i>
Min TCP Hdr Size <0-255>	The factory default is 20.
TCP Fragment Mode	May be enabled or disabled. The factory default is disabled.
TCP Flag Mode	May be enabled or disabled. The factory default is disabled.
L4 Port Mode	May be enabled or disabled. The factory default is disabled.
ICMP Mode	May be enabled or disabled. The factory default is disabled.
Max ICMP Pkt Size <0-1023>	The factory default is 512.

2.22 MAC Database Commands

This section describes the commands you use to configure and view information about the MAC databases.

2.22.1 bridge aging-time

This command configures the forwarding database address aging timeout in seconds. The *<seconds>* parameter must be within the range of 10 to 1,000,000 seconds.

Default	300
Format	<code>bridge aging-time <10-1,000,000></code>
Mode	Global Config

2.22.1.1 no bridge aging-time

This command sets the forwarding database address aging timeout to the default value.

Format	<code>no bridge aging-time</code>
Mode	Global Config

2.22.2 show forwardingdb agetime

This command displays the timeout for address aging. In an IVL system, the `[fdbid | all]` parameter is required.

Default	all
Format	<code>show forwardingdb agetime [fdbid all]</code>
Mode	Privileged EXEC

<i>Term</i>	<i>Definition</i>
Forwarding DB ID	Fdbid (Forwarding database ID) indicates the forwarding database whose aging timeout is to be shown. The all option is used to display the aging timeouts associated with all forwarding databases. This field displays the forwarding database ID in an IVL system.
Agetime	<ul style="list-style-type: none"> In an IVL system, this parameter displays the address aging timeout for the associated forwarding database.



2.22.3 show mac-address-table multicast

This command displays the Multicast Forwarding Database (MFDB) information. If you enter the command with no parameter, the entire table is displayed. You can display the table entry for one MAC Address by specifying the MAC address as an optional parameter.

Format `show mac-address-table multicast <macaddr>`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
MAC Address	A multicast MAC address for which the switch has forwarding and or filtering information. The format is two-digit hexadecimal numbers separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address will be displayed as a MAC address and VLAN ID combination of 8 bytes.
Type	The type of the entry. Static entries are those that are configured by the end user. Dynamic entries are added to the table as a result of a learning process or protocol.
Component	The component that is responsible for this entry in the Multicast Forwarding Database. Possible values are IGMP Snooping, GMRP, and Static Filtering.
Description	The text description of this multicast table entry.
Interfaces	The list of interfaces that are designated for forwarding (Fwd:) and filtering (Flt:).
Forwarding Interfaces	The resultant forwarding list is derived from combining all the component's forwarding interfaces and removing the interfaces that are listed as the static filtering interfaces.

2.22.4 show mac-address-table stats

This command displays the Multicast Forwarding Database (MFDB) statistics.

Format `show mac-address-table stats`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Total Entries	The total number of entries that can possibly be in the Multicast Forwarding Database table.
Most MFDB Entries Ever Used	The largest number of entries that have been present in the Multicast Forwarding Database table. This value is also known as the MFDB high-water mark.
Current Entries	The current number of entries in the MFDB.



Chapter **3**

Quality of Service Commands



3. Quality of Service (QoS) Commands

This chapter describes the Quality of Service (QoS) commands available in the FASTPATH CLI.

The QoS Commands chapter contains the following sections:

- 3.1 “Class of Service (CoS) Commands” on page 3 - 2
- 3.4 “Differentiated Services (DiffServ) Commands” on page 3 - 8
- 3.5 “DiffServ Class Commands” on page 3 - 9
- 3.6 “DiffServ Policy Commands” on page 3 - 17
- 3.7 “DiffServ Service Commands” on page 3 - 21
- 3.8 “DiffServ Show Commands” on page 3 - 22
- 3.9 “MAC Access Control List (ACL) Commands” on page 3 - 26
- 3.10 “IP Access Control List (ACL) Commands” on page 3 - 30
- 3.11 “IPv6 Access Control List (ACL) Commands” on page 3 - 34



Note: The commands in this chapter are in one of two functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.

3.1 Class of Service (CoS) Commands

This section describes the commands you use to configure and view Class of Service (CoS) settings for the switch. The commands in this section allow you to control the priority and transmission rate of traffic.



Note: Commands you issue in the Interface Config mode only affect a single interface. Commands you issue in the Global Config mode affect all interfaces.

3.1.1 classofservice dot1p-mapping

This command maps an 802.1p priority to an internal traffic class. The *<userpriority>* values can range from 0-7. The *<trafficclass>* values range from 0-6, although the actual number of available traffic classes depends on the platform. For more information about 802.1p priority, see 2.5 “Voice VLAN Commands” on page 2 - 31.

Format `classofservice dot1p-mapping <userpriority> <trafficclass>`

- Modes**
- Global Config
 - Interface Config

3.1.1.1 no classofservice dot1p-mapping

This command maps each 802.1p priority to its default internal traffic class value.

Format `no classofservice dot1p-mapping`

- Modes**
- Global Config
 - Interface Config



3.1.2 classofservice ip-dscp-mapping

This command maps an IP DSCP value to an internal traffic class. The *<ipdscp>* value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

The *<trafficclass>* values can range from 0-6, although the actual number of available traffic classes depends on the platform.

Format `classofservice ip-dscp-mapping <ipdscp> <trafficclass>`

Mode Global Config

3.1.2.1 no classofservice ip-dscp-mapping

This command maps each IP DSCP value to its default internal traffic class value.

Format `no classofservice ip-dscp-mapping`

Mode Global Config

3.1.3 classofservice trust

This command sets the class of service trust mode of an interface. You can set the mode to trust one of the Dot1p (802.1p), IP DSCP, or IP Precedence packet markings. You can also set the interface mode to untrusted. If you configure an interface to use Dot1p, the mode does not appear in the output of the `show running config` command because Dot1p is the default.



Note: The `classofservice trust dot1p` command will not be supported in future releases of the software because Dot1p is the default value. Use the `no classofservice trust` command to set the mode to the default value.

Default dot1p

Format `classofservice trust {dot1p | ip-dscp | ip-precedence | untrusted}`

Modes

- Global Config
- Interface Config

3.1.3.1 no classofservice trust

This command sets the interface mode to the default value.

Format `no classofservice trust`

Modes

- Global Config
- Interface Config

3.1.4 cos-queue min-bandwidth

This command specifies the minimum transmission bandwidth guarantee for each interface queue. The total number of queues supported per interface is platform specific. A value from 0-100 (percentage of link rate) must be specified for each supported queue, with 0 indicating no guaranteed minimum bandwidth. The sum of all values entered must not exceed 100.



Format `cos-queue min-bandwidth <bw-0> <bw-1> ... <bw-n>`
Modes

- Global Config
- Interface Config

3.1.4.1 no cos-queue min-bandwidth

This command restores the default for each queue's minimum bandwidth value.

Format `no cos-queue min-bandwidth`
Modes

- Global Config
- Interface Config

3.1.5 cos-queue strict

This command activates the strict priority scheduler mode for each specified queue.

Format `cos-queue strict <queue-id-1> [<queue-id-2> ... <queue-id-n>]`
Modes

- Global Config
- Interface Config

3.1.5.1 no cos-queue strict

This command restores the default weighted scheduler mode for each specified queue.

Format `no cos-queue strict <queue-id-1> [<queue-id-2> ... <queue-id-n>]`
Modes

- Global Config
- Interface Config

3.1.6 traffic-shape

This command specifies the maximum transmission bandwidth limit for the interface as a whole. Also known as rate shaping, traffic shaping has the effect of smoothing temporary traffic bursts over time so that the transmitted traffic rate is bounded.

Format `traffic-shape <bw>`
Modes

- Global Config
- Interface Config

3.1.6.1 no traffic-shape

This command restores the interface shaping rate to the default value.

Format `no traffic-shape`
Modes

- Global Config
- Interface Config

3.1.7 show classofservice dot1p-mapping

This command displays the current Dot1p (802.1p) priority mapping to internal traffic classes for a specific interface. The `<slot/port>` parameter is optional and is only valid on platforms that support independent per-port class of



service mappings. If specified, the 802.1p mapping table of the interface is displayed. If omitted, the most recent global configuration settings are displayed. For more information, see 2.5 “Voice VLAN Commands” on page 2 - 31.

Format `show classofservice dot1p-mapping [<slot/port>]`
Mode Privileged EXEC

The following information is repeated for each user priority.

Term	Definition
User Priority	The 802.1p user priority value.
Traffic Class	The traffic class internal queue identifier to which the user priority value is mapped.

3.1.8 **show classofservice ip-precedence-mapping**

This command displays the current IP Precedence mapping to internal traffic classes for a specific interface. The slot/port parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the IP Precedence mapping table of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format `show classofservice ip-precedence-mapping [<slot/port>]`
Mode Privileged EXEC

The following information is repeated for each user priority.

Term	Definition
IP Precedence	The IP Precedence value.
Traffic Class	The traffic class internal queue identifier to which the IP Precedence value is mapped.

3.1.9 **show classofservice ip-dscp-mapping**

This command displays the current IP DSCP mapping to internal traffic classes for the global configuration settings.

Format `show classofservice ip-dscp-mapping`
Mode Privileged EXEC

The following information is repeated for each user priority.

Term	Definition
IP DSCP	The IP DSCP value.
Traffic Class	The traffic class internal queue identifier to which the IP DSCP value is mapped.

3.1.10 **show classofservice trust**

This command displays the current trust mode setting for a specific interface. The <slot/port> parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If you specify an interface, the command displays the port trust mode of the interface. If you do not specify an interface, the command displays the most recent global configuration settings.

Format `show classofservice trust [<slot/port>]`
Mode Privileged EXEC



<i>Term</i>	<i>Definition</i>
Non-IP Traffic Class	The traffic class used for non-IP traffic. This is only displayed when the COS trust mode is set to trust IP Precedence or IP DSCP (on platforms that support IP DSCP).
Untrusted Traffic Class	The traffic class used for all untrusted traffic. This is only displayed when the COS trust mode is set to 'untrusted'.

3.1.11 show interfaces cos-queue

This command displays the class-of-service queue configuration for the specified interface. The slot/port parameter is optional and is only valid on platforms that support independent per-port class of service mappings. If specified, the class-of-service queue configuration of the interface is displayed. If omitted, the most recent global configuration settings are displayed.

Format `show interfaces cos-queue [<slot/port>]`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Queue Id	An interface supports n queues numbered 0 to (n-1). The specific n value is platform dependent.
Minimum Bandwidth	The minimum transmission bandwidth guarantee for the queue, expressed as a percentage. A value of 0 means bandwidth is not guaranteed and the queue operates using best-effort. This is a configured value.
Scheduler Type	Indicates whether this queue is scheduled for transmission using a strict priority or a weighted scheme. This is a configured value.
Queue Management Type	The queue depth management technique used for this queue (tail drop).

If you specify the interface, the command also displays the following information.

<i>Term</i>	<i>Definition</i>
Interface	The slot/port of the interface. If displaying the global configuration, this output line is replaced with a Global Config indication.
Interface Shaping Rate	The maximum transmission bandwidth limit for the interface as a whole. It is independent of any per-queue maximum bandwidth value(s) in effect for the interface. This is a configured value.

3.2 show interface cos-counter

This command displays the number of COS dropped packets. The counter is incremented if packets are dropped because of COS on egress side. The counter is shown for the specified interface. Note, that this counter can't be cleared on the hardware.

Format `show interface cos-counter <slot/port>`

Mode Privileged EXEC

3.3 show packet-memory

This command displays the packet-memory limits. It displays some general values (the number of existing COS queues and the number of available cells) and a table of the configured limits for all interfaces. The configured limits consist of static cell limits for each COS queue, dynamic cell limit and low water mark. The cell limits are listed in



absolute cell count or percent of the available cells (1/1000 percent). The low water mark is a number (0..75%, 1..50%, 2..25%, 3..12,5%).

Format `show packet-memory {cells | percent}`
Mode Privileged EXEC

3.3.1 packet-memory (configure)

This command configures the packet-memory limits for all ports or the CPU port. The static limits must be set for all COS queues (see 'show packet-memory') separated by comma. If configuring the packet-memory you **should** know exactly what to do. No checks for the limits are done except that the maximal memory value is not exceeded for each single limit. Therefore the user can configure step by step all information even if the sum of the static limits exceeds the packet memory temporarily. To activate the configuration it must be saved (normal saving) and a reset must be executed. Before saving it is checked that the sum of all static limits don't exceed the maximal memory. The dynamic cells may exceed this limit.

Format `packet-memory {all | cpu} {cells | percent} <static-limits> <dynamic-limit>`
 `packet-memory {all | cpu} lwm <value>`
Mode Global Config

3.3.2 packet-memory (interface)

This command configures the packet-memory limits for the related interface. See detailed under 'packet-memory' above.

Format `packet-memory {cells | percent} <static-limits> <dynamic-limit>`
 `packet-memory lwm <value>`
Mode Interface Config

3.3.3 show protection-group

This command lists the protection groups and port egress masks. All or specified protection groups or port egress masks (for all or a specified interface) can be displayed. The protection groups are listed with the interface members, the egress masks are listed related to the calculation type (user specified, related to the protection group or '--' for default).

Format `show protection-group <0..3>`
 `show protection-group all`
 `show protection-group mask <slot/port>`
 `show protection-group mask all`
Mode Privileged EXEC

3.3.4 protection-group (configure)

This command adds a protection group and/or a name associated to a group. The addition of a protection group has no effect as long as no members are included (interface). Optional a name can be assigned to a protection group with parameter 'name' when adding the group or for an already active group. The length of the name is restricted to 15 characters.

Format `protection-group <0..3>`
 `protection-group <0..3> name <name>`



Mode Global Config

3.3.4.1 no protection-group (configure)

This command deletes a protection group and/or a name associated to a group. If deleting a protection group all members of this group are deleted too. The name can be deleted by using the 'no' command with the parameter 'name' (the protection group remains active then). The length of the name is restricted to 15 characters.

Format `no protection-group <0..3>`
`no protection-group <0..3> name <name>`

Mode Global Config

3.3.5 protection-group (interface)

This command is used to add an interface to a protection group. Each interface must be member of only one protection group. If a port is member in a protection group it may sent packets to ports which are not member of any group and to ports in the same group, but not to ports in another group.

Format `protection-group <0..3>`

Mode Interface Config

3.3.5.1 no protection-group (interface)

This command is used to delete an interface from a protection group.

Format `no protection-group <0..3>`

Mode Interface Config

3.4 Differentiated Services (DiffServ) Commands

This section describes the commands you use to configure QOS Differentiated Services (DiffServ).

You configure DiffServ in several stages by specifying three DiffServ components:

1. Class
 - a. Creating and deleting classes.
 - b. Defining match criteria for a class.
2. Policy
 - a. Creating and deleting policies
 - b. Associating classes with a policy
 - c. Defining policy statements for a policy/class combination
3. Service
 - a. Adding and removing a policy to/from an inbound interface

The DiffServ class defines the packet filtering criteria. The attributes of a DiffServ policy define the way the switch processes packets. You can define policy attributes on a per-class instance basis. The switch applies these attributes when a match occurs.



Packet processing begins when the switch tests the match criteria for a packet. The switch applies a policy to a packet when it finds a class match within that policy.

The following rules apply when you create a DiffServ class:

- Each class can contain a maximum of one referenced (nested) class
- Class definitions do not support hierarchical service policies

A given class definition can contain a maximum of one reference to another class. You can combine the reference with other match criteria. The referenced class is truly a reference and not a copy since additions to a referenced class affect all classes that reference it. Changes to any class definition currently referenced by any other class must result in valid class definitions for all derived classes, otherwise the switch rejects the change. You can remove a class reference from a class definition.

The only way to remove an individual match criterion from an existing class definition is to delete the class and re-create it.



Note: The mark possibilities for policing include CoS, IP DSCP, and IP Precedence. While the latter two are only meaningful for IP packet types, CoS marking is allowed for both IP and non-IP packets, since it updates the 802.1p user priority field contained in the VLAN tag of the layer 2 packet header.

3.4.1 diffserv

This command sets the DiffServ operational mode to active. While disabled, the DiffServ configuration is retained and can be changed, but it is not activated. When enabled, DiffServ services are activated.

Format `diffserv`
Mode Global Config

3.4.1.1 no diffserv

This command sets the DiffServ operational mode to inactive. While disabled, the DiffServ configuration is retained and can be changed, but it is not activated. When enabled, DiffServ services are activated.

Format `no diffserv`
Mode Global Config

3.5 DiffServ Class Commands

Use the DiffServ class commands to define traffic classification. To classify traffic, you specify Behavior Aggregate (BA), based on DSCP and Multi-Field (MF) classes of traffic (name, match criteria)

This set of commands consists of class creation/deletion and matching, with the class match commands specifying Layer 3, Layer 2, and general match criteria. The class match criteria are also known as class rules, with a class definition consisting of one or more rules to identify the traffic that belongs to the class.



Note: Once you create a class match criterion for a class, you cannot change or delete the criterion. To change or delete a class match criterion, you must delete and re-create the entire class.

The CLI command root is `class-map`.



3.5.1 class-map

This command defines a DiffServ class of type match-all. When used without any match condition, this command enters the class-map mode. The *<class-map-name>* is a case sensitive alphanumeric string from 1 to 31 characters uniquely identifying an existing DiffServ class.



Note: The class-map-name 'default' is reserved and must not be used.

The class type of `match-all` indicates all of the individual match conditions must be true for a packet to be considered a member of the class.



Note: The optional keywords `[{ipv4 | ipv6}]` specify the Layer 3 protocol for this class. If not specified, this parameter defaults to 'ipv4'. This maintains backward compatibility for configurations defined on systems before IPv6 match items were supported.



Note: The CLI mode is changed to Class-Map Config or Ipv6-Class-Map Config when this command is successfully executed depending on the `[{ipv4 | ipv6}]` keyword specified.

Format `class-map match-all <class-map-name> [{ipv4 | ipv6}]`

Mode Global Config

3.5.1.1 no class-map

This command eliminates an existing DiffServ class. The *<class-map-name>* is the name of an existing DiffServ class. This command may be issued at any time; if the class is currently referenced by one or more policies or by any other class, the delete action fails.

Format `no class-map <class-map-name>`

Mode Global Config

3.5.2 class-map rename

This command changes the name of a DiffServ class. The *<class-map-name>* is the name of an existing DiffServ class. The *<new-class-map-name>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the class.

Default none

Format `class-map rename <class-map-name> <new-class-map-name>`

Mode Global Config

3.5.3 match ethertype

This command adds to the specified class definition a match condition based on the value of the ethertype. The *<ethertype>* value is specified as one of the following keywords: `appletalk`, `arp`, `ibmsna`, `ipv4`, `ipv6`, `ipx`,



`mplsmcast`, `mplsucast`, `netbios`, `novell`, `pppoe`, `rarp` or as a custom ethertype value in the range of 0x0600-0xFFFF.



Note: This command is not available on the Broadcom 5630x platform.

Format `match [not]ethertype {<keyword> | custom <0x0600-0xFFFF>}`
Mode Class-Map Config
 Ipv6-Class-Map Config

3.5.4 match any

This command adds to the specified class definition a match condition whereby all packets are considered to belong to the class.

Default none
Format `match any`
Mode Class-Map Config
 Ipv6-Class-Map Config

3.5.5 match class-map

This command adds to the specified class definition the set of match conditions defined for another class. The `<refclassname>` is the name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

Default none
Format `match class-map <refclassname>`
Mode Class-Map Config
 Ipv6-Class-Map Config



Note:

- The parameters `<refclassname>` and `<class-map-name>` can not be the same.
- Only one other class may be referenced by a class.
- Any attempts to delete the `<refclassname>` class while the class is still referenced by any `<class-map-name>` fails.
- The combined match criteria of `<class-map-name>` and `<refclassname>` must be an allowed combination based on the class type.
- Any subsequent changes to the `<refclassname>` class match criteria must maintain this validity, or the change attempt fails.
- The total number of class rules formed by the complete reference class chain (including both predecessor and successor classes) must not exceed a platform-specific maximum. In some cases, each removal of a reffclass rule reduces the maximum number of available rules in the class definition by one.



3.5.5.1 no match class-map

This command removes from the specified class definition the set of match conditions defined for another class. The `<refclassname>` is the name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.

Format `no match class-map <refclassname>`
Mode Class-Map Config
 Ipv6-Class-Map Config

3.5.6 match cos

This command adds to the specified class definition a match condition for the Class of Service value (the only tag in a single tagged packet or the first or outer 802.1Q tag of a double VLAN tagged packet). The value may be from 0 to 7.



Note: This command is not available on the Broadcom 5630x platform.

Default none
Format `match [not] cos <0-7>`
Mode Class-Map Config
 Ipv6-Class-Map Config

3.5.7 match secondary-cos

This command adds to the specified class definition a match condition for the secondary Class of Service value (the inner 802.1Q tag of a double VLAN tagged packet). The value may be from 0 to 7.



Note: This command is not available on the Broadcom Tucana and BCM5630x (Helix B0) platforms. The command is supported on the following platforms:

- BCM5650x only. (Firebolt B1)
- BCM56314 (Helix A0)
- BCM56514 (Firebolt2-A0)

Default none
Format `match [not] secondary-cos <0-7>`
Mode Ipv6-Class-Map Config
 Class-Map Config

3.5.8 match destination-address mac

This command adds to the specified class definition a match condition based on the destination MAC address of a packet. The `<macaddr>` parameter is any layer 2 MAC address formatted as six, two-digit hexadecimal numbers separated by colons (e.g., 00:11:22:dd:ee:ff). The `<macmask>` parameter is a layer 2 MAC address bit mask, which



need not be contiguous, and is formatted as six, two-digit hexadecimal numbers separated by colons (e.g., ff:07:23:ff:fe:dc).



Note: This command is not available on the Broadcom 5630x platform.

Default	none
Format	match [not]destination-address mac <macaddr> <macmask>
Mode	Ipv6-Class-Map Config Class-Map Config

3.5.9 match dstip

This command adds to the specified class definition a match condition based on the destination IP address of a packet. The <ipaddr> parameter specifies an IP address. The <ipmask> parameter specifies an IP address bit mask and must consist of a contiguous set of leading 1 bits.

Default	none
Format	match dstip <ipaddr> <ipmask>
Mode	Class-Map Config

3.5.10 match dstip6

This command adds to the specified class definition a match condition based on the destination IPv6 address of a packet.

Default	none
Format	match dstip6 <destination-ipv6-prefix/prefix-length>
Mode	Ipv6-Class-Map Config

3.5.11 match dstl4port

This command adds to the specified class definition a match condition based on the destination layer 4 port of a packet using a single keyword or numeric notation. To specify the match condition as a single keyword, the value for <portkey> is one of the supported port name keywords. The currently supported <portkey> values are: domain, echo, ftp, ftpdata, http, smtp, snmp, telnet, tftp, www. Each of these translates into its equivalent port number. To specify the match condition using a numeric notation, one layer 4 port number is required. The port number is an integer from 0 to 65535.

Default	none
Format	match dstl4port {<portkey> <0-65535>}
Mode	Ipv6-Class-Map Config Class-Map Config

3.5.12 match ip dscp

This command adds to the specified class definition a match condition based on the value of the IP DiffServ Code Point (DSCP) field in a packet, which is defined as the high-order six bits of the Service Type octet in the IP header (the low-order two bits are not checked).



The `<dscpval>` value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.



Note: The ip dscp, ip precedence, and ip tos match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

Default none
Format `match ip dscp <dscpval>`
Mode Ipv6-Class-Map Config
 Class-Map Config

3.5.13 match ip precedence

This command adds to the specified class definition a match condition based on the value of the IP Precedence field in a packet, which is defined as the high-order three bits of the Service Type octet in the IP header (the low-order five bits are not checked). The precedence value is an integer from 0 to 7.



Note: The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.

Default none
Format `match ip precedence <0-7>`
Mode Class-Map Config

3.5.14 match ip tos

This command adds to the specified class definition a match condition based on the value of the IP TOS field in a packet, which is defined as all eight bits of the Service Type octet in the IP header. The value of `<tosbits>` is a two-digit hexadecimal number from 00 to ff. The value of `<tosmask>` is a two-digit hexadecimal number from 00 to ff. The `<tosmask>` denotes the bit positions in `<tosbits>` that are used for comparison against the IP TOS field in a packet. For example, to check for an IP TOS value having bits 7 and 5 set and bit 1 clear, where bit 7 is most significant, use a `<tosbits>` value of a0 (hex) and a `<tosmask>` of a2 (hex).



Note: The IP DSCP, IP Precedence, and IP ToS match conditions are alternative ways to specify a match criterion for the same Service Type field in the IP header, but with a slightly different user notation.



Note: This “free form” version of the IP DSCP/Precedence/TOS match specification gives the user complete control when specifying which bits of the IP Service Type field are checked.

Default none
Format `match ip tos <tosbits> <tosmask>`
Mode Class-Map Config



3.5.15 match protocol

This command adds to the specified class definition a match condition based on the value of the IP Protocol field in a packet using a single keyword notation or a numeric value notation.

To specify the match condition using a single keyword notation, the value for `<protocol-name>` is one of the supported protocol name keywords. The currently supported values are: `icmp`, `igmp`, `ip`, `tcp`, `udp`. A value of `ip` matches all protocol number values.

To specify the match condition using a numeric value notation, the protocol number is a standard value assigned by IANA and is interpreted as an integer from 0 to 255.



Note: This command does not validate the protocol number value against the current list defined by IANA.

Default	none
Format	<code>match protocol {<protocol-name> <0-255>}</code>
Mode	Ipv6-Class-Map Config Class-Map Config

3.5.16 match source-address mac

This command adds to the specified class definition a match condition based on the source MAC address of a packet. The `<address>` parameter is any layer 2 MAC address formatted as six, two-digit hexadecimal numbers separated by colons (e.g., 00:11:22:dd:ee:ff). The `<macmask>` parameter is a layer 2 MAC address bit mask, which may not be contiguous, and is formatted as six, two-digit hexadecimal numbers separated by colons (e.g., ff:07:23:ff:fe:dc). The optional `[not]` parameter has the effect of negating this match condition for the class (i.e., match all source MAC addresses except for what is specified here).



Note: This command is not available on the Broadcom 5630x platform.

Default	none
Format	<code>match source-address mac <address> <macmask></code>
Mode	Ipv6-Class-Map Config Class-Map Config

3.5.17 match srcip

This command adds to the specified class definition a match condition based on the source IP address of a packet. The `<ipaddr>` parameter specifies an IP address. The `<ipmask>` parameter specifies an IP address bit mask and must consist of a contiguous set of leading 1 bits.

Default	none
Format	<code>match srcip <ipaddr> <ipmask></code>
Mode	Class-Map Config



3.5.18 match srcip6

This command adds to the specified class definition a match condition based on the source IP address of a packet.

Default	none
Format	<code>match srcip6 <source-ipv6-prefix/prefix-length></code>
Mode	Ipv6-Class-Map Config

3.5.19 match srcl4port

This command adds to the specified class definition a match condition based on the source layer 4 port of a packet using a single keyword or numeric notation. To specify the match condition as a single keyword notation, the value for *<portkey>* is one of the supported port name keywords (listed below). The currently supported *<portkey>* values are: domain, echo, ftp, ftpdata, http, smtp, snmp, telnet, tftp, www. Each of these translates into its equivalent port number, which is used as both the start and end of a port range.

To specify the match condition as a numeric value, one layer 4 port number is required. The port number is an integer from 0 to 65535.

Default	none
Format	<code>match srcl4port {<portkey> <0-65535>}</code>
Mode	Ipv6-Class-Map Config Class-Map Config

3.5.20 match vlan

This command adds to the specified class definition a match condition based on the value of the layer 2 VLAN Identifier field (the only tag in a single tagged packet or the first or outer tag of a double VLAN tagged packet). The VLAN ID is an integer from 1 to 4095.



Note: This command is not available on the Broadcom 5630x platform.

Default	none
Format	<code>match [not] vlan <1-4095></code>
Mode	Ipv6-Class-Map Config Class-Map Config

3.5.21 match secondary-vlan

This command adds to the specified class definition a match condition based on the value of the layer 2 secondary VLAN Identifier field (the inner 802.1Q tag of a double VLAN tagged packet). The secondary VLAN ID is an integer from 1 to 4095.



Note: This command is not available on the Broadcom 5630x platform.

Default	none
----------------	------



Format `match [not] secondary-vlan <1-4095>`
Mode Ipv6-Class-Map Config
 Class-Map Config

3.6 DiffServ Policy Commands

Use the DiffServ policy commands to specify traffic conditioning actions, such as policing and marking, to apply to traffic classes

Use the policy commands to associate a traffic class that you define by using the class command set with one or more QoS policy attributes. Assign the class/policy association to an interface to form a service. Specify the policy name when you create the policy.

Each traffic class defines a particular treatment for packets that match the class definition. You can associate multiple traffic classes with a single policy. When a packet satisfies the conditions of more than one class, preference is based on the order in which you add the classes to the policy. The first class you add has the highest precedence.

This set of commands consists of policy creation/deletion, class addition/removal, and individual policy attributes.



Note: The only way to remove an individual policy attribute from a class instance within a policy is to remove the class instance and re-add it to the policy. The values associated with an existing policy attribute can be changed without removing the class instance.

The CLI command root is `policy-map`.

3.6.1 assign-queue

This command modifies the queue id to which the associated traffic stream is assigned. The `queueid` is an integer from 0 to $n-1$, where n is the number of egress queues supported by the device.

Format `assign-queue <queueid>`
Mode Policy-Class-Map Config
Incompatibilities Drop

3.6.2 drop

This command specifies that all packets for the associated traffic stream are to be dropped at ingress.

Format `drop`
Mode Policy-Class-Map Config
Incompatibilities Assign Queue, Mark (all forms), Mirror, Police, Redirect

3.6.3 mirror

This command specifies that all incoming packets for the associated traffic stream are copied to a specific egress interface (physical port or LAG).



Note: This command is not available on the Broadcom 5630x platform.



Format	<code>mirror <slot/port></code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Redirect

3.6.4 redirect

This command specifies that all incoming packets for the associated traffic stream are redirected to a specific egress interface (physical port or port-channel).



Note: This command is not available on the Broadcom 5630x platform.

Format	<code>redirect <slot/port></code>
Mode	Policy-Class-Map Config
Incompatibilities	Drop, Mirror

3.6.5 conform-color

Use this command to enable color-aware traffic policing and define the conform-color class map. Used in conjunction with the police command where the fields for the conform level are specified. The `<class-map-name>` parameter is the name of an existing DiffServ class map.



Note: This command may only be used after specifying a police command for the policy-class instance.

Format	<code>conform-color <class-map-name></code>
Mode	Policy-Class-Map Config

3.6.6 class

This command creates an instance of a class definition within the specified policy for the purpose of defining treatment of the traffic class through subsequent policy attribute statements. The `<classname>` is the name of an existing DiffServ class.



Note: This command causes the specified policy to create a reference to the class definition.



Note: The CLI mode is changed to Policy-Class-Map Config when this command is successfully executed.

Format	<code>class <classname></code>
Mode	Policy-Map Config



3.6.6.1 no class

This command deletes the instance of a particular class and its defined treatment from the specified policy. `<classname>` is the names of an existing DiffServ class.



Note: This command removes the reference to the class definition for the specified policy.

Format `no class <classname>`
Mode Policy-Map Config

3.6.7 mark cos

This command marks all packets for the associated traffic stream with the specified class of service value in the priority field of the 802.1p header (the only tag in a single tagged packet or the first or outer 802.1Q tag of a double VLAN tagged packet). If the packet does not already contain this header, one is inserted. The CoS value is an integer from 0 to 7. `mark ip-dscp`

Default 1
Format `mark-cos <0-7>`
Mode Policy-Class-Map Config
Incompatibilities Drop, Mark IP DSCP, IP Precedence, Police

This command marks all packets for the associated traffic stream with the specified IP DSCP value.

The `<dscpval>` value is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

Format `mark ip-dscp <dscpval>`
Mode Policy-Class-Map Config
Incompatibilities Drop, Mark CoS, Mark IP Precedence, Police

3.6.8 mark ip-precedence

This command marks all packets for the associated traffic stream with the specified IP Precedence value. The IP Precedence value is an integer from 0 to 7.



Note: This command may not be used on IPv6 classes. IPv6 does not have a precedence field.

Format `mark ip-precedence <0-7>`
Mode Policy-Class-Map Config
Incompatibilities Drop, Mark CoS, Mark IP Precedence, Police
Policy Type In



3.6.9 police-simple

This command is used to establish the traffic policing style for the specified class. The simple form of the police command uses a single data rate and burst size, resulting in two outcomes: conform and violate. The conforming data rate is specified in kilobits-per-second (Kbps) and is an integer from 1 to 4294967295. The conforming burst size is specified in kilobytes (KB) and is an integer from 1 to 128.

For each outcome, the only possible actions are drop, set-cos-transmit, set-dscp-transmit, set-prec-transmit, or transmit. In this simple form of the police command, the conform action defaults to transmit and the violate action defaults to drop.

For set-dscp-transmit, a *<dscpval>* value is required and is specified as either an integer from 0 to 63, or symbolically through one of the following keywords: af11, af12, af13, af21, af22, af23, af31, af32, af33, af41, af42, af43, be, cs0, cs1, cs2, cs3, cs4, cs5, cs6, cs7, ef.

For set-prec-transmit, an IP Precedence value is required and is specified as an integer from 0-7.

For set-cos-transmit an 802.1p priority value is required and is specified as an integer from 0-7.

Format `police-simple {<1-4294967295> <1-128> conform-action {drop | set-prec-transmit <0-7> | set-dscp-transmit <0-63> | set-cos-transmit <0-7> | transmit} [violate-action {drop | set-prec-transmit <0-7> | set-dscp-transmit <0-63> | set-cos-transmit <0-7> | transmit}]}`

Mode Policy-Class-Map Config

Incompatibilities Drop, Mark (all forms)

3.6.10 policy-map

This command establishes a new DiffServ policy. The *<polycyname>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the policy. The type of policy is specific to the inbound traffic direction as indicated by the *in* parameter.



Note: The CLI mode is changed to Policy-Map Config when this command is successfully executed.

Format `policy-map <polycyname> in`

Mode Global Config

3.6.10.1 no policy-map

This command eliminates an existing DiffServ policy. The *<polycyname>* parameter is the name of an existing DiffServ policy. This command may be issued at any time. If the policy is currently referenced by one or more interface service attachments, this delete attempt fails.

Format `no policy-map <polycyname>`

Mode Global Config



3.6.11 policy-map rename

This command changes the name of a DiffServ policy. The *<polycyname>* is the name of an existing DiffServ class. The *<newpolycyname>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the policy.

Format `policy-map rename <polycyname> <newpolycyname>`
Mode Global Config

3.7 DiffServ Service Commands

Use the DiffServ service commands to assign a DiffServ traffic conditioning policy, which you specified by using the policy commands, to an interface in the incoming direction

The service commands attach a defined policy to a directional interface. You can assign only one policy at any one time to an interface in the inbound direction. DiffServ is not used in the outbound direction.

This set of commands consists of service addition/removal.

The CLI command root is `service-policy`.

3.7.1 service-policy

This command attaches a policy to an interface in the inbound direction. The *<polycyname>* parameter is the name of an existing DiffServ policy. This command causes a service to create a reference to the policy.



Note: This command effectively enables DiffServ on an interface in the inbound direction. There is no separate interface administrative 'mode' command for DiffServ.



Note: This command fails if any attributes within the policy definition exceed the capabilities of the interface. Once a policy is successfully attached to an interface, any attempt to change the policy definition, that would result in a violation of the interface capabilities, causes the policy change attempt to fail.

Format `service-policy in <polycyname>`
Modes • Global Config
 • Interface Config



Note: Each interface can have one policy attached.

3.7.1.1 no service-policy

This command detaches a policy from an interface in the inbound direction. The *<polycyname>* parameter is the name of an existing DiffServ policy.



Note: This command causes a service to remove its reference to the policy. This command effectively disables DiffServ on an interface in the inbound direction. There is no separate interface administrative 'mode' command for DiffServ.



Format `no service-policy in <policy-mapname>`

- Modes**
- Global Config
 - Interface Config

3.8 DiffServ Show Commands

Use the DiffServ show commands to display configuration and status information for classes, policies, and services. You can display DiffServ information in summary or detailed formats. The status information is only shown when the DiffServ administrative mode is enabled.

3.8.1 show class-map

This command displays all configuration information for the specified class. The `<class-name>` is the name of an existing DiffServ class.

Format `show class-map <class-name>`

- Modes**
- Privileged EXEC
 - User EXEC

If the class-name is specified the following fields are displayed:

Term	Definition
Class Name	The name of this class.
Class Type	A class type of 'all' means every match criterion defined for the class is evaluated simultaneously and must all be true to indicate a class match.
L3 Proto	The Layer 3 protocol for this class. Possible values are IPv4 and IPv6.
Match Criteria	The Match Criteria fields are only displayed if they have been configured. Not all platforms support all match criteria values. They are displayed in the order entered by the user. The fields are evaluated in accordance with the class type. The possible Match Criteria fields are: Destination IP Address, Destination Layer 4 Port, Destination MAC Address, Ethertype, Source MAC Address, VLAN, Class of Service, Every, IP DSCP, IP Precedence, IP TOS, Protocol Keyword, Reference Class, Source IP Address, and Source Layer 4 Port.
Values	The values of the Match Criteria.

If you do not specify the Class Name, this command displays a list of all defined DiffServ classes. The following fields are displayed:

Term	Definition
Class Name	The name of this class. (Note that the order in which classes are displayed is not necessarily the same order in which they were created.)
Class Type	A class type of 'all' means every match criterion defined for the class is evaluated simultaneously and must all be true to indicate a class match.
Ref Class Name	The name of an existing DiffServ class whose match conditions are being referenced by the specified class definition.



3.8.2 show diffserv

This command displays the DiffServ General Status Group information, which includes the current administrative mode setting as well as the current and maximum number of rows in each of the main DiffServ private MIB tables. This command takes no options.

Format `show diffserv`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
DiffServ Admin mode	The current value of the DiffServ administrative mode.
Class Table Size	The current number of entries (rows) in the Class Table.
Class Table Max	The maximum allowed entries (rows) for the Class Table.
Class Rule Table Size	The current number of entries (rows) in the Class Rule Table.
Class Rule Table Max	The maximum allowed entries (rows) for the Class Rule Table.
Policy Table Size	The current number of entries (rows) in the Policy Table.
Policy Table Max	The maximum allowed entries (rows) for the Policy Table.
Policy Instance Table Size	Current number of entries (rows) in the Policy Instance Table.
Policy Instance Table Max	Maximum allowed entries (rows) for the Policy Instance Table.
Policy Attribute Table Size	Current number of entries (rows) in the Policy Attribute Table.
Policy Attribute Table Max	Maximum allowed entries (rows) for the Policy Attribute Table.
Service Table Size	The current number of entries (rows) in the Service Table.
Service Table Max	The maximum allowed entries (rows) for the Service Table.

3.8.3 show policy-map

This command displays all configuration information for the specified policy. The *<policyname>* is the name of an existing DiffServ policy.

Format `show policy-map [policyname]`
Mode Privileged EXEC

If the Policy Name is specified the following fields are displayed:

<i>Term</i>	<i>Definition</i>
Policy Name	The name of this policy.
Type	The policy type (Only inbound policy definitions are supported for this platform.)



The following information is repeated for each class associated with this policy (only those policy attributes actually configured are displayed):

Term	Definition
Assign Queue	Directs traffic stream to the specified QoS queue. This allows a traffic classifier to specify which one of the supported hardware queues are used for handling packets belonging to the class.
Class Name	The name of this class.
Committed Burst Size (KB)	The committed burst size, used in simple policing.
Committed Rate (Kbps)	The committed rate, used in simple policing.
Conform Action	The current setting for the action taken on a packet considered to conform to the policing parameters. This is not displayed if policing is not in use for the class under this policy.
Conform COS	The CoS mark value if the conform action is set-cos-transmit.
Conform DSCP Value	The DSCP mark value if the conform action is set-dscp-transmit.
Conform IP Precedence Value	The IP Precedence mark value if the conform action is set-prec-transmit.
Drop	Drop a packet upon arrival. This is useful for emulating access control list operation using DiffServ, especially when DiffServ and ACL cannot co-exist on the same interface.
Mark CoS	The class of service value that is set in the 802.1p header of inbound packets. This is not displayed if the mark cos was not specified.
Mark IP DSCP	The mark/re-mark value used as the DSCP for traffic matching this class. This is not displayed if mark ip description is not specified.
Mark IP Precedence	The mark/re-mark value used as the IP Precedence for traffic matching this class. This is not displayed if mark ip precedence is not specified.
Mirror	Copies a classified traffic stream to a specified egress port (physical port or LAG). This can occur in addition to any marking or policing action. It may also be specified along with a QoS queue assignment. This field does not display on Broadcom 5630x platforms.
Non-Conform Action	The current setting for the action taken on a packet considered to not conform to the policing parameters. This is not displayed if policing not in use for the class under this policy.
Non-Conform COS	The CoS mark value if the non-conform action is set-cos-transmit.
Non-Conform DSCP Value	The DSCP mark value if the non-conform action is set-dscp-transmit.
Non-Conform IP Precedence Value	The IP Precedence mark value if the non-conform action is set-prec-transmit.
Policing Style	The style of policing, if any, used (simple).
Redirect	Forces a classified traffic stream to a specified egress port (physical port or LAG). This can occur in addition to any marking or policing action. It may also be specified along with a QoS queue assignment. This field does not display on Broadcom 5630x platforms.

If the Policy Name is not specified this command displays a list of all defined DiffServ policies. The following fields are displayed:

Term	Definition
Policy Name	The name of this policy. (The order in which the policies are displayed is not necessarily the same order in which they were created.)
Policy Type	The policy type (Only inbound is supported).
Class Members	List of all class names associated with this policy.



3.8.4 show diffserv service

This command displays policy service information for the specified interface and direction. The `<slot/port>` parameter specifies a valid slot/port number for the system.

Format `show diffserv service <slot/port> in`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
DiffServ Admin Mode	The current setting of the DiffServ administrative mode. An attached policy is only in effect on an interface while DiffServ is in an enabled mode.
Interface	Valid slot and port number separated by a forward slash.
Direction	The traffic direction of this interface service.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.
Policy Details	Attached policy details, whose content is identical to that described for the <code>show policy-map <polycymapname></code> command (content not repeated here for brevity).

3.8.5 show diffserv service brief

This command displays all interfaces in the system to which a DiffServ policy has been attached. The inbound direction parameter is optional.

Format `show diffserv service brief [in]`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
DiffServ Mode	The current setting of the DiffServ administrative mode. An attached policy is only active on an interface while DiffServ is in an enabled mode.

The following information is repeated for interface and direction (only those interfaces configured with an attached policy are shown):

<i>Term</i>	<i>Definition</i>
Interface	Valid slot and port number separated by a forward slash.
Direction	The traffic direction of this interface service.
OperStatus	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.

3.8.6 show policy-map interface

This command displays policy-oriented statistics information for the specified interface and direction. The `<slot/port>` parameter specifies a valid interface for the system.



Note: This command is only allowed while the DiffServ administrative mode is enabled.



Format `show policy-map interface <slot/port> [in]`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Interface	Valid slot and port number separated by a forward slash.
Direction	The traffic direction of this interface service.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface in the indicated direction.

The following information is repeated for each class instance within this policy:

<i>Term</i>	<i>Definition</i>
Class Name	The name of this class instance.
In Discarded Packets	A count of the packets discarded for this class instance for any reason due to DiffServ treatment of the traffic class.

3.8.7 show service-policy

This command displays a summary of policy-oriented statistics information for all interfaces in the specified direction.

Format `show service-policy in`

Mode Privileged EXEC

The following information is repeated for each interface and direction (only those interfaces configured with an attached policy are shown):

<i>Term</i>	<i>Definition</i>
Interface	Valid slot and port number separated by a forward slash.
Operational Status	The current operational status of this DiffServ service interface.
Policy Name	The name of the policy attached to the interface.
Note:	

3.9 MAC Access Control List (ACL) Commands

This section describes the commands you use to configure MAC ACL settings. MAC ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to MAC ACLs:

- The maximum number of ACLs you can create is hardware dependent. The limit applies to all ACLs, regardless of type.
- The system supports only Ethernet II frame types.
- The maximum number of rules per MAC ACL is hardware dependent.
- For the Broadcom 5630x platform, if you configure an IP ACL on an interface, you cannot configure a MAC ACL on the same interface.



3.9.1 mac access-list extended

This command creates a MAC Access Control List (ACL) identified by *<name>*, consisting of classification fields defined for the Layer 2 header of an Ethernet frame. The *<name>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the MAC access list.

If a MAC ACL by this name already exists, this command enters Mac-Access-List config mode to allow updating the existing MAC ACL.



Note: The CLI mode changes to Mac-Access-List Config mode when you successfully execute this command.

Format `mac access-list extended <name>`

Mode Global Config

3.9.1.1 no mac access-list extended

This command deletes a MAC ACL identified by *<name>* from the system.

Format `no mac access-list extended <name>`

Mode Global Config

3.9.2 mac access-list extended rename

This command changes the name of a MAC Access Control List (ACL). The *<name>* parameter is the name of an existing MAC ACL. The *<newname>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the MAC access list.

This command fails if a MAC ACL by the name *<newname>* already exists.

Format `mac access-list extended rename <name> <newname>`

Mode Global Config

3.9.3 {deny | permit}

This command creates a new rule for the current MAC access list. Each rule is appended to the list of configured rules for the list.



Note: The 'no' form of this command is not supported, since the rules within a MAC ACL cannot be deleted individually. Rather, the entire MAC ACL must be deleted and re-specified.



Note: An implicit 'deny all' MAC rule always terminates the access list.



Note: For BCM5630x and BCM5650x based systems, assign-queue, redirect, and mirror attributes are configurable for a deny rule, but they have no operational effect.



A rule may either deny or permit traffic according to the specified classification fields. At a minimum, the source and destination MAC value must be specified, each of which may be substituted using the keyword `any` to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

The Ethertype may be specified as either a keyword or a four-digit hexadecimal value from 0x0600-0xFFFF. The currently supported `<ethertypekey>` values are: `appletalk`, `arp`, `ibmsna`, `ipv4`, `ipv6`, `ipx`, `mplsmcast`, `mplsucast`, `netbios`, `novell`, `pppoe`, `rarp`. Each of these translates into its equivalent Ethertype value(s).

Table 1: Ethertype Keyword and 4-digit Hexadecimal Value

Ethertype Keyword	Corresponding Value
appletalk	0x809B
arp	0x0806
ibmsna	0x80D5
ipv4	0x0800
ipv6	0x86DD
ipx	0x8037
mplsmcast	0x8848
mplsucast	0x8847
netbios	0x8191
novell	0x8137, 0x8138
pppoe	0x8863, 0x8864
rarp	0x8035

The `vlan` and `cos` parameters refer to the VLAN identifier and 802.1p user priority fields, respectively, of the VLAN tag. For packets containing a double VLAN tag, this is the first (or outer) tag.

The `assign-queue` parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed `<queue-id>` value is 0-(n-1), where n is the number of user configurable queues available for the hardware platform. The `assign-queue` parameter is valid only for a `permit` rule.

For the Broadcom 5650x platform, the `mirror` parameter allows the traffic matching this rule to be copied to the specified `<slot/port>`, while the `redirect` parameter allows the traffic matching this rule to be forwarded to the specified `<slot/port>`. The `assign-queue` and `redirect` parameters are only valid for a `permit` rule.



Note: The `mirror` and `redirect` parameters are not available on the Broadcom 5630x platform.



Note: The special command form `{deny | permit} any any` is used to match all Ethernet layer 2 packets, and is the equivalent of the IP access list “match every” rule.

Format `{deny|permit} {<srcmac> | any} {<dstmac> | any} [<ethertypekey> | <0x0600-0xFFFF>] [vlan {eq <0-4095>}] [cos <0-7>] [[log] [assign-queue <queue-id>]] [{mirror | redirect} <slot/port>]`

Mode Mac-Access-List Config



3.9.4 mac access-group

This command either attaches a specific MAC Access Control List (ACL) identified by *<name>* to an interface, or associates it with a VLAN ID, in a given direction. The *<name>* parameter must be the name of an existing MAC ACL.

An optional sequence number may be specified to indicate the order of this mac access list relative to other mac access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified mac access list replaces the currently attached mac access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

This command specified in 'Interface Config' mode only affects a single interface, whereas the 'Global Config' mode setting is applied to all interfaces. The VLAN keyword is only valid in the 'Global Config' mode. The 'Interface Config' mode command is only available on platforms that support independent per-port class of service queue configuration.

Format `mac access-group <name> [vlan <vlan-id>] in [sequence <1-4294967295>]`

Modes

- Global Config
- Interface Config

3.9.4.1 no mac access-group

This command removes a MAC ACL identified by *<name>* from the interface in a given direction.

Format `no mac access-group <name> [vlan <vlan-id>] in`

Modes

- Global Config
- Interface Config

3.9.5 show mac access-lists

This command displays a MAC access list and all of the rules that are defined for the MAC ACL. Use the *[name]* parameter to identify a specific MAC ACL to display.

Format `show mac access-lists [name]`

Mode Privileged EXEC

Term	Definition
Rule Number	The ordered rule number identifier defined within the MAC ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Source MAC Address	The source MAC address for this rule.
Destination MAC Address	The destination MAC address for this rule.
Ethertype	The Ethertype keyword or custom value for this rule.
VLAN ID	The VLAN identifier value or range for this rule.
COS	The COS (802.1p) value for this rule.
Log	Displays when you enable logging for the rule.



<i>Term</i>	<i>Definition</i>
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	On Broadcom 5650x platforms, the slot/port to which packets matching this rule are copied.
Redirect Interface	On Broadcom 5650x platforms, the slot/port to which packets matching this rule are forwarded.

3.10 IP Access Control List (ACL) Commands

This section describes the commands you use to configure IP ACL settings. IP ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to IP ACLs:

- FASTPATH software does not support IP ACL configuration for IP packet fragments.
- The maximum number of ACLs you can create is hardware dependent. The limit applies to all ACLs, regardless of type.
- The maximum number of rules per IP ACL is hardware dependent.
- On Broadcom 5630x platforms, if you configure a MAC ACL on an interface, you cannot configure an IP ACL on the same interface.
- Wildcard masking for ACLs operates differently from a subnet mask. A wildcard mask is in essence the inverse of a subnet mask. With a subnet mask, the mask has ones (1's) in the bit positions that are used for the network address, and has zeros (0's) for the bit positions that are not used. In contrast, a wildcard mask has (0's) in a bit position that must be checked. A '1' in a bit position of the ACL mask indicates the corresponding bit can be ignored.

3.10.1 access-list

This command creates an IP Access Control List (ACL) that is identified by the access list number, which is 1-99 for standard ACLs or 100-199 for extended ACLs. [Table 2](#) describes the parameters for the `access-list` command.

IP Standard ACL:

Format `access-list <1-99> {deny | permit} {every | <srcip> <srcmask>} [log] [assign-queue <queue-id>] [{mirror | redirect} <slot/port>]`

Mode Global Config

IP Extended ACL:

Format `access-list <100-199> {deny | permit} {every | {icmp | igmp | ip | tcp | udp | <number>} <srcip> <srcmask>[{eq {<portkey> | <0-65535>} <dstip> <dstmask> [{eq {<portkey> | <0-65535>}] [precedence <precedence> | tos <tos> <tosmask> | dscp <dscp>} [log] [assign-queue <queue-id>] [{mirror | redirect} <slot/port>]}`

Mode Global Config

Table 2: ACL Command Parameters

Parameter	Description
<code><1-99> or <100-199></code>	Range 1 to 99 is the access list number for an IP standard ACL. Range 100 to 199 is the access list number for an IP extended ACL.
<code>{deny permit}</code>	Specifies whether the IP ACL rule permits or denies an action. Note: For 5630x and 5650x-based systems, assign-queue, redirect, and mirror attributes are configurable for a deny rule, but they have no operational effect.
<code>every</code>	Match every packet
<code>{icmp igmp ip tcp udp <number>}</code>	Specifies the protocol to filter for an extended IP ACL rule.
<code><srcip> <srcmask></code>	Specifies a source IP address and source netmask for match condition of the IP ACL rule.
<code>[{eq {<portkey> <0-65535>}}]</code>	Specifies the source layer 4 port match condition for the IP ACL rule. You can use the port number, which ranges from 0-65535, or you specify the <code><portkey></code> , which can be one of the following keywords: <code>domain</code> , <code>echo</code> , <code>ftp</code> , <code>ftpdata</code> , <code>http</code> , <code>smtp</code> , <code>snmp</code> , <code>telnet</code> , <code>tftp</code> , and <code>www</code> . Each of these keywords translates into its equivalent port number, which is used as both the start and end of a port range.
<code><dstip> <dstmask></code>	Specifies a destination IP address and netmask for match condition of the IP ACL rule.
<code>[precedence <precedence> tos <tos> <tosmask> dscp <dscp>]</code>	Specifies the TOS for an IP ACL rule depending on a match of precedence or DSCP values using the parameters <code>dscp</code> , <code>precedence</code> , <code>tos/tosmask</code> .
<code>[log]</code>	Specifies that this rule is to be logged.
<code>[assign-queue <queue-id>]</code>	Specifies the assign-queue, which is the queue identifier to which packets matching this rule are assigned.
<code>[{mirror redirect} <slot/port>]</code>	For Broadcom 5650x platforms, specifies the mirror or redirect interface which is the slot/port to which packets matching this rule are copied or forwarded, respectively. The <code>mirror</code> and <code>redirect</code> parameters are not available on the Broadcom 5630x platform.

3.10.1.1 no access-list

This command deletes an IP ACL that is identified by the parameter `<accesslistnumber>` from the system. The range for `<accesslistnumber>` 1-99 for standard access lists and 100-199 for extended access lists.

Format `no access-list <accesslistnumber>`

Mode Global Config

3.10.2 ip access-group

This command either attaches a specific IP ACL identified by `<accesslistnumber>` to an interface or associates with a VLAN ID in a given direction.

An optional sequence number may be specified to indicate the order of this IP access list relative to other IP access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified access list replaces the currently attached IP access list using that sequence number. If the sequence number is not specified for this command, a



sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

Default	none
Format	ip access-group <accesslistnumber> [vlan <vlan-id>] in [sequence <1-4294967295>]
Modes	<ul style="list-style-type: none">• Interface Config• Global Config

3.10.2.1 no ip access-group

This command removes a specified IP ACL from an interface.

Default	none
Format	no ip access-group <accesslistnumber> [vlan <vlan-id>] in
Mode	<ul style="list-style-type: none">• Interface Config• Global Config

3.10.3 acl-trapflags

This command enables the ACL trap mode.

Default	disabled
Format	acl-trapflags
Mode	Global Config

3.10.3.1 no acl-trapflags

This command disables the ACL trap mode.

Format	no acl-trapflags
Mode	Global Config

3.10.4 show acl-traptimer

This command displays the time interval for generating ACL traps. A trap is generated if a ACL rule applies for an incoming packet.

Format	show acl-traptimer
Mode	Privileged EXEC

3.10.5 acl-traptimer

This command sets the time interval for generating ACL traps. An ACL trap is generated if ACL trap generation is enabled and an ACL rule applies for an incoming packet. The generation is checked for a specified time interval. The time interval value indicates seconds.

Default	300
Format	acl-traptimer <30-600>
Mode	Global Config



3.10.5.1 no acl-traptimer

This command sets the time interval for generating ACL traps. An ACL trap is generated if ACL trap generation is enabled and an ACL rule applies for an incoming packet. The generation is checked for a specified time interval. The time interval value indicates seconds.

Format `no acl-traptimer`
Mode Global Config

3.10.6 show ip access-lists

This command displays an IP ACL *<accesslistnumber>* is the number used to identify the IP ACL.

Format `show ip access-lists <accesslistnumber>`
Mode Privileged EXEC



Note: Only the access list fields that you configure are displayed.

Term	Definition
Rule Number	The number identifier for each rule that is defined for the IP ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Match All	Indicates whether this access list applies to every packet. Possible values are True or False.
Protocol	The protocol to filter for this rule.
Source IP Address	The source IP address for this rule.
Source IP Mask	The source IP Mask for this rule.
Source L4 Port Keyword	The source port for this rule.
Destination IP Address	The destination IP address for this rule.
Destination IP Mask	The destination IP Mask for this rule.
Destination L4 Port Keyword	The destination port for this rule.
IP DSCP	The value specified for IP DSCP.
IP Precedence	The value specified IP Precedence.
IP TOS	The value specified for IP TOS.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The slot/port to which packets matching this rule are copied.
Redirect Interface	The slot/port to which packets matching this rule are forwarded.



3.10.7 show access-lists

This command displays IP ACLs, IPv6 ACLs, and MAC access control lists information for a designated interface and direction.

Format `show access-lists interface <slot/port> in`

Mode Privileged EXEC

Term	Definition
ACL Type	Type of access list (IP, IPv6, or MAC).
ACL ID	Access List name for a MAC or IPv6 access list or the numeric identifier for an IP access list.
Sequence Number	An optional sequence number may be specified to indicate the order of this access list relative to other access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified access list replaces the currently attached access list using that sequence number. If the sequence number is not specified by the user, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used. Valid range is (1 to 4294967295).

3.11 IPv6 Access Control List (ACL) Commands

This section describes the commands you use to configure IPv6 ACL settings. IPv6 ACLs ensure that only authorized users have access to specific resources and block any unwarranted attempts to reach network resources.

The following rules apply to IPv6 ACLs:

- The maximum number of ACLs you create is 100, regardless of type.
- The system supports only Ethernet II frame types.
- The maximum number of rules per IPv6 ACL is hardware dependent.

3.11.1 ipv6 access-list

This command creates an IPv6 Access Control List (ACL) identified by *<name>*, consisting of classification fields defined for the IP header of an IPv6 frame. The *<name>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IPv6 access list.

If an IPv6 ACL by this name already exists, this command enters IPv6-Access-List config mode to allow updating the existing IPv6 ACL.



Note: The CLI mode changes to IPv6-Access-List Config mode when you successfully execute this command.

Format `ipv6 access-list <name>`

Mode Global Config



3.11.1.1 no ipv6 access-list

This command deletes the IPv6 ACL identified by *<name>* from the system.

Format `no ipv6 access-list <name>`

Mode Global Config

3.11.2 ipv6 access-list rename

This command changes the name of an IPv6 ACL. The *<name>* parameter is the name of an existing IPv6 ACL. The *<newname>* parameter is a case-sensitive alphanumeric string from 1 to 31 characters uniquely identifying the IPv6 access list.

This command fails if an IPv6 ACL by the name *<newname>* already exists.

Format `ipv6 access-list rename <name> <newname>`

Mode Global Config

3.11.3 {deny | permit} (IPv6)

This command creates a new rule for the current IPv6 access list. Each rule is appended to the list of configured rules for the list.



Note: The 'no' form of this command is not supported, since the rules within an IPv6 ACL cannot be deleted individually. Rather, the entire IPv6 ACL must be deleted and respecified.



Note: An implicit 'deny all' IPv6 rule always terminates the access list.

A rule may either deny or permit traffic according to the specified classification fields. At a minimum, either the 'every' keyword or the protocol, source address, and destination address values must be specified. The source and destination IPv6 address fields may be specified using the keyword 'any' to indicate a match on any value in that field. The remaining command parameters are all optional, but the most frequently used parameters appear in the same relative order as shown in the command format.

The *assign-queue* parameter allows specification of a particular hardware queue for handling traffic that matches this rule. The allowed *<queue-id>* value is 0-(n-1), where *n* is the number of user configurable queues available for the hardware platform. The *assign-queue* parameter is valid only for a permit rule.

For the Broadcom 5650x platform, the *mirror* parameter allows the traffic matching this rule to be copied to the specified *<slot/port>*, while the *redirect* parameter allows the traffic matching this rule to be forwarded to the specified *<slot/port>*. The *assign-queue* and *redirect* parameters are only valid for a permit rule.



Note: The *mirror* and *redirect* parameters are not available on the Broadcom 5630x platform.

Format `{deny | permit} {every | {log} [assign-queue <queue-id>] [{mirror | redirect} <slot/port>]}`

Mode IPv6-Access-List Config



3.11.4 ipv6 traffic-filter

This command either attaches a specific IPv6 ACL identified by `<name>` to an interface or associates with a VLAN ID in a given direction. The `<name>` parameter must be the name of an existing IPv6 ACL.

An optional sequence number may be specified to indicate the order of this mac access list relative to other IPv6 access lists already assigned to this interface and direction. A lower number indicates higher precedence order. If a sequence number is already in use for this interface and direction, the specified IPv6 access list replaces the currently attached IPv6 access list using that sequence number. If the sequence number is not specified for this command, a sequence number that is one greater than the highest sequence number currently in use for this interface and direction is used.

This command specified in Interface Config mode only affects a single interface, whereas the Global Config mode setting is applied to all interfaces. The `vlan` keyword is only valid in the Global Config mode. The Interface Config mode command is only available on platforms that support independent per-port class of service queue configuration.

Format `ipv6 traffic-filter <name> [vlan <vlan-id>] in[sequence <1-4294967295>]`

- Modes**
- Global Config
 - Interface Config

3.11.4.1 no ipv6 traffic-filter

This command removes an IPv6 ACL identified by `<name>` from the interface(s) in a given direction.

Format `no ipv6 traffic-filter <name> [vlan <vlan-id>] in [sequence <1-4294967295>]`

- Modes**
- Global Config
 - Interface Config

3.11.5 show ipv6 access-lists

This command displays an IPv6 access list and all of the rules that are defined for the IPv6 ACL. Use the `[name]` parameter to identify a specific IPv6 ACL to display.

Format `show ipv6 access-lists [name]`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Rule Number	The ordered rule number identifier defined within the IPv6 ACL.
Action	The action associated with each rule. The possible values are Permit or Deny.
Match All	Indicates whether this access list applies to every packet. Possible values are True or False.
Protocol	The protocol to filter for this rule.
Source IP Address	The source IP address for this rule.
Source L4 Port Keyword	The source port for this rule.
Destination IP Address	The destination IP address for this rule.
Destination L4 Port Keyword	The destination port for this rule.
IP DSCP	The value specified for IP DSCP.



<i>Term</i>	<i>Definition</i>
Flow Label	The value specified for IPv6 Flow Label.
Log	Displays when you enable logging for the rule.
Assign Queue	The queue identifier to which packets matching this rule are assigned.
Mirror Interface	The slot/port to which packets matching this rule are copied.
Redirect Interface	The slot/port to which packets matching this rule are forwarded.





Chapter

4

Utility Commands



4. Utility Commands

This chapter describes the utility commands available in the FASTPATH CLI.

The Utility Commands chapter includes the following sections:

- 4.1 “Commands for update and startup Configuration” on page 4 - 2
- 4.2 “Dual Image Commands” on page 4 - 3
- 4.3 “ATCA commands” on page 4 - 4
- 4.4 “System Information and Statistics Commands” on page 4 - 5
- 4.5 “Logging Commands” on page 4 - 20
- 4.6 “System Utility and Clear Commands” on page 4 - 24
- 4.7 “Keying for Advanced Features” on page 4 - 31
- 4.8 “Simple Network Time Protocol (SNTP) Commands” on page 4 - 32
- 4.9 “DHCP Server Commands” on page 4 - 36
- 4.10 “DHCP Filtering” on page 4 - 46
- 4.11 “DNS Client Commands” on page 4 - 47
- 4.12 “Serviceability Packet Tracing Commands” on page 4 - 51



Note: The commands in this chapter are in one of four functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Copy commands transfer or save configuration and informational files to and from the switch.
- Clear commands clear some or all of the settings to factory defaults.

4.1 Commands for update and startup Configuration

The following commands are implemented to manipulate the Software images and configurations of the AT8030.

4.1.1 download ipmifw

This command updates the IPMI firmware using a HPM.1 firmware image. It downloads an IPMI firmware image from URL and flashes the IPMC. The command is also used for updates of AMC (see section below). If the flash process is interrupted or fails, the IPMC will automatically recover and use the previously installed image.

Format `download ipmifw <url> <ipmc | amcb1 | amcb2 | amcb3 | amcb4 | rtm>`

Mode Privileged EXEC

4.1.2 download frudata

This command restores the factory defaults for the FRU data.

Format `download frudata factory-default`

Mode Privileged EXEC



4.1.3 download fwum

This command updates the FWUM firmware. It downloads an FWUM firmware image from URL and flashes the FWUM with the new image. If the flash process is interrupted or fails, the FWUM will not recover gracefully and the board has to be repaired manually.

Use this command with extreme care. It is not field safe.

Do not interrupt the upgrade process.

Format `download fwum <url>`
Mode Privileged EXEC

4.1.4 download amcipmifw

This command updates the IPMI firmware on an AMC with a Kontron OEM firmware image. For download a HPM.1 firmware image use command "download ipmifw" (see above). It downloads an IPMI firmware image from URL and flashes the MMC on the AMC with the new image. If the flash process is interrupted or fails, the MMC will automatically recover and use the previously installed image

Format `download amcipmifw <url> <amcb1 | amcb2 | amcb3 | amcb4>`
Mode Privileged EXEC

4.2 Dual Image Commands

FASTPATH software supports a dual image feature that allows the switch to have two software images in the permanent storage. You can specify which image is the active image to be loaded in subsequent reboots. This feature allows reduced down-time when you upgrade or downgrade the software.

4.2.1 delete

This command deletes the supplied image file from the permanent storage. The image to be deleted must be a backup image. If this image is the active image, or if this image is activated, an error message displays.

Format `delete {image1 | image2}`
Mode Privileged EXEC

4.2.2 boot system

This command activates the specified image. It will be the active-image for subsequent reboots and will be loaded by the boot loader. The current active-image is marked as the backup-image for subsequent reboots.

Format `boot system <image-file-name>`
Mode Privileged EXEC



4.2.3 show bootvar

This command displays the version information and the activation status for the current active and backup images. The command also displays any text description associated with an image. This command displays the switch activation status.

Format `show bootvar`

Mode Privileged EXEC

4.2.4 filedescr

This command associates a given text description with an image. Any existing description will be replaced.

Format `filedescr {image1 | image2} <text-description>`

Mode Privileged EXEC

4.3 ATCA commands

4.3.1 set board sensor threshold

This command sets a new threshold value for a sensor. The <record-id> (of SDR) for a specific sensor is displayed by the related “show” command

Format `set board sensor threshold <record-id> <value-type> <value>`

Mode Privileged EXEC

Value-types are:

<i>Value-type</i>	<i>Description</i>
lower-non-critical	Set lower non-critical threshold value
lower-critical	Set lower critical threshold value
lower-non-recover	Set lower non-recoverable threshold value
upper-non-critical	Set upper non-critical threshold value
upper-critical	Set upper critical threshold value
upper-non-recover	Set upper non-recoverable threshold value

4.3.2 set board device-id

This command sets the device ID for the board. The device ID is used in the management device locator sensor (show boardinfo sensors).

Format `set board device-id <string>`

Mode Privileged EXEC

4.3.3 show atca ekeying

This command displays the current ekeying status together with admin mode and link status for all interfaces

Format `show atca ekeying all`



Mode Privileged EXEC

4.3.4 ekeying (interface)

This command enables the ekeying for one port. Default is enabled.

Format `ekeying`

Mode Interface Config

4.3.4.1 no ekeying (interface)

This command disables the ekeying for one port. Default is enabled.

Format `no ekeying`

Mode Interface Config

4.3.5 ekeying all (configure)

This command enables the ekeying for all ports for which ekeying is possible. Default is enabled.

Format `ekeying all`

Mode Global Config

4.3.5.1 no ekeying all (configure)

This command disables the ekeying for all ports for which ekeying is possible.

Format `no ekeying all`

Mode Global Config

4.4 System Information and Statistics Commands

This section describes the commands you use to view information about system features, components, and configurations.

4.4.1 show arp switch

This command displays the contents of the IP stack's Address Resolution Protocol (ARP) table. The IP stack only learns ARP entries associated with the management interfaces - network or service ports. ARP entries associated with routing interfaces are not listed.

Format `show arp switch`

Mode Privileged EXEC

Term	Definition
IP Address	IP address of the management interface or another device on the management network.
MAC Address	Hardware MAC address of that device.
Interface	For a service port the output is <i>Management</i> . For a network port, the output is the slot/port of the physical interface.



4.4.2 show eventlog

This command displays the event log, which contains error messages from the system. The event log is not cleared on a system reset.

Format `show eventlog`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
File	The file in which the event originated.
Line	The line number of the event.
Task Id	The task ID of the event.
Code	The event code.
Time	The time this event occurred.



Note: Event log information is retained across a switch reset.

4.4.3 show hardware

This command displays inventory information for the switch.



Note: The `show version` command and the `show hardware` command display the same information. In future releases of the software, the `show hardware` command will not be available. For a description of the command output, see the command 4.4.4 “show version” on page 4 - 6.

Format `show hardware`

Mode Privileged EXEC

4.4.4 show version

This command displays inventory information for the switch.



Note: The `show version` command will replace the `show hardware` command in future releases of the software.

Format `show version`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Switch Description	Text used to identify the product name of this switch.
Machine Type	The machine model as defined by the Vital Product Data.
Machine Model	The machine model as defined by the Vital Product Data
Serial Number	The unique box serial number for this switch.
FRU Number	The field replaceable unit number.
Part Number	Manufacturing part number.



Term	Definition
Maintenance Level	Hardware changes that are significant to software.
Manufacturer	Manufacturer descriptor field.
Burned in MAC Address	Universally assigned network address.
Software Version	The release.version.revision number of the code currently running on the switch.
Operating System	The operating system currently running on the switch.
Network Processing Device	The type of the processor microcode.
Additional Packages	The additional packages incorporated into this system.

4.4.5 show interface

This command displays a summary of statistics for a specific interface or a count of all CPU traffic based upon the argument.

Format `show interface {<slot/port> | switchport}`
Mode Privileged EXEC

The display parameters, when the argument is `<slot/port>`, are as follows:

Parameters	Definition
Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Transmitted Without Error	The total number of packets transmitted out of the interface.
Transmit Packets Errors	The number of outbound packets that could not be transmitted because of errors.
Collisions Frames	The best estimate of the total number of collisions on this Ethernet segment.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

The display parameters, when the argument is "switchport" are as follows:

Term	Definition
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Received With Error	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Packets Transmitted Without Error	The total number of packets transmitted out of the interface.
Broadcast Packets Transmitted	The total number of packets that higher-level protocols requested to be transmitted to the Broadcast address, including those that were discarded or not sent.



Term	Definition
Transmit Packet Errors	The number of outbound packets that could not be transmitted because of errors.
Address Entries Currently In Use	The total number of Forwarding Database Address Table entries now active on the switch, including learned and static entries.
VLAN Entries Currently In Use	The number of VLAN entries presently occupying the VLAN table.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this switch were last cleared.

4.4.6 show interface ethernet

This command displays detailed statistics for a specific interface or for all CPU traffic based upon the argument.

Format `show interface ethernet {<slot/port> | switchport}`

Mode Privileged EXEC

When you specify a value for `<slot/port>`, the command displays the following information





Term	Definition
Packets Received	<ul style="list-style-type: none"> • Total Packets Received (Octets) - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including Frame Check Sequence (FCS) octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. The result of this equation is the value Utilization which is the percent utilization of the Ethernet segment on a scale of 0 to 100 percent. • Packets Received 64 Octets - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets). • Packets Received 65–127 Octets - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 128–255 Octets - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 256–511 Octets - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 512–1023 Octets - The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received 1024–1518 Octets - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Received > 1522 Octets - The total number of packets received that were longer than 1522 octets (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 64 Octets - The total number of packets (including bad packets) received and transmitted that were 64 octets in length (excluding framing bits but including FCS octets). • Packets RX and TX 65–127 Octets - The total number of packets (including bad packets) received and transmitted that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 128–255 Octets - The total number of packets (including bad packets) received and transmitted that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 256–511 Octets - The total number of packets (including bad packets) received and transmitted that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 512–1023 Octets - The total number of packets (including bad packets) received and transmitted that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 1024–1518 Octets - The total number of packets (including bad packets) received and transmitted that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 1519–1522 Octets - The total number of packets (including bad packets) received and transmitted that were between 1519 and 1522 octets in length inclusive (excluding framing bits but including FCS octets). • Packets RX and TX 1523–2047 Octets - The total number of packets received and transmitted that were between 1523 and 2047 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 2048–4095 Octets - The total number of packets received that were between 2048 and 4095 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed. • Packets RX and TX 4096–9216 Octets - The total number of packets received that were between 4096 and 9216 octets in length inclusive (excluding framing bits, but including FCS octets) and were otherwise well formed.

<i>Term</i>	<i>Definition</i>
Packets Received Successfully	<ul style="list-style-type: none"> • Total Packets Received Without Error - The total number of packets received that were without errors. • Unicast Packets Received - The number of subnetwork-unicast packets delivered to a higher-layer protocol. • Multicast Packets Received - The total number of good packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address. • Broadcast Packets Received - The total number of good packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Packets Received with MAC Errors	<ul style="list-style-type: none"> • Total - The total number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. • Jabbers Received - The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Note that this definition of jabber is different than the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms. • Fragments/Undersize Received - The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets). • Alignment Errors - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with a non-integral number of octets. • Rx FCS Errors - The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets. • Overruns - The total number of frames discarded as this port was overloaded with incoming packets, and could not keep up with the inflow.
Received Packets Not Forwarded	<ul style="list-style-type: none"> • Total - A count of valid frames received which were discarded (in other words, filtered) by the forwarding process • Local Traffic Frames - The total number of frames dropped in the forwarding process because the destination address was located off of this port. • 802.3x Pause Frames Received - A count of MAC Control frames received on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode. • Unacceptable Frame Type - The number of frames discarded from this port due to being an unacceptable frame type. • Multicast Tree Viable Discards - The number of frames discarded when a lookup in the multicast tree for a VLAN occurs while that tree is being modified. • Reserved Address Discards - The number of frames discarded that are destined to an IEEE 802.1 reserved address and are not supported by the system. • Broadcast Storm Recovery - The number of frames discarded that are destined for <code>FF:FF:FF:FF:FF:FF</code> when Broadcast Storm Recovery is enabled. • CFI Discards - The number of frames discarded that have CFI bit set and the addresses in RIF are in non-canonical format. • Upstream Threshold - The number of frames discarded due to lack of cell descriptors available for that packet's priority level.



<i>Term</i>	<i>Definition</i>
Packets Transmitted Octets	<ul style="list-style-type: none"> • Total Bytes - The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval. ---- • Packets Transmitted 64 Octets - The total number of packets (including bad packets) received that were 64 octets in length (excluding framing bits but including FCS octets). • Packets Transmitted 65-127 Octets - The total number of packets (including bad packets) received that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 128-255 Octets - The total number of packets (including bad packets) received that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 256-511 Octets - The total number of packets (including bad packets) received that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 512-1023 Octets - The total number of packets (including bad packets) received that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets). • Packets Transmitted 1024-1518 Octets - The total number of packets (including bad packets) received that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets). • Max Frame Size - The maximum size of the Info (non-MAC) field that this port will receive or transmit.
Packets Transmitted Successfully	<ul style="list-style-type: none"> • Total - The number of frames that have been transmitted by this port to its segment. • Unicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent. • Multicast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to a Multicast address, including those that were discarded or not sent. • Broadcast Packets Transmitted - The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.
Transmit Errors	<ul style="list-style-type: none"> • Total Errors - The sum of Single, Multiple, and Excessive Collisions. • Tx FCS Errors - The total number of packets transmitted that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets. • Oversized - The total number of frames that exceeded the max permitted frame size. This counter has a max increment rate of 815 counts per sec. at 10 Mb/s. • Underrun Errors - The total number of frames discarded because the transmit FIFO buffer became empty during frame transmission.
Transmit Discards	<ul style="list-style-type: none"> • Total Discards - The sum of single collision frames discarded, multiple collision frames discarded, and excessive frames discarded. • Single Collision Frames - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. • Multiple Collision Frames - A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. • Excessive Collisions - A count of frames for which transmission on a particular interface fails due to excessive collisions. • Port Membership Discards - The number of frames discarded on egress for this port due to egress filtering being enabled.



<i>Term</i>	<i>Definition</i>
Protocol Statistics	<ul style="list-style-type: none"> • 802.3x Pause Frames Transmitted - A count of MAC Control frames transmitted on this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode. • GVRP PDUs Received - The count of GVRP PDUs received in the GARP layer. • GVRP PDUs Transmitted - The count of GVRP PDUs transmitted from the GARP layer. • GVRP Failed Registrations - The number of times attempted GVRP registrations could not be completed. • GMRP PDUs Received - The count of GMRP PDU's received in the GARP layer. • GMRP PDUs Transmitted - The count of GMRP PDU's transmitted from the GARP layer. • GMRP Failed Registrations - The number of times attempted GMRP registrations could not be completed. • STP BPDUs Transmitted - Spanning Tree Protocol Bridge Protocol Data Units sent. • STP BPDUs Received - Spanning Tree Protocol Bridge Protocol Data Units received. • RST BPDUs Transmitted - Rapid Spanning Tree Protocol Bridge Protocol Data Units sent. • RSTP BPDUs Received - Rapid Spanning Tree Protocol Bridge Protocol Data Units received. • MSTP BPDUs Transmitted - Multiple Spanning Tree Protocol Bridge Protocol Data Units sent. • MSTP BPDUs Received - Multiple Spanning Tree Protocol Bridge Protocol Data Units received.
Dot1x Statistics	<ul style="list-style-type: none"> • EAPOL Frames Received - The number of valid EAPOL frames of any type that have been received by this authenticator. • EAPOL Frames Transmitted - The number of EAPOL frames of any type that have been transmitted by this authenticator.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds since the statistics for this port were last cleared.

If you use the *switchport* keyword, the following information appears.

<i>Term</i>	<i>Definition</i>
Octets Received	The total number of octets of data received by the processor (excluding framing bits but including FCS octets).
Total Packets Received Without Error	The total number of packets (including broadcast packets and multicast packets) received by the processor.
Unicast Packets Received	The number of subnetwork-unicast packets delivered to a higher-layer protocol.
Multicast Packets Received	The total number of packets received that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address.
Broadcast Packets Received	The total number of packets received that were directed to the broadcast address. Note that this does not include multicast packets.
Receive Packets Discarded	The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Octets Transmitted	The total number of octets transmitted out of the interface, including framing characters.
Packets Transmitted without Errors	The total number of packets transmitted out of the interface.
Unicast Packets Transmitted	The total number of packets that higher-level protocols requested be transmitted to a subnetwork-unicast address, including those that were discarded or not sent.



<i>Term</i>	<i>Definition</i>
Multicast Packets Transmitted	The total number of packets that higher-level protocols requested be transmitted to a Multicast address, including those that were discarded or not sent.
Broadcast Packets Transmitted	The total number of packets that higher-level protocols requested be transmitted to the Broadcast address, including those that were discarded or not sent.
Transmit Packets Discarded	The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Most Address Entries Ever Used	The highest number of Forwarding Database Address Table entries that have been learned by this switch since the most recent reboot.
Address Entries in Use	The number of Learned and static entries in the Forwarding Database Address Table for this switch.
Maximum VLAN Entries	The maximum number of Virtual LANs (VLANs) allowed on this switch.
Most VLAN Entries Ever Used	The largest number of VLANs that have been active on this switch since the last reboot.
Static VLAN Entries	The number of presently active VLAN entries on this switch that have been created statically.
Dynamic VLAN Entries	The number of presently active VLAN entries on this switch that have been created by GVRP registration.
VLAN Deletes	The number of VLANs on this switch that have been created and then deleted since the last reboot.
Time Since Counters Last Cleared	The elapsed time, in days, hours, minutes, and seconds, since the statistics for this switch were last cleared.

4.4.7 show mac-addr-table

This command displays the forwarding database entries. These entries are used by the transparent bridging function to determine how to forward a received frame.

Enter *all* or no parameter to display the entire table. Enter a MAC Address and VLAN ID to display the table entry for the requested MAC address on the specified VLAN. Enter the *count* parameter to view summary information about the forwarding database table. Use the *interface <slot/port>* parameter to view MAC addresses on a specific interface. Use the *vlan <vlan_id>* parameter to display information about MAC addresses on a specified VLAN.

Format `show mac-addr-table [{<macaddr> <vlan_id> | all | count | interface <slot/port> | vlan <vlan_id>}]`

Mode Privileged EXEC

The following information displays if you do not enter a parameter, the keyword *all*, or the MAC address and VLAN ID. If you enter *vlan <vlan_id>*, only the Mac Address, Interface, and Status fields appear.

<i>Term</i>	<i>Definition</i>
Mac Address	A unicast MAC address for which the switch has forwarding and or filtering information. The format is 6 or 8 two-digit hexadecimal numbers that are separated by colons, for example 01:23:45:67:89:AB. In an IVL system the MAC address will be displayed as 8 bytes.
Interface	The port through which this address was learned.
Interface Index	This object indicates the ifIndex of the interface table entry associated with this port.



Term	Definition
Status	<p>The status of this entry. The meanings of the values are:</p> <ul style="list-style-type: none"> • <i>Static</i>—The value of the corresponding instance was added by the system or a user when a static MAC filter was defined. It cannot be relearned. • <i>Learned</i>—The value of the corresponding instance was learned by observing the source MAC addresses of incoming traffic, and is currently in use. • <i>Management</i>—The value of the corresponding instance (system MAC address) is also the value of an existing instance of dot1dStaticAddress. It is identified with interface 0/1. and is currently used when enabling VLANs for routing. • <i>Self</i>—The value of the corresponding instance is the address of one of the switch's physical interfaces (the system's own MAC address). • <i>GMRP Learned</i>—The value of the corresponding was learned via GMRP and applies to Multicast. • <i>Other</i>—The value of the corresponding instance does not fall into one of the other categories.

If you enter the `interface <slot/port>` parameter, in addition to the MAC Address and Status fields, the following field appears:

Term	Definition
VLAN ID	The VLAN on which the MAC address was learned.

The following information displays if you enter the `count` parameter:

Term	Definition
Dynamic Address count	Number of MAC addresses in the forwarding database that were automatically learned.
Static Address (User-defined) count	Number of MAC addresses in the forwarding database that were manually entered by a user.
Total MAC Addresses in use	Number of MAC addresses currently in the forwarding database.
Total MAC Addresses available	Number of MAC addresses the forwarding database can handle.

4.4.8 show running-config

Use this command to display or capture the current setting of different protocol packages supported on the switch. This command displays or captures commands with settings and configurations that differ from the default value. To display or capture the commands with settings and configurations that are equal to the default value, include the `[all]` option.



Note: Show running-config does not display the User Password, even if you set one different from the default.

The output is displayed in script format, which can be used to configure another switch with the same configuration. If the optional `<scriptname>` is provided with a file name extension of ".scr", the output is redirected to a script file.



Note: If you issue the `show running-config` command from a serial connection, access to the switch through remote connections (such as Telnet) is suspended while the output is being generated and displayed.



Note: If you use a text-based configuration file, the `show running-config` command will only display configured physical interfaces, i.e. if any interface only contains the default configuration, that interface will be skipped from the `show running-config` command output. This is true for any configuration mode that contains nothing but default configuration. That is, the command to enter a particular config mode, followed immediately by its 'exit' command, are both omitted from the `show running-config` command output (and hence from the startup-config file when the system configuration is saved.)

This command captures the current settings of OSPFv2 and OSPFv3 trapflag status:

- If all the flags are enabled, then the command displays `trapflags all`.
- If all the flags in a particular group are enabled, then the command displays `trapflags <group name> all`.
- If some, but not all, of the flags in that group are enabled, the command displays `trapflags <groupname> <flag-name>`.

Format `show running-config [all | <scriptname>]`

Mode Privileged EXEC

4.4.9 show sysinfo

This command displays switch information.

Format `show sysinfo`

Mode Privileged EXEC

Term	Definition
Switch Description	Text used to identify this switch.
System Name	Name used to identify the switch. The factory default is blank. To configure the system name, see 5.8.1 "snmp-server" on page 5 - 21.
System Location	Text used to identify the location of the switch. The factory default is blank. To configure the system location, see 5.8.1 "snmp-server" on page 5 - 21.
System Contact	Text used to identify a contact person for this switch. The factory default is blank. To configure the system location, see 5.8.1 "snmp-server" on page 5 - 21.
System ObjectID	The base object ID for the switch's enterprise MIB.
System Up Time	The time in days, hours and minutes since the last switch reboot.
MIBs Supported	A list of MIBs supported by this agent.

4.4.10 show tech-support

Use the `show tech-support` command to display system and configuration information when you contact technical support. The output of the `show tech-support` command combines the output of the following commands:

- `show version`
- `show sysinfo`
- `show port all`
- `show logging`
- `show event log`



- `show logging buffered`
- `show trap log`
- `show running config`

Format `show tech-support`

Mode Privileged EXEC

4.4.11 **terminal length**

Use this command to set the number of lines of output to be displayed on the screen, i.e. pagination, for the `show running-config` and `show running-config all` commands. The terminal length size is either zero or a number in the range of 5 to 48. After the user-configured number of lines is displayed in one page, the system prompts the user for `--More--` or `(q)uit`. Press `q` or `Q` to quit, or press any key to display the next set of `<5-48>` lines. The command `terminal length 0` disables pagination and, as a result, the output of the `show running-config` command is displayed immediately.

Default 24 lines per page

Format `terminal length <0|5-48>`

Mode Privileged EXEC

4.4.11.1 no terminal length

Use this command to set the terminal length to the default value.

4.4.12 **show terminal length**

Use this command to display the value of the user-configured terminal length size.

Format `show terminal length`

Mode Privileged EXEC

4.4.13 **show boardinfo post-status**

This command displays the system power on self test status.

Format `show boardinfo post-status system`

Mode Privileged EXEC

4.4.14 **show boardinfo sensors**

This command displays the current sensor readings. It can either display a compressed list of all sensors or display full readings for a specified sensor. The `<record-id>` (of SDR) for a specific sensor is displayed in the compressed list

Format `show boardinfo sensors {<record-id> | brief}`

Mode Privileged EXEC



Note: It might take a while to get an output of the `"show boardinfo sensors brief"` command



4.4.15 show boardinfo event-log

This command displays the event log of the board management controller. It can either display a summary (“info”) or a list of all existing event-log records, a list with most recent records or a single record. The <record-id> (of SEL) is displayed in the list of records.

Format `show boardinfo event-log {info | list [last <nr-of-most-recent-entries> | <record-id>]}`

Mode Privileged EXEC



Note: It might take a while to get an output of the “*show boardinfo event-log list*” command

4.4.16 show boardinfo update-status

This command displays the status of the firmware update process for the IPMI controller.

Format `show boardinfo update-status`

Mode Privileged EXEC

4.4.17 show boardinfo version

This command displays hardware and software revision information. This includes serial-numbers, software and hardware revisions as applicable.

Format `show boardinfo version`

Mode Privileged EXEC

Version information included

- Board name
- Base board serial number and part number
- Basic product identification (product number)
- IPMC firmware version
- IPMC boot block version
- System U-boot version
- System kernel version
- FASTPATH version
- CPLD revision
- Base board broadcom silicon revision
- Processor CPU type
- Processor clock

Additionally software release information is displayed. This includes

- U-boot monitor and initialization release
- System kernel release
- System OS release
- IPMC firmware release
- FASTPATH release



4.4.18 show boardinfo address

This command displays the global address info of the board.

Format `show boardinfo address`

Mode Privileged EXEC

4.4.19 show boardinfo fru

This command displays various FRU (field replaceable unit) related information.

Format `show boardinfo fru {product-info | board-info | multi-record | custom-area | all}`

Mode Privileged EXEC

4.4.20 show boardinfo ipmidev

This command displays the IPMI device information. This consists of Firmware Revision, IPMI version, Manufacturer and Product ID.

Format `show boardinfo ipmidev`

Mode Privileged EXEC

4.4.21 show boardinfo amc connection

This command displays the connections to the AMC, to the CPU0-2 and to the RTM.

Format `show boardinfo amc connection {all | amcb1 | amcb2 | amcb3 | amcb4 | rtm}`

Mode Privileged EXEC

4.4.22 show boardinfo amc fru

This command displays various FRU (field replaceable unit) related information (or all FRU information) for a specified AMC, CPU0-2 and RTM.

Format `show boardinfo amc fru {product-info | board-info | multi-record | custom-area | all} {all | amcb1 | amcb2 | amcb3 | amcb4 | rtm}`

Mode Privileged EXEC

4.4.23 show boardinfo amc ipmidev

This command displays the IPMI device information for a specified AMC. This includes Firmware Revision, IPMI version, Manufacturer and Product ID.

Format `show boardinfo amc ipmidev <all | amcb1 | amcb2 | amcb3 | amcb4 | rtm>`

Mode Privileged EXEC



4.5 Logging Commands

This section describes the commands you use to configure system logging, and to view logs and the logging settings.

4.5.1 logging buffered

This command enables logging to an in-memory log that keeps up to 128 logs.

Default	disabled; critical when enabled
Format	<code>logging buffered</code>
Mode	Global Config

4.5.1.1 no logging buffered

This command disables logging to in-memory log.

Format	<code>no logging buffered</code>
Mode	Global Config

4.5.2 logging buffered wrap

This command enables wrapping of in-memory logging when the log file reaches full capacity. Otherwise when the log file reaches full capacity, logging stops.

Default	enabled
Format	<code>logging buffered wrap</code>
Mode	Privileged EXEC

4.5.2.1 no logging buffered wrap

This command disables wrapping of in-memory logging and configures logging to stop when the log file capacity is full.

Format	<code>no logging buffered wrap</code>
Mode	Privileged EXEC

4.5.3 logging cli-command

This command enables the CLI command logging feature, which enables the FASTPATH software to log all CLI commands issued on the system.

Default	enabled
Format	<code>logging cli-command</code>
Mode	Global Config



4.5.3.1 no logging cli-command

This command disables the CLI command Logging feature.

Format `no logging cli-command`

Mode Global Config

4.5.4 logging console

This command enables logging to the console. You can specify the `<severitylevel>` value as either an integer from 0 to 7 or symbolically through one of the following keywords: **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7).

Default disabled; critical when enabled

Format `logging console [severitylevel]`

Mode Global Config

4.5.4.1 no logging console

This command disables logging to the console.

Format `no logging console`

Mode Global Config

4.5.5 logging host

This command enables logging to a host. You can configure up to eight hosts. The `<ipaddr|hostname>` is the IP address of the logging host. The `<addresstype>` indicates the type of address ipv4 or ipv6 or dns being passed. The `<port>` value is a port number from 1 to 65535. You can specify the `<severitylevel>` value as either an integer from 0 to 7 or symbolically through one of the following keywords: **emergency** (0), **alert** (1), **critical** (2), **error** (3), **warning** (4), **notice** (5), **info** (6), or **debug** (7).

Default

- port—514
- level—critical (2)

Format `logging host <ipaddr|hostname> <addresstype> [<port>][<severitylevel>]`

Mode Global Config

4.5.6 logging host remove

This command disables logging to host. See 4.5.11 “show logging hosts” on page 4 - 23 for a list of host indexes.

Format `logging host remove <hostindex>`

Mode Global Config

4.5.7 logging port

This command sets the local port number of the LOG client for logging messages. The `<portid>` can be in the range from 1 to 65535.

Default 514



Format `logging port <portid>`
Mode Global Config

4.5.7.1 no logging port

This command resets the local logging port to the default.

Format `no logging port`
Mode Global Config

4.5.8 logging syslog

This command enables syslog logging. The `<portid>` parameter is an integer with a range of 1-65535.

Default disabled
Format `logging syslog [port <portid>]`
Mode Global Config

4.5.8.1 no logging syslog

This command disables syslog logging.

Format `no logging syslog`
Mode Global Config

4.5.9 show logging

This command displays logging configuration information.

Format `show logging`
Mode Privileged EXEC

Term	Definition
Logging Client Local Port	Port on the collector/relay to which syslog messages are sent.
CLI Command Logging	Shows whether CLI Command logging is enabled.
Console Logging	Shows whether console logging is enabled.
Console Logging Severity Filter	The minimum severity to log to the console log. Messages with an equal or lower numerical severity are logged.
Buffered Logging	Shows whether buffered logging is enabled.
Syslog Logging	Shows whether syslog logging is enabled.
Log Messages Received	Number of messages received by the log process. This includes messages that are dropped or ignored.
Log Messages Dropped	Number of messages that could not be processed due to error or lack of resources.
Log Messages Relayed	Number of messages sent to the collector/relay.



4.5.10 show logging buffered

This command displays buffered logging (system startup and system operation logs).

Format `show logging buffered`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Buffered (In-Memory) Logging	Shows whether the In-Memory log is enabled or disabled.
Buffered Logging Wrapping Behavior	The behavior of the In Memory log when faced with a log full situation.
Buffered Log Count	The count of valid entries in the buffered log.

4.5.11 show logging hosts

This command displays all configured logging hosts.

Format `show logging hosts`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Host Index	(Used for deleting hosts.)
IP Address / Hostname	IP address or hostname of the logging host.
Severity Level	The minimum severity to log to the specified address. The possible values are emergency (0), alert (1), critical (2), error (3), warning (4), notice (5), info (6), or debug (7).
Port	The server port number, which is the port on the local host from which syslog messages are sent.
Host Status	The state of logging to configured syslog hosts. If the status is disable, no logging occurs.

4.5.12 show logging traplogs

This command displays SNMP trap events and statistics.

Format `show logging traplogs`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Number of Traps Since Last Reset	The number of traps since the last boot.
Trap Log Capacity	The number of traps the system can retain.
Number of Traps Since Log Last Viewed	The number of new traps since the command was last executed.
Log	The log number.
System Time Up	How long the system had been running at the time the trap was sent.



<i>Term</i>	<i>Definition</i>
Trap	The text of the trap message.

4.5.13 clear board event-log

This command deletes all event-log records

Format `clear board event-log`

Mode Privileged EXEC

4.5.14 show logging backtrace

This command displays the backtrace file last created. A backtrace file is created when the application stops unexpectedly.

Format `show logging backtrace`

Mode Privileged EXEC

4.5.15 show logging errcounter

This command displays counters for critical, major and minor errors. The counters are split in file groups (DEF, L3, CFG, MOD). All error counters must be 0.

Format `show logging errcounter`

Mode Privileged EXEC

4.5.16 clear errcounter

This command clears the counters for critical, major and minor errors..

Format `clear errcounter`

Mode Privileged EXEC

4.6 System Utility and Clear Commands

This section describes the commands you use to help troubleshoot connectivity issues and to restore various configurations to their factory defaults.



4.6.1 traceroute

Use the `traceroute` command to discover the routes that packets actually take when traveling to their destination through the network on a hop-by-hop basis. Traceroute continues to provide a synchronous response when initiated from the CLI.

Default	<ul style="list-style-type: none"> • count: 3 probes • interval: 3 seconds • size: 0 bytes • port: 33434 • maxTtl: 30 hops • maxFail: 5 probes • initTtl: 1 hop •
Format	<pre>traceroute <ipaddr hostname> [initTtl <initTtl>] [maxTtl <maxTtl>] [maxFail <maxFail>] [interval <interval>] [count <count>] [port <port>] [size <size>]</pre>
Mode	Privileged EXEC

Using the options described below, you can specify the initial and maximum time-to-live (TTL) in probe packets, the maximum number of failures before termination, the number of probes sent for each TTL, and the size of each probe.

Parameter	Description
ipaddr hostname	The <i>ipaddr</i> value should be a valid IP address. The <i>hostname</i> value should be a valid hostname.
initTtl	Use <i>initTtl</i> to specify the initial time-to-live (TTL), the maximum number of router hops between the local and remote system. Range is 0 to 255.
maxTtl	Use <i>maxTtl</i> to specify the maximum TTL. Range is 1 to 255.
maxFail	Use <i>maxFail</i> to terminate the traceroute after failing to receive a response for this number of consecutive probes. Range is 0 to 255.
interval	Use <i>interval</i> to specify the time between probes, in seconds. Range is 1 to 60 seconds.
count	Use the optional <i>count</i> parameter to specify the number of probes to send for each TTL value. Range is 1 to 10 probes.
port	Use the optional <i>port</i> parameter to specify destination UDP port of the probe. This should be an unused port on the remote destination system. Range is 1 to 65535.
size	Use the optional <i>size</i> parameter to specify the size, in bytes, of the payload of the Echo Requests sent. Range is 0 to 65507 bytes.

Example: The following are examples of the CLI command.

Example: traceroute Success:

```
(Broadcom FASTPATH Routing) # traceroute 10.240.10.115 initTtl 1 maxTtl 4 maxFail 0
interval 1 count 3 port 33434 size 43
Traceroute to 10.240.10.115 ,4 hops max 43 byte packets:
1 10.240.4.1    708 msec      41 msec      11 msec
2 10.240.10.115  0 msec        0 msec        0 msec

Hop Count = 1 Last TTL = 2 Test attempt = 6 Test Success = 6
```

Example: traceroute Failure:



```
(Broadcom FASTPATH Routing) # traceroute 10.40.1.1 initTtl 1 maxFail 0 interval 1 count
3
port 33434 size 43
Traceroute to 10.40.1.1 ,30 hops max 43 byte packets:
1 10.240.4.1    19 msec      18 msec      9 msec
2 10.240.1.252  0 msec       0 msec       1 msec
3 172.31.0.9    277 msec     276 msec     277 msec
4 10.254.1.1    289 msec     327 msec     282 msec
5 10.254.21.2   287 msec     293 msec     296 msec
6 192.168.76.2  290 msec     291 msec     289 msec
7 0.0.0.0      0 msec *
Hop Count = 6 Last TTL = 7 Test attempt = 19 Test Success = 18
```

4.6.2 clear config

This command clears the configuration set by the user without powering off the switch. When you issue this command, a prompt appears to confirm that the request should proceed. When you enter **y**, you automatically clear the current configuration on the switch. It does not reset the switch nor restore the configuration defaults settings.

Format **clear config**
Mode Privileged EXEC

4.6.3 clear counters

This command clears the statistics for a specified *<slot/port>*, for all the ports, or for the entire switch based upon the argument.

Format **clear counters** {*<slot/port>* | *all*}
Mode Privileged EXEC

4.6.4 clear igmpsnooping

This command clears the tables managed by the IGMP Snooping function and attempts to delete these entries from the Multicast Forwarding Database.

Format **clear igmpsnooping**
Mode Privileged EXEC

4.6.5 clear pass

This command resets all user passwords to the factory defaults without powering off the switch. You are prompted to confirm that the password reset should proceed.

Format **clear pass**
Mode Privileged EXEC

4.6.6 clear port-channel

This command clears all port-channels (LAGs).

Format **clear port-channel**
Mode Privileged EXEC



4.6.7 clear traplog

This command clears the trap log.

Format clear traplog

Mode Privileged EXEC

4.6.8 clear vlan

This command clears VLAN configuration parameters. It does not restore the factory default vlans.

Format clear vlan

Mode Privileged EXEC

4.6.9 enable passwd

This command prompts you to change the Privileged EXEC password. Passwords are a maximum of 64 alphanumeric characters. The password is case sensitive.

Format enable passwd

Mode Privileged EXEC

4.6.10 enable passwd encrypted <password>

This command allows the administrator to transfer the enable password between devices without having to know the password. The <password> parameter must be exactly 128 hexadecimal characters.

Format enable passwd encrypted <password>

Mode Privileged EXEC

4.6.11 logout

This command closes the current telnet connection or resets the current serial connection.



Note: Save configuration changes before logging out.

Format logout

Modes

- Privileged EXEC
- User EXEC

4.6.12 ping

Use this command to determine whether another computer is on the network. Ping provides a synchronous response when initiated from the CLI and Web interfaces.

Default

- The default count is 1.
- The default interval is 3 seconds.
- The default size is 0 bytes.



Format `ping <ipaddress|hostname> [count <count>] [interval <interval>] [size <size>]`

- Modes**
- Privileged EXEC
 - User EXEC

Using the options described below, you can specify the number and size of Echo Requests and the interval between Echo Requests.

Parameter	Description
count	Use the count parameter to specify the number of ping packets (ICMP Echo requests) that are sent to the destination address specified by the <i><ip-address></i> field. The range for <i><count></i> is 1 to 15 requests.
interval	Use the interval parameter to specify the time between Echo Requests, in seconds. Range is 1 to 60 seconds.
size	Use the size parameter to specify the size, in bytes, of the payload of the Echo Requests sent. Range is 0 to 65507 bytes.

Example: The following are examples of the CLI command.

Example: ping success:

```
(Broadcom FASTPATH Routing) #ping 10.254.2.160 count 3 interval 1 size 255
Pinging 10.254.2.160 with 255 bytes of data:

Received response for icmp_seq = 0. time= 275268 usec
Received response for icmp_seq = 1. time= 274009 usec
Received response for icmp_seq = 2. time= 279459 usec

----10.254.2.160 PING statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (msec) min/avg/max = 274/279/276
```

Example: ping failure:

In Case of Unreachable Destination:

```
(Broadcom FASTPATH Routing) # ping 192.168.254.222 count 3 interval 1 size 255
Pinging 192.168.254.222 with 255 bytes of data:
Received Response: Unreachable Destination
Received Response :Unreachable Destination
Received Response :Unreachable Destination
----192.168.254.222 PING statistics----
3 packets transmitted,3 packets received, 0% packet loss
round-trip (msec) min/avg/max = 0/0/0
```

In Case Of Request TimedOut:

```
(Broadcom FASTPATH Routing) # ping 1.1.1.1 count 1 interval 3
Pinging 1.1.1.1 with 0 bytes of data:

----1.1.1.1 PING statistics----
1 packets transmitted,0 packets received, 100% packet loss
round-trip (msec) min/avg/max = 0/0/0
```




4.6.13 quit

This command closes the current telnet connection or resets the current serial connection. The system asks you whether to save configuration changes before quitting.

Format `quit`
Modes • Privileged EXEC
 • User EXEC

4.6.14 reload

This command resets the switch without powering it off. Reset means that all network connections are terminated and the boot code executes. The switch uses the stored configuration to initialize the switch. You are prompted to confirm that the reset should proceed. The LEDs on the switch indicate a successful reset.

Format `reload`
Mode Privileged EXEC

4.6.15 reload fast

The reload command is used to initiate a switch management restart via reset of the system. The reload fast command will just do a clear config and will then re-apply the startup-config file.

Format `reload fast`
Mode Privileged EXEC

4.6.16 copy

The `copy` command uploads and downloads files to and from the switch. You can also use the copy command to manage the dual images (`image1` and `image2`) on the file system. Upload and download files from a server by using TFTP or Xmodem. SFTP and SCP are available as additional transfer methods if the software package supports secure management.

Format `copy <source> <destination>`
Mode Privileged EXEC

Replace the `<source>` and `<destination>` parameters with the options in [Table 1](#). For the `<url>` source or destination, use one of the following values:

```
{xmodem | tftp://<ipaddr|hostname>|<ip6address>/<filepath>/<filename>  
| sftp|scp://<username>@<ipaddr>|<ip6address>|<filepath>|<filename>}
```

For TFTP, SFTP and SCP, the `<ipaddr|hostname>` parameter is the IP address or host name of the server, `<filepath>` is the path to the file, and `<filename>` is the name of the file you want to upload or download. For SFTP and SCP, the `<username>` parameter is the username for logging into the remote server via SSH.



Note: `<ip6address>` is also a valid parameter for routing packages that support IPv6.



Caution! Remember to upload the existing fastpath.cfg file off the switch prior to loading a new release image in order to make a backup.

Table 1: Copy Parameters

Source	Destination	Description
<i>nvr</i> am:backup-config	<i>nvr</i> am:startup-config	Copies the backup configuration to the startup configuration.
<i>nvr</i> am:factory-settings	<i>nvr</i> am:current-settings	Copies factory settings file to current settings file
<i>nvr</i> am:factory-profile	<i>nvr</i> am:current-profile	Copies factory profile file to current profile file
<i>nvr</i> am:factory-config	<i>nvr</i> am:current-config	Copies factory configuration file to current configuration file
<i>nvr</i> am:clibanner	<url>	Copies the CLI banner to a server.
<i>nvr</i> am:diag-report	<url>	Copies diagnostics result file to a server
<i>nvr</i> am:errorlog	<url>	Copies the error log file to a server.
<i>nvr</i> am:fastpath.cfg	<url>	Uploads the binary config file to a server.
<i>nvr</i> am:log	<url>	Copies the log file to a server.
<i>nvr</i> am:oslog	<url>	Copies the OS system log file to a server
<i>nvr</i> am:script <scriptname>	<url>	Copies a specified configuration script file to a server.
<i>nvr</i> am:settings	<url>	Copies the file containing current settings to a server
<i>nvr</i> am:startup-config	<i>nvr</i> am:backup-config	Copies the startup configuration to the backup configuration.
<i>nvr</i> am:startup-config	<url>	Copies the startup configuration to a server.
<i>nvr</i> am:extra-profile	<url>	Copies the extra profile to a server.
<i>nvr</i> am:current-settings	<url>	Copies the current settings to a server.
<i>nvr</i> am:traplog	<url>	Copies the trap log file to a server.
system:running-config	<i>nvr</i> am:startup-config	Saves the running configuration to nvr
<url>	<i>nvr</i> am:clibanner	Downloads the CLI banner to the system.
<url>	<i>nvr</i> am:fastpath.cfg	Downloads the binary config file to the system.
<url>	<i>nvr</i> am:script <destfilename>	Downloads a configuration script file to the system. During the download of a configuration script, the copy command validates the script. In case of any error, the command lists all the lines at the end of the validation process and prompts you to confirm before copying the script file.
<url>	<i>nvr</i> am:sshkey-dsa	Downloads an SSH key file. For more information, see 5.4 “Secure Shell (SSH) Commands” on page 5 - 11.
<url>	<i>nvr</i> am:sshkey-rsa1	Downloads an SSH key file.
<url>	<i>nvr</i> am:sshkey-rsa2	Downloads an SSH key file.
<url>	<i>nvr</i> am:settings	Downloads the file containing current settings to the system
<url>	<i>nvr</i> am:startup-config	Downloads the startup configuration file to the system.
<url>	<i>nvr</i> am:extra-profile	Downloads the extra profile to the system.
<url>	<i>nvr</i> am:current-settings	Downloads the current settings to the system.
<url>	{image1 image2}	Download an image from the remote server to either image.
{image1 image2}	<url>	Upload either image to the remote server.

Table 1: Copy Parameters (Continued)

Source	Destination	Description
<i>image1</i>	<i>image2</i>	Copy <i>image1</i> to <i>image2</i> .
<i>image2</i>	<i>image1</i>	Copy <i>image2</i> to <i>image1</i> .

4.6.17 delete nvram:extra-profile

This command deletes the extra profile.

Format `delete nvram:extra-profile`
Mode Privileged EXEC

4.6.18 set bootstopkey

This command sets the bootstop key. With this key the booting process can be stopped. The key name is “stop”. This is the default setting.

Format `set bootstopkey`
Mode Privileged EXEC

4.6.18.1 no set bootstopkey

This command resets the bootstop key. The boot process can not be interrupted.

Format `no set bootstopkey`
Mode Privileged EXEC

4.7 Keying for Advanced Features

This section describes the commands you use to enter the licence key to access advanced features. You cannot access the advanced features without a valid license key.

4.7.1 license advanced

This command enables a particular feature. This command also enables the corresponding show commands for a feature.



Note: If the feature is enabled, the feature is visible in the output of the `show running-config` command. The `<key>` parameter specifies the hexadecimal key for the feature.

Default none
Format `license advanced <key>`
Mode Privileged EXEC



4.7.2 no license advanced

This command disables a particular feature. This command also disables the corresponding show commands. The *<key>* parameter specifies the hexadecimal key for the feature.

Format `no license advanced <key>`
Mode Privileged EXEC

4.7.3 show key-features

This command displays the enabled or disabled status for all keyable features.

Format `show key-features`
Modes • Privileged EXEC
 • User EXEC

<i>Term</i>	<i>Definition</i>
Function	This is the name of the keyable component or feature.
Status	Enabled or disabled.

4.8 Simple Network Time Protocol (SNTP) Commands

This section describes the commands you use to automatically configure the system time and date by using SNTP.

4.8.1 sntp broadcast client poll-interval

This command sets the poll interval for SNTP broadcast clients in seconds as a power of two where *<poll-interval>* can be a value from 6 to 16.

Default 6
Format `sntp broadcast client poll-interval <poll-interval>`
Mode Global Config

4.8.1.1 no sntp broadcast client poll-interval

This command resets the poll interval for SNTP broadcast client back to the default value.

Format `no sntp broadcast client poll-interval`
Mode Global Config

4.8.2 sntp client mode

This command enables Simple Network Time Protocol (SNTP) client mode and may set the mode to either broadcast or unicast.

Default disabled
Format `sntp client mode [broadcast | unicast]`
Mode Global Config



4.8.2.1 no sntp client mode

This command disables Simple Network Time Protocol (SNTP) client mode.

Format `no sntp client mode`

Mode Global Config

4.8.3 sntp client port

This command sets the SNTP client port id to a value from 1-65535.

Default 123

Format `sntp client port <portid>`

Mode Global Config

4.8.3.1 no sntp client port

This command resets the SNTP client port back to its default value.

Format `no sntp client port`

Mode Global Config

4.8.4 sntp unicast client poll-interval

This command sets the poll interval for SNTP unicast clients in seconds as a power of two where `<poll-interval>` can be a value from 6 to 16.

Default 6

Format `sntp unicast client poll-interval <poll-interval>`

Mode Global Config

4.8.4.1 no sntp unicast client poll-interval

This command resets the poll interval for SNTP unicast clients to its default value.

Format `no sntp unicast client poll-interval`

Mode Global Config

4.8.5 sntp unicast client poll-timeout

This command will set the poll timeout for SNTP unicast clients in seconds to a value from 1-30.

Default 5

Format `sntp unicast client poll-timeout <poll-timeout>`

Mode Global Config



4.8.5.1 no sntp unicast client poll-timeout

This command will reset the poll timeout for SNTP unicast clients to its default value.

Format `no sntp unicast client poll-timeout`

Mode Global Config

4.8.6 sntp unicast client poll-retry

This command will set the poll retry for SNTP unicast clients to a value from 0 to 10.

Default 1

Format `sntp unicast client poll-retry <poll-retry>`

Mode Global Config

4.8.6.1 no sntp unicast client poll-retry

This command will reset the poll retry for SNTP unicast clients to its default value.

Format `no sntp unicast client poll-retry`

Mode Global Config

4.8.7 sntp multicast client poll-interval

This command will set the poll interval for SNTP multicast clients in seconds as a power of two where *<poll-interval>* can be a value from 6 to 16.

Default 6

Format `sntp multicast client poll-interval <poll-interval>`

Mode Global Config

4.8.7.1 no sntp multicast client poll-interval

This command resets the poll interval for SNTP multicast clients to its default value.

Format `no sntp multicast client poll-interval`

Mode Global Config

4.8.8 sntp server

This command configures an SNTP server (a maximum of three). The optional priority can be a value of 1-3, the version a value of 1-4, and the port id a value of 1-65535.

Format `sntp server <ipaddress|hostname> [<priority> [<version> [<portid>]]]`

Mode Global Config



4.8.8.1 no sntp server

This command deletes an server from the configured SNTP servers.

Format `no sntp server remove <ipaddress|hostname>`

Mode Global Config

4.8.9 show sntp

This command is used to display SNTP settings and status.

Format `show sntp`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Last Update Time	Time of last clock update.
Last Attempt Time	Time of last transmit query (in unicast mode).
Last Attempt Status	Status of the last SNTP request (in unicast mode) or unsolicited message (in broadcast mode).
Broadcast Count	Current number of unsolicited broadcast messages that have been received and processed by the SNTP client since last reboot.
Multicast Count	Current number of unsolicited multicast messages that have been received and processed by the SNTP client since last reboot.

4.8.10 show sntp client

This command is used to display SNTP client settings.

Format `show sntp client`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Client Supported Modes	Supported SNTP Modes (Broadcast, Unicast, or Multicast).
SNTP Version	The highest SNTP version the client supports.
Port	SNTP Client Port.
Client Mode	Configured SNTP Client Mode.

4.8.11 show sntp server

This command is used to display SNTP server settings and configured servers.

Format `show sntp server`

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Server IP Address / Hostname	IP address or hostname of configured SNTP Server.



<i>Term</i>	<i>Definition</i>
Server Type	Address Type of Server.
Server Stratum	Claimed stratum of the server for the last received valid packet.
Server Reference ID	Reference clock identifier of the server for the last received valid packet.
Server Mode	SNTP Server mode.
Server Maximum Entries	Total number of SNTP Servers allowed.
Server Current Entries	Total number of SNTP configured.

For each configured server:

<i>Term</i>	<i>Definition</i>
IP Address / Hostname	IP address or hostname of configured SNTP Server.
Address Type	Address Type of configured SNTP server.
Priority	IP priority type of the configured server.
Version	SNTP Version number of the server. The protocol version used to query the server in unicast mode.
Port	Server Port Number.
Last Attempt Time	Last server attempt time for the specified server.
Last Update Status	Last server attempt status for the server.
Total Unicast Requests	Number of requests to the server.
Failed Unicast Requests	Number of failed requests from server.

4.9 DHCP Server Commands

This section describes the commands you to configure the DHCP server settings for the switch. DHCP uses UDP as its transport protocol and supports a number of features that facilitate in administration address allocations.

4.9.1 ip dhcp pool

This command configures a DHCP address pool name on a DHCP server and enters DHCP pool configuration mode.

Default	none
Format	<code>ip dhcp pool <name></code>
Mode	Global Config

4.9.1.1 no ip dhcp pool

This command removes the DHCP address pool. The name should be previously configured pool name.

Format	<code>no ip dhcp pool <name></code>
Mode	Global Config



4.9.2 client-identifier

This command specifies the unique identifier for a DHCP client. Unique-identifier is a valid notation in hexadecimal format. In some systems, such as Microsoft DHCP clients, the client identifier is required instead of hardware addresses. The unique-identifier is a concatenation of the media type and the MAC address. For example, the Microsoft client identifier for Ethernet address c819.2488.f177 is 01c8.1924.88f1.77 where 01 represents the Ethernet media type. For more information, refer to the “Address Resolution Protocol Parameters” section of RFC 1700, Assigned Numbers for a list of media type codes.

Default none
Format `client-identifier <uniqueidentifier>`
Mode DHCP Pool Config

4.9.2.1 no client-identifier

This command deletes the client identifier.

Format `no client-identifier`
Mode DHCP Pool Config

4.9.3 client-name

This command specifies the name for a DHCP client. Name is a string consisting of standard ASCII characters.

Default none
Format `client-name <name>`
Mode DHCP Pool Config

4.9.3.1 no client-name

This command removes the client name.

Format `no client-name`
Mode DHCP Pool Config

4.9.4 default-router

This command specifies the default router list for a DHCP client. {*address1, address2... address8*} are valid IP addresses, each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default none
Format `default-router <address1> [<address2>...<address8>]`
Mode DHCP Pool Config

4.9.4.1 no default-router

This command removes the default router list.

Format `no default-router`
Mode DHCP Pool Config



4.9.5 dns-server

This command specifies the IP servers available to a DHCP client. Address parameters are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default none
Format `dns-server <address1> [<address2>...<address8>]`
Mode DHCP Pool Config

4.9.5.1 no dns-server

This command removes the DNS Server list.

Format `no dns-server`
Mode DHCP Pool Config

4.9.6 hardware-address

This command specifies the hardware address of a DHCP client. Hardware-address is the MAC address of the hardware platform of the client consisting of 6 bytes in dotted hexadecimal format. Type indicates the protocol of the hardware platform. It is 1 for 10 MB Ethernet and 6 for IEEE 802.

Default ethernet
Format `hardware-address <hardwareaddress> <type>`
Mode DHCP Pool Config

4.9.6.1 no hardware-address

This command removes the hardware address of the DHCP client.

Format `no hardware-address`
Mode DHCP Pool Config

4.9.7 host

This command specifies the IP address and network mask for a manual binding to a DHCP client. Address and Mask are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid. The prefix-length is an integer from 0 to 32.

Default none
Format `host <address> [{<mask> | <prefix-length>}]`
Mode DHCP Pool Config

4.9.7.1 no host

This command removes the IP address of the DHCP client.

Format `no host`
Mode DHCP Pool Config



4.9.8 lease

This command configures the duration of the lease for an IP address that is assigned from a DHCP server to a DHCP client. The overall lease time should be between 1-86400 minutes. If you specify *infinite*, the lease is set for 60 days. You can also specify a lease duration. *Days* is an integer from 0 to 59. *Hours* is an integer from 0 to 23. *Minutes* is an integer from 0 to 59.

Default 1 (day)
Format `lease [{<days> [<hours>] [<minutes>] | infinite}]`
Mode DHCP Pool Config

4.9.8.1 no lease

This command restores the default value of the lease time for DHCP Server.

Format `no lease`
Mode DHCP Pool Config

4.9.9 network (DHCP Pool Config)

Use this command to configure the subnet number and mask for a DHCP address pool on the server. Network-number is a valid IP address, made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid. Mask is the IP subnet mask for the specified address pool. The prefix-length is an integer from 0 to 32.

Default none
Format `network <networknumber> [{<mask> | <prefixlength>}]`
Mode DHCP Pool Config

4.9.9.1 no network

This command removes the subnet number and mask.

Format `no network`
Mode DHCP Pool Config

4.9.10 bootfile

The command specifies the name of the default boot image for a DHCP client. The *<filename>* specifies the boot image file.

Format `bootfile <filename>`
Mode DHCP Pool Config

4.9.10.1 no bootfile

This command deletes the boot image name.

Format `no bootfile`
Mode DHCP Pool Config



4.9.11 domain-name

This command specifies the domain name for a DHCP client. The *<domain>* specifies the domain name string of the client.

Default none
Format `domain-name <domain>`
Mode DHCP Pool Config

4.9.11.1 no domain-name

This command removes the domain name.

Format `no domain-name`
Mode DHCP Pool Config

4.9.12 netbios-name-server

This command configures NetBIOS Windows Internet Naming Service (WINS) name servers that are available to DHCP clients.

One IP address is required, although one can specify up to eight addresses in one command line. Servers are listed in order of preference (address1 is the most preferred server, address2 is the next most preferred server, and so on).

Default none
Format `netbios-name-server <address> [<address2>...<address8>]`
Mode DHCP Pool Config

4.9.12.1 no netbios-name-server

This command removes the NetBIOS name server list.

Format `no netbios-name-server`
Mode DHCP Pool Config

4.9.13 netbios-node-type

The command configures the NetBIOS node type for Microsoft Dynamic Host Configuration Protocol (DHCP) clients. type Specifies the NetBIOS node type. Valid types are:

- b-node—Broadcast
- p-node—Peer-to-peer
- m-node—Mixed
- h-node—Hybrid (recommended)

Default none
Format `netbios-node-type <type>`
Mode DHCP Pool Config



4.9.13.1 no netbios-node-type

This command removes the NetBIOS node Type.

Format `no netbios-node-type`

Mode DHCP Pool Config

4.9.14 next-server

This command configures the next server in the boot process of a DHCP client. The *<address>* parameter is the IP address of the next server in the boot process, which is typically a TFTP server.

Default inbound interface helper addresses

Format `next-server <address>`

Mode DHCP Pool Config

4.9.14.1 no next-server

This command removes the boot server list.

Format `no next-server`

Mode DHCP Pool Config

4.9.15 option

The `option` command configures DHCP Server options. The *<code>* parameter specifies the DHCP option code and ranges from 1-254. The *<ascii string>* parameter specifies an NVT ASCII character string. ASCII character strings that contain white space must be delimited by quotation marks. The *hex <string>* parameter specifies hexadecimal data. In hexadecimal, character strings are two hexadecimal digits. You can separate each byte by a period (for example, `a3.4f.22.0c`), colon (for example, `a3:4f:22:0c`), or white space (for example, `a3 4f 22 0c`).

Default none

Format `option <code> {ascii string | hex <string1> [<string2>...<string8>] | ip <address1> [<address2>...<address8>]}`

Mode DHCP Pool Config

4.9.15.1 no option

This command removes the DHCP Server options. The *<code>* parameter specifies the DHCP option code.

Format `no option <code>`

Mode DHCP Pool Config



4.9.16 ip dhcp excluded-address

This command specifies the IP addresses that a DHCP server should not assign to DHCP clients. Low-address and high-address are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Default none
Format `ip dhcp excluded-address <lowaddress> [highaddress]`
Mode Global Config

4.9.16.1 no ip dhcp excluded-address

This command removes the excluded IP addresses for a DHCP client. Low-address and high-address are valid IP addresses; each made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Format `no ip dhcp excluded-address <lowaddress> [highaddress]`
Mode Global Config

4.9.17 ip dhcp ping packets

Use this command to specify the number, in a range from 2-10, of packets a DHCP server sends to a pool address as part of a ping operation. By default the number of packets sent to a pool address is 2, which is the smallest allowed number when sending packets. Setting the number of packets to 0 disables this command.

Default 2
Format `ip dhcp ping packets <0,2-10>`
Mode Global Config

4.9.17.1 no ip dhcp ping packets

This command prevents the server from pinging pool addresses and sets the number of packets to 0.

Default 0
Format `no ip dhcp ping packets`
Mode Global Config

4.9.18 service dhcp

This command enables the DHCP server.

Default disabled
Format `service dhcp`
Mode Global Config

4.9.18.1 no service dhcp

This command disables the DHCP server.

Format `no service dhcp`
Mode Global Config



4.9.19 ip dhcp bootp automatic

This command enables the allocation of the addresses to the bootp client. The addresses are from the automatic address pool.

Default disabled
Format ip dhcp bootp automatic
Mode Global Config

4.9.19.1 no ip dhcp bootp automatic

This command disables the allocation of the addresses to the bootp client. The address are from the automatic address pool.

Format no ip dhcp bootp automatic
Mode Global Config

4.9.20 ip dhcp conflict logging

This command enables conflict logging on DHCP server.

Default enabled
Format ip dhcp conflict logging
Mode Global Config

4.9.20.1 no ip dhcp conflict logging

This command disables conflict logging on DHCP server.

Format no ip dhcp conflict logging
Mode Global Config

4.9.21 clear ip dhcp binding

This command deletes an automatic address binding from the DHCP server database. If "*" is specified, the bindings corresponding to all the addresses are deleted. *<address>* is a valid IP address made up of four decimal bytes ranging from 0 to 255. IP address 0.0.0.0 is invalid.

Format clear ip dhcp binding {<address> | *}
Mode Privileged EXEC

4.9.22 clear ip dhcp server statistics

This command clears DHCP server statistics counters.

Format clear ip dhcp server statistics
Mode Privileged EXEC



4.9.23 clear ip dhcp conflict

The command is used to clear an address conflict from the DHCP Server database. The server detects conflicts using a ping. DHCP server clears all conflicts If the asterisk (*) character is used as the address parameter.

Default none
Format `clear ip dhcp conflict {<address> | *}`
Mode Privileged EXEC

4.9.24 show ip dhcp binding

This command displays address bindings for the specific IP address on the DHCP server. If no IP address is specified, the bindings corresponding to all the addresses are displayed.

Format `show ip dhcp binding [<address>]`
Modes

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
IP address	The IP address of the client.
Hardware Address	The MAC Address or the client identifier.
Lease expiration	The lease expiration time of the IP address assigned to the client.
Type	The manner in which IP address was assigned to the client.

4.9.25 show ip dhcp global configuration

This command displays address bindings for the specific IP address on the DHCP server. If no IP address is specified, the bindings corresponding to all the addresses are displayed.

Format `show ip dhcp global configuration`
Modes

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
Service DHCP	The field to display the status of dhcp protocol.
Number of Ping Packets	The maximum number of Ping Packets that will be sent to verify that an ip address id not already assigned.
Conflict Logging	Shows whether conflict logging is enabled or disabled.
BootP Automatic	Shows whether BootP for dynamic pools is enabled or disabled.

4.9.26 show ip dhcp pool configuration

This command displays pool configuration. If `all` is specified, configuration for all the pools is displayed.

Format `show ip dhcp pool configuration {<name> | all}`
Modes

- Privileged EXEC
- User EXEC



<i>Field</i>	<i>Definition</i>
Pool Name	The name of the configured pool.
Pool Type	The pool type.
Lease Time	The lease expiration time of the IP address assigned to the client.
DNS Servers	The list of DNS servers available to the DHCP client .
Default Routers	The list of the default routers available to the DHCP client

The following additional field is displayed for Dynamic pool type:

<i>Field</i>	<i>Definition</i>
Network	The network number and the mask for the DHCP address pool.

The following additional fields are displayed for Manual pool type:

<i>Field</i>	<i>Definition</i>
Client Name	The name of a DHCP client.
Client Identifier	The unique identifier of a DHCP client.
Hardware Address	The hardware address of a DHCP client.
Hardware Address Type	The protocol of the hardware platform.
Host	The IP address and the mask for a manual binding to a DHCP client.

4.9.27 **show ip dhcp server statistics**

This command displays DHCP server statistics.

Format	<code>show ip dhcp server statistics</code>
Modes	<ul style="list-style-type: none"> • Privileged EXEC • User EXEC

<i>Field</i>	<i>Definition</i>
Automatic Bindings	The number of IP addresses that have been automatically mapped to the MAC addresses of hosts that are found in the DHCP database.
Expired Bindings	The number of expired leases.
Malformed Bindings	The number of truncated or corrupted messages that were received by the DHCP server.

Message Received:

<i>Message</i>	<i>Definition</i>
DHCP DISCOVER	The number of DHCPDISCOVER messages the server has received.
DHCP REQUEST	The number of DHCPREQUEST messages the server has received.
DHCP DECLINE	The number of DHCPDECLINE messages the server has received.
DHCP RELEASE	The number of DHCPRELEASE messages the server has received.
DHCP INFORM	The number of DHCPINFORM messages the server has received.



Message Sent:

Message	Definition
DHCP OFFER	The number of DHCPOFFER messages the server sent.
DHCP ACK	The number of DHCPACK messages the server sent.
DHCP NACK	The number of DHCPNACK messages the server sent.

4.9.28 show ip dhcp conflict

This command displays address conflicts logged by the DHCP Server. If no IP address is specified, all the conflicting addresses are displayed.

Format `show ip dhcp conflict [<ip-address>]`

Modes

- Privileged EXEC
- User EXEC

Term	Definition
IP address	The IP address of the host as recorded on the DHCP server.
Detection Method	The manner in which the IP address of the hosts were found on the DHCP Server.
Detection time	The time when the conflict was found.

4.10 DHCP Filtering

You can configure the DHCP Filtering feature as a security measure against unauthorized DHCP servers. DHCP filtering works by allowing you to configure each port as either a trusted port or an untrusted port. To optimize the DHCP filtering feature, configure the port that is connected to an authorized DHCP server on your network as a trusted port. Any DHCP responses received on a trusted port are forwarded. Make sure that all other ports are untrusted so that any DHCP (or BootP) responses received are discarded.

You can configure DHCP filtering on physical ports and LAGs. DHCP filtering is not operable on VLAN interfaces.

4.10.1 ip dhcp filtering

This command enables DHCP filtering globally.

Default disabled

Format `ip dhcp filtering`

Mode Global Config

4.10.1.1 no ip dhcp filtering

This command disables DHCP filtering.

Format `no ip dhcp filtering`

Mode Global Config



4.10.2 ip dhcp filtering trust

This command configures an interface as trusted.

Default untrusted
Format ip dhcp filtering trust
Mode Interface Config

4.10.2.1 no ip dhcp filtering trust

This command returns an interface to the default value for DHCP filtering.

Format no ip dhcp filtering trust
Mode Interface Config

4.10.3 show ip dhcp filtering

This command displays the DHCP filtering configuration.

Format show ip dhcp filtering
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Interface	The interface by slot/port.
Trusted	Indicates whether the interface is trusted or untrusted.

4.11 DNS Client Commands

These commands are used in the Domain Name System (DNS), an Internet directory service. DNS is how domain names are translated into IP addresses. When enabled, the DNS client provides a hostname lookup service to other components of FASTPATH.

4.11.1 ip domain lookup

Use this command to enable the DNS client.

Default enabled
Format ip domain lookup
Mode Global Config

4.11.1.1 no ip domain lookup

Use this command to disable the DNS client.

Format no ip domain lookup
Mode Global Config



4.11.2 ip domain name

Use this command to define a default domain name that FASTPATH software uses to complete unqualified host names (names with a domain name). By default, no default domain name is configured in the system. *<name>* may not be longer than 255 characters and should not include an initial period. This *<name>* should be used only when the default domain name list, configured using the `ip domain list` command, is empty.

Default none
Format `ip domain name <name>`
Mode Global Config

Example: The CLI command `ip domain name yahoo.com` will configure yahoo.com as a default domain name. For an unqualified hostname xxx, a DNS query is made to find the IP address corresponding to xxx.yahoo.com.

4.11.2.1 no ip domain name

Use this command to remove the default domain name configured using the `ip domain name` command.

Format `no ip domain name`
Mode Global Config

4.11.3 ip domain list

Use this command to define a list of default domain names to complete unqualified names. By default, the list is empty. Each name must be no more than 256 characters, and should not include an initial period. The default domain name, configured using the `ip domain name` command, is used only when the default domain name list is empty. A maximum of 32 names can be entered in to this list.

Default none
Format `ip domain list <name>`
Mode Global Config

4.11.3.1 no ip domain list

Use this command to delete a name from a list.

Format `no ip domain list <name>`
Mode Global Config

4.11.4 ip name server

Use this command to configure the available name servers. Up to eight servers can be defined in one command or by using multiple commands. The parameter *<server-address>* is a valid IP address of the server. The preference of the servers is determined by the order they were entered.

Format `ip name-server <server-address1> [server-address2...server-address8]`
Mode Global Config



4.11.4.1 no ip name server

Use this command to remove a name server.

Format **no ip name-server** [*server-address1*...*server-address8*]

Mode Global Config

4.11.5 ip host

Use this command to define static host name-to-address mapping in the host cache. *<name>* is host name. *<ip address>* is the IP address of the host.

Default none

Format **ip host** *<name>* *<ipaddress>*

Mode Global Config

4.11.5.1 no ip host

Use this command to remove the name-to-address mapping.

Format **no ip host** *<name>*

Mode Global Config

4.11.6 ip domain retry

Use this command to specify the number of times to retry sending Domain Name System (DNS) queries. The parameter *<number>* indicates the number of times to retry sending a DNS query to the DNS server. This number ranges from 0 to 100.

Default 2

Format **ip domain retry** *<number>*

Mode Global Config

4.11.6.1 no ip domain retry

Use this command to return to the default.

Format **no ip domain retry** *<number>*

Mode Global Config

4.11.7 ip domain timeout

Use this command to specify the amount of time to wait for a response to a DNS query. The parameter *<seconds>* specifies the time, in seconds, to wait for a response to a DNS query. *<seconds>* ranges from 0 to 3600.

Default 3

Format **ip domain timeout** *<seconds>*

Mode Global Config



4.11.7.1 no ip domain timeout

Use this command to return to the default setting.

Format `no ip domain timeout <seconds>`

Mode Global Config

4.11.8 clear host

Use this command to delete entries from the host name-to-address cache. This command clears the entries from the DNS cache maintained by the software.

Format `clear host {<name> | all}`

Mode Privileged EXEC

<i>Field</i>	<i>Description</i>
name	A particular host entry to remove. <name> ranges from 1-255 characters.
all	Removes all entries.

4.11.9 show hosts

Use this command to display the default domain name, a list of name server hosts, the static and the cached list of host names and addresses. <name> ranges from 1-255 characters.

Format `show hosts [name]`

Mode User EXEC

<i>Field</i>	<i>Description</i>
Host Name	Domain host name.
Default Domain	Default domain name.
Default Domain List	Default domain list.
Domain Name Lookup	DNS client enabled/disabled.
Number of Retries	Number of time to retry sending Domain Name System (DNS) queries.
Retry Timeout Period	Amount of time to wait for a response to a DNS query.
Name Servers	Configured name servers.

Example: The following shows example CLI display output for the command.

```
<Broadcom FASTPATH SWITCHING> show hosts
```

```
Host name..... Device
Default domain..... gm.com
Default domain list..... yahoo.com, Stanford.edu, rediff.com
Domain Name lookup..... Enabled
Number of retries..... 5
Retry timeout period..... 1500
Name servers (Preference order)... 176.16.1.18 176.16.1.19
```



Configured host name-to-address mapping:

```

Host                               Addresses
-----
accounting.gm.com                  176.16.8.8

Host      Total  Elapsed  Type  Addresses
-----
www.stanford.edu  72    3      IP    171.64.14.203

```

4.12 Serviceability Packet Tracing Commands

These commands improve the capability of network engineers to diagnose conditions affecting their FASTPATH product.



Caution! The output of “debug” commands can be long and may adversely affect system performance.

4.12.1 debug console

This command enables the display of “debug” trace output on the login session in which it is executed. Debug console display must be enabled in order to view any trace output. The output of debug trace commands will appear on all login sessions for which debug console has been enabled. The configuration of this command remains in effect for the life of the login session. The effect of this command is not persistent across resets.

Default disabled
Format `debug console`
Mode Privileged EXEC

4.12.1.1 no debug console

This command disables the display of “debug” trace output on the login session in which it is executed.

Format `no debug console`
Mode Privileged EXEC

4.12.2 debug clear

This command disables all previously enabled “debug” traces.

Default none
Format `debug clear`
Mode Privileged EXEC



4.12.3 debug spanning-tree bpdu transmit

This command enables tracing of spanning tree BPDUs transmitted by the switch. Spanning tree should be enabled on the device and on the interface in order to monitor packets on a particular interface.

Default	disabled
Format	debug spanning-tree bpdu transmit
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 01:02:04 192.168.17.29-1 DOT1S[191096896]: dot1s_debug.c(1249) 101 % Pkt
TX - Intf: 1/0/7(7), Source_Mac: 00:11:88:4e:c2:00 Version: 3, Root_Mac:
00:11:88:4e:c2:00, Root_Priority: 0x8000 Path_Cost: 0
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX	A packet transmitted by the device.
Intf	The interface that the packet went out on. Format used is unit/port/slot (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Source_Mac	Source MAC address of the packet.
Version	Spanning tree protocol version (0-3). 0 refers to STP, 2 RSTP and 3 MSTP.
Root_Mac	MAC address of the CIST root bridge.
Root_Priority	Priority of the CIST root bridge. The value is between 0 and 61440. It is displayed in hex in multiples of 4096.
Path_Cost	External root path cost component of the BPDU.

4.12.3.1 no debug spanning-tree bpdu transmit

This command disables tracing of transmitted spanning tree BPDUs.

Format	no debug spanning-tree bpdu transmit
Mode	Privileged EXEC

4.12.4 debug spanning-tree bpdu receive

This command enables tracing of spanning tree BPDUs received by the switch. Spanning tree should be enabled on the device and on the interface in order to monitor packets for a particular interface.

Default	disabled
Format	debug spanning-tree bpdu receive
Mode	Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 01:02:04 192.168.17.29-1 DOT1S[191096896]: dot1s_debug.c(1249) 101 % Pkt
RX - Intf: 1/0/9(9), Source_Mac: 00:11:88:4e:c2:10 Version: 3, Root_Mac:
00:11:88:4e:c2:00, Root_Priority: 0x8000 Path_Cost: 0
```




The following parameters are displayed in the trace message:

Parameter	Definition
RX	A packet received by the device.
Intf	The interface that the packet came in on. Format used is unit/port/slot (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Source_Mac	Source MAC address of the packet.
Version	Spanning tree protocol version (0-3). 0 refers to STP, 2 RSTP and 3 MSTP.
Root_Mac	MAC address of the CIST root bridge.
Root_Priority	Priority of the CIST root bridge. The value is between 0 and 61440. It is displayed in hex in multiples of 4096.
Path_Cost	External root path cost component of the BPDU.

4.12.4.1 no debug spanning-tree bpdud receive

This command disables tracing of received spanning tree BPDUs.

Format no debug spanning-tree bpdud receive
Mode Privileged EXEC

4.12.5 debug spanning-tree bpdud

This command enables tracing of spanning tree bpduds received and transmitted by the switch.

Default disabled
Format debug spanning-tree bpdud
Mode Privileged EXEC

4.12.5.1 no debug spanning-tree bpdud

This command disables tracing of spanning tree BPDUs.

Format no debug spanning-tree bpdud
Mode Privileged EXEC

4.12.6 debug igmpsnooding packet transmit

This command enables tracing of IGMP Snooping packets transmitted by the switch. Snooping should be enabled on the device and the interface in order to monitor packets for a particular interface.

Default disabled
Format debug igmpsnooding packet transmit
Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 02:45:06 192.168.17.29-1 IGMP_SNOOP[185429992]: igmp_snooping_debug.c(116)
908 % Pkt TX - Intf: 1/0/20(20), Vlan_Id:1 Src_Mac: 00:03:0e:00:00:00 Dest_Mac:
01:00:5e:00:00:01 Src_IP: 9.1.1.1 Dest_IP: 225.0.0.1 Type: V2_Membership_Report
Group: 225.0.0.1
```



The following parameters are displayed in the trace message:

Parameter	Definition
TX	A packet transmitted by the device.
Intf	The interface that the packet went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Src_Mac	Source MAC address of the packet.
Dest_Mac	Destination multicast MAC address of the packet.
Src_IP	The source IP address in the IP header in the packet.
Dest_IP	The destination multicast IP address in the packet.
Type	The type of IGMP packet. Type can be one of the following: <ul style="list-style-type: none"> • <code>Membership_Query</code> – IGMP Membership Query • <code>V1_Membership_Report</code> – IGMP Version 1 Membership Report • <code>V2_Membership_Report</code> – IGMP Version 2 Membership Report • <code>V3_Membership_Report</code> – IGMP Version 3 Membership Report • <code>V2_Leave_Group</code> – IGMP Version 2 Leave Group
Group	Multicast group address in the IGMP header.

4.12.6.1 no debug igmpsnooping transmit

This command disables tracing of transmitted IGMP snooping packets.

Format `no debug igmpsnooping transmit`
Mode Privileged EXEC

4.12.7 debug igmpsnooping packet receive

This command enables tracing of IGMP Snooping packets received by the switch. Snooping should be enabled on the device and the interface in order to monitor packets for a particular interface.

Default disabled
Format `debug igmpsnooping packet receive`
Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 02:45:06 192.168.17.29-1 IGMP Snooping [185429992]: igmp_snooping_debug.c(116)
908 % Pkt RX - Intf: 1/0/20(20), Vlan_Id:1 Src_Mac: 00:03:0e:00:00:10 Dest_Mac:
01:00:5e:00:00:05 Src_IP: 11.1.1.1 Dest_IP: 225.0.0.5 Type: Membership_Query Group:
225.0.0.5
```

The following parameters are displayed in the trace message:

Parameter	Definition
RX	A packet received by the device.
Intf	The interface that the packet went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
Src_Mac	Source MAC address of the packet.
Dest_Mac	Destination multicast MAC address of the packet.
Src_IP	The source IP address in the ip header in the packet.



Parameter	Definition
Dest_IP	The destination multicast ip address in the packet.
Type	The type of IGMP packet. Type can be one of the following: <ul style="list-style-type: none"> • Membership_Query – IGMP Membership Query • V1_Membership_Report – IGMP Version 1 Membership Report • V2_Membership_Report – IGMP Version 2 Membership Report • V3_Membership_Report – IGMP Version 3 Membership Report • V2_Leave_Group – IGMP Version 2 Leave Group
Group	Multicast group address in the IGMP header.

4.12.7.1 no debug igmpsnooping receive

This command disables tracing of received IGMP Snooping packets.

Format no debug igmpsnooping receive
Mode Privileged EXEC

4.12.8 debug igmpsnooping packet

This command enables tracing of IGMP Snooping packets received and transmitted by the switch.

Default disabled
Format debug igmpsnooping packet
Mode Privileged EXEC

4.12.8.1 no debug igmpsnooping packet

This command disables tracing of IGMP Snooping packets.

Format no debug igmpsnooping packet
Mode Privileged EXEC

4.12.9 debug ping packet

This command enables tracing of ICMP echo requests and responses. The command traces pings on the network port/ serviceport for switching packages. For routing packages, pings are traced on the routing ports as well.

Default disabled
Format debug ping packet
Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 00:21:22 192.168.17.29-1 SIM[181040176]: sim_debug.c(128) 20 % Pkt TX -
Intf: 1/0/1(1),
SRC_IP:10.50.50.2, DEST_IP:10.50.50.1, Type:ECHO_REQUEST
```

```
<15> JAN 01 00:21:22 192.168.17.29-1 SIM[182813968]: sim_debug.c(82) 21 % Pkt RX -
```



```
Intf: 1/0/1(1), S
RC_IP:10.50.50.1, DEST_IP:10.50.50.2, Type:ECHO_REPLY
```

The following parameters are displayed in the trace message:

Parameter	Definition
TX/RX	TX refers to a packet transmitted by the device. RX refers to packets received by the device.
Intf	The interface that the packet came in or went out on. Format used is slot/port (internal interface number). Unit is always shown as 1 for interfaces on a non-stacking device.
SRC_IP	The source IP address in the IP header in the packet.
DEST_IP	The destination IP address in the IP header in the packet.
Type	Type determines whether or not the ICMP message is a REQUEST or a RESPONSE.

4.12.9.1 no debug ping packet

This command disables tracing of ICMP echo requests and responses.

Format **no debug ping packet**
Mode Privileged EXEC

4.12.10 debug lacp packet

This command enables tracing of LACP packets received and transmitted by the switch.

Default disabled
Format **debug lacp packet**
Mode Privileged EXEC

A sample output of the trace message is shown below.

```
<15> JAN 01 14:04:51 10.254.24.31-1 DOT3AD[183697744]: dot3ad_debug.c(385) 58 %%
  Pkt TX - Intf: 1/0/1(1), Type: LACP, Sys: 00:11:88:14:62:e1, State: 0x47, Key:
0x36
```

4.12.10.1 no debug lacp packet

This command disables tracing of LACP packets.

Format **no debug lacp packet**
Mode Privileged EXEC

4.12.11 logging persistent

Use this command to configure the Persistent logging for the switch. The severity level of logging messages is specified at severity level. Possible values for severity level are (*emergency|0, alert|1, critical|2, error|3, warning|4, notice|5, info|6, debug|7*).

Default Disable
Format **logging persistent** <severity level>
Mode Global Config



4.12.11.1 no logging persistent

Use this command to disable the persistent logging in the switch.

Format `no logging persistent`

Mode Global Config





Chapter

5

Management Commands



5. Management Commands

This chapter describes the management commands available in the FASTPATH CLI.

The Management Commands chapter contains the following sections:

- 5.1 “Network Interface Commands” on page 5 - 2.
- 5.2 “Console Port Access Commands” on page 5 - 5.
- 5.3 “Telnet Commands” on page 5 - 7.
- 5.4 “Secure Shell (SSH) Commands” on page 5 - 11.
- 5.5 “Management Security Commands” on page 5 - 13.
- 5.6 “Access Commands” on page 5 - 14.
- 5.7 “User Account Commands” on page 5 - 15.
- 5.8 “SNMP Commands” on page 5 - 20.
- 5.9 “RADIUS Commands” on page 5 - 29.
- 5.10 “TACACS+ Commands” on page 5 - 35.
- 5.11 “Configuration Scripting Commands” on page 5 - 37.
- 5.12 “Pre-login Banner and System Prompt Commands” on page 5 - 39
- 5.13 “Diagnostics Commands” on page 5 - 40



Caution! The commands in this chapter are in one of three functional groups:

- Show commands display switch settings, statistics, and other information.
- Configuration commands configure features and options of the switch. For every configuration command, there is a show command that displays the configuration setting.
- Clear commands clear some or all of the settings to factory defaults.

5.1 Network Interface Commands

This section describes the commands you use to configure a logical interface for management access. To configure the management VLAN, see 2.3.2 “network mgmt_vlan” on page 2 - 20

5.1.1 enable (Privileged EXEC access)

This command gives you access to the Privileged EXEC mode. From the Privileged EXEC mode, you can configure the network interface.

Format **enable**
Mode User EXEC

5.1.2 serviceport ip

This command sets the IP address, the netmask and the gateway of the network management port.

Format **serviceport ip** <ipaddr> <netmask> [gateway]
Mode Privileged EXEC



5.1.3 serviceport protocol

This command specifies the network management port configuration protocol. If you modify this value, the change is effective immediately. If you use the *bootp* parameter, the switch periodically sends requests to a BootP server until a response is received. If you use the *dhcp* parameter, the switch periodically sends requests to a DHCP server until a response is received. If you use the *none* parameter, you must configure the network information for the switch manually.

Format `serviceport protocol {none | bootp | dhcp}`
Mode Privileged EXEC

5.1.4 network parms

This command sets the IP address, subnet mask and gateway of the device. The IP address and the gateway must be on the same subnet.

Format `network parms <ipaddr> <netmask> [<gateway>]`
Mode Privileged EXEC

5.1.5 network protocol

This command specifies the network configuration protocol to be used. If you modify this value, change is effective immediately. If you use the *bootp* parameter, the switch periodically sends requests to a BootP server until a response is received. If you use the *dhcp* parameter, the switch periodically sends requests to a DHCP server until a response is received. If you use the *none* parameter, you must configure the network information for the switch manually.

Default none
Format `network protocol {none | bootp | dhcp}`
Mode Privileged EXEC

5.1.6 network mac-address

This command sets locally administered MAC addresses. The following rules apply:

- Bit 6 of byte 0 (called the U/L bit) indicates whether the address is universally administered (b'0') or locally administered (b'1').
- Bit 7 of byte 0 (called the I/G bit) indicates whether the destination address is an individual address (b'0') or a group address (b'1').
- The second character, of the twelve character macaddr, must be 2, 6, A or E.

A locally administered address must have bit 6 On (b'1') and bit 7 Off (b'0').

Format `network mac-address <macaddr>`
Mode Privileged EXEC



5.1.7 network mac-type

This command specifies whether the switch uses the burned in MAC address or the locally-administered MAC address.

Default burnedin
Format `network mac-type {local | burnedin}`
Mode Privileged EXEC

5.1.7.1 no network mac-type

This command resets the value of MAC address to its default.

Format `no network mac-type`
Mode Privileged EXEC

5.1.8 show network

This command displays configuration settings associated with the switch's network interface. The network interface is the logical interface used for in-band connectivity with the switch via any of the switch's front panel ports. The configuration parameters associated with the switch's network interface do not affect the configuration of the front panel ports through which traffic is switched or routed.

Format `show network`
Modes

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
IP Address	The IP address of the interface. The factory default value is 0.0.0.0.
Subnet Mask	The IP subnet mask for this interface. The factory default value is 0.0.0.0.
Default Gateway	The default gateway for this IP interface. The factory default value is 0.0.0.0.
IPv6 Administrative Mode	Whether enabled or disabled.
IPv6 Address/Length	The IPv6 address and length.
IPv6 Default Router	The IPv6 default router address.
Burned In MAC Address	The burned in MAC address used for in-band connectivity.
Locally Administered MAC Address	If desired, a locally administered MAC address can be configured for in-band connectivity. To take effect, 'MAC Address Type' must be set to 'Locally Administered'. Enter the address as twelve hexadecimal digits (6 bytes) with a colon between each byte. Bit 1 of byte 0 must be set to a 1 and bit 0 to a 0, i.e. byte 0 should have the following mask 'xxxx xx10'. The MAC address used by this bridge when it must be referred to in a unique fashion. It is recommended that this be the numerically smallest MAC address of all ports that belong to this bridge. However it is only required to be unique. When concatenated with dot1dStpPriority a unique BridgIdentifier is formed which is used in the Spanning Tree Protocol.
MAC Address Type	The MAC address which should be used for in-band connectivity. The choices are the burned in or the Locally Administered address. The factory default is to use the burned in MAC address.



<i>Term</i>	<i>Definition</i>
Network Configuration Protocol Current	The network protocol being used. The options are bootp dhcp none.

Example: The following shows example CLI display output for the network port.

```
(admin) #show network

IP Address..... 10.250.3.1
Subnet Mask..... 255.255.255.0
Default Gateway..... 10.250.3.3
Burned In MAC Address..... 00:10:18:82:03:37
Locally Administered MAC Address..... 00:00:00:00:00:00
MAC Address Type..... Burned In
Network Configuration Protocol Current..... None
Management VLAN ID..... 1
```

5.1.9 show serviceport

This command displays service port configuration information.

Format show serviceport
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
IP Address	The IP address of the interface. The factory default value is 0.0.0.0.
Subnet Mask	The IP subnet mask for this interface. The factory default value is 0.0.0.0.
Default Gateway	The default gateway for this IP interface. The factory default value is 0.0.0.0.
ServPort Configuration Protocol Current	The network protocol used on the last, or current, power-up cycle, if any.
Burned in MAC Address	The burned in MAC address used for in-band connectivity.

Example: The following shows example CLI display output for the service port.

```
(admin) #show serviceport

IP Address..... 10.230.3.51
Subnet Mask..... 255.255.255.0
Default Gateway..... 10.230.3.1
ServPort Configured Protocol Current..... None
Burned In MAC Address..... 00:10:18:82:03:38
```

5.2 Console Port Access Commands

This section describes the commands you use to configure the console port. You can use a serial cable to connect a management host directly to the console port of the switch.



5.2.1 configuration

This command gives you access to the Global Config mode. From the Global Config mode, you can configure a variety of system settings, including user accounts. From the Global Config mode, you can enter other command modes, including Line Config mode.

Format configuration
Mode Privileged EXEC

5.2.2 lineconfig

This command gives you access to the Line Config mode, which allows you to configure various Telnet settings and the console port.

Format lineconfig
Mode Global Config

5.2.3 serial baudrate

This command specifies the communication rate of the terminal interface. The supported rates are 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200.

Default 9600
Format serial baudrate {1200 | 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200}
Mode Line Config

5.2.3.1 no serial baudrate

This command sets the communication rate of the terminal interface.

Format no serial baudrate
Mode Line Config

5.2.4 serial timeout

This command specifies the maximum connect time (in minutes) without console activity. A value of 0 indicates that a console can be connected indefinitely. The time range is 0 to 160.

Default 5
Format serial timeout <0-160>
Mode Line Config

5.2.4.1 no serial timeout

This command sets the maximum connect time (in minutes) without console activity.

Format no serial timeout
Mode Line Config



5.2.5 show serial

This command displays serial communication settings for the switch.

Format `show serial`
Modes • Privileged EXEC
 • User EXEC

<i>Term</i>	<i>Definition</i>
Serial Port Login Timeout (minutes)	The time, in minutes, of inactivity on a Serial port connection, after which the Switch will close the connection. Any numeric value between 0 and 160 is allowed, the factory default is 5. A value of 0 disables the timeout.
Baud Rate (bps)	The default baud rate at which the serial port will try to connect. The available values are 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200 baud. The factory default is 9600 baud.
Character Size (bits)	The number of bits in a character. The number of bits is always 8.
Flow Control	Whether Hardware Flow-Control is enabled or disabled. Hardware Flow Control is always disabled.
Stop Bits	The number of Stop bits per character. The number of Stop bits is always 1.
Parity Type	The Parity Method used on the Serial Port. The Parity Method is always None.

5.3 Telnet Commands

This section describes the commands you use to configure and view Telnet settings. You can use Telnet to manage the device from a remote management host.

5.3.1 ip telnet server enable

Use this command to enable Telnet connections to the system and to enable the Telnet Server Admin Mode. This command opens the Telnet listening port.

Default enabled
Format `ip telnet server enable`
Mode Privileged EXEC

5.3.1.1 no ip telnet server enable

Use this command to disable Telnet access to the system and to disable the Telnet Server Admin Mode. This command closes the Telnet listening port and disconnects all open Telnet sessions.

Format `no ip telnet server enable`
Mode Privileged EXEC

5.3.2 telnet

This command establishes a new outbound Telnet connection to a remote host. The *host* value must be a valid IP address or host name. Valid values for *port* should be a valid decimal integer in the range of 0 to 65535, where the default value is 23. If *[debug]* is used, the current Telnet options enabled is displayed. The optional *line* parameter



sets the outbound Telnet operational mode as 'linemode' where, by default, the operational mode is 'character mode'. The *noecho* option disables local echo.

Format `telnet <ip-address|hostname> <port> [debug] [line] [noecho]`

Modes

- Privileged EXEC
- User EXEC

5.3.3 transport input telnet

This command regulates new Telnet sessions. If enabled, new Telnet sessions can be established until there are no more sessions available. An established session remains active until the session is ended or an abnormal network error ends the session.



Note: If the Telnet Server Admin Mode is disabled, Telnet sessions cannot be established. Use the `ip telnet server enable` command to enable Telnet Server Admin Mode.

Default enabled

Format `transport input telnet`

Mode Line Config

5.3.3.1 no transport input telnet

Use this command to prevent new Telnet sessions from being established.

Format `no transport input telnet`

Mode Line Config

5.3.4 transport output telnet

This command regulates new outbound Telnet connections. If enabled, new outbound Telnet sessions can be established until the system reaches the maximum number of simultaneous outbound Telnet sessions allowed. An established session remains active until the session is ended or an abnormal network error ends it.

Default enabled

Format `transport output telnet`

Mode Line Config

5.3.4.1 no transport output telnet

Use this command to prevent new outbound Telnet connection from being established.

Format `no transport output telnet`

Mode Line Config



5.3.5 session-limit

This command specifies the maximum number of simultaneous outbound Telnet sessions. A value of 0 indicates that no outbound Telnet session can be established.

Default 5
Format `session-limit <0-5>`
Mode Line Config

5.3.5.1 no session-limit

This command sets the maximum number of simultaneous outbound Telnet sessions to the default value.

Format `no session-limit`
Mode Line Config

5.3.6 session-timeout

This command sets the Telnet session timeout value. The timeout value unit of time is minutes.

Default 5
Format `session-timeout <1-160>`
Mode Line Config

5.3.6.1 no session-timeout

This command sets the Telnet session timeout value to the default. The timeout value unit of time is minutes.

Format `no session-timeout`
Mode Line Config

5.3.7 telnetcon maxsessions

This command specifies the maximum number of Telnet connection sessions that can be established. A value of 0 indicates that no Telnet connection can be established. The range is 0-5.

Default 5
Format `telnetcon maxsessions <0-5>`
Mode Privileged EXEC

5.3.7.1 no telnetcon maxsessions

This command sets the maximum number of Telnet connection sessions that can be established to the default value.

Format `no telnetcon maxsessions`
Mode Privileged EXEC



5.3.8 telnetcon timeout

This command sets the Telnet connection session timeout value, in minutes. A session is active as long as the session has not been idle for the value set. The time is a decimal value from 1 to 160.



Note: When you change the timeout value, the new value is applied to all active and inactive sessions immediately. Any sessions that have been idle longer than the new timeout value are disconnected immediately.

Default 5
Format `telnetcon timeout <1-160>`
Mode Privileged EXEC

5.3.8.1 no telnetcon timeout

This command sets the Telnet connection session timeout value to the default.



Note: Changing the timeout value for active sessions does not become effective until the session is reaccessed. Also, any keystroke activates the new timeout duration.

Format `no telnetcon timeout`
Mode Privileged EXEC

5.3.9 show telnet

This command displays the current outbound Telnet settings. In other words, these settings apply to Telnet connections initiated from the switch to a remote system.

Format `show telnet`
Modes

- Privileged EXEC
- User EXEC

<i>Term</i>	<i>Definition</i>
Outbound Telnet Login Timeout	The number of minutes an outbound Telnet session is allowed to remain inactive before being logged off.
Maximum Number of Outbound Telnet Sessions	The number of simultaneous outbound Telnet connections allowed.
Allow New Outbound Telnet Sessions	Indicates whether outbound Telnet sessions will be allowed.

5.3.10 show telnetcon

This command displays the current inbound Telnet settings. In other words, these settings apply to Telnet connections initiated from a remote system to the switch.

Format `show telnetcon`
Modes

- Privileged EXEC
- User EXEC



<i>Term</i>	<i>Definition</i>
Remote Connection Login Timeout (minutes)	This object indicates the number of minutes a remote connection session is allowed to remain inactive before being logged off. May be specified as a number from 1 to 160. The factory default is 5.
Maximum Number of Remote Connection Sessions	This object indicates the number of simultaneous remote connection sessions allowed. The factory default is 5.
Allow New Telnet Sessions	New Telnet sessions will not be allowed when this field is set to no. The factory default value is yes.

5.4 Secure Shell (SSH) Commands

This section describes the commands you use to configure SSH access to the switch. Use SSH to access the switch from a remote management host.



Note: The system allows a maximum of 5 SSH sessions.

5.4.1 ip ssh

Use this command to enable SSH access to the system. (This command is the short form of the `ip ssh server enable` command.)

Default	disabled
Format	<code>ip ssh</code>
Mode	Privileged EXEC

5.4.2 ip ssh protocol

This command is used to set or remove protocol levels (or versions) for SSH. Either SSH1 (1), SSH2 (2), or both SSH 1 and SSH 2 (1 and 2) can be set.

Default	1 and 2
Format	<code>ip ssh protocol [1] [2]</code>
Mode	Privileged EXEC

5.4.3 ip ssh server enable

This command enables the IP secure shell server.

Default	disabled
Format	<code>ip ssh server enable</code>
Mode	Privileged EXEC

5.4.3.1 no ip ssh server enable

This command disables the IP secure shell server.

Format	<code>no ip ssh server enable</code>
---------------	--------------------------------------



Mode Privileged EXEC

5.4.4 sshcon maxsessions

This command specifies the maximum number of SSH connection sessions that can be established. A value of 0 indicates that no ssh connection can be established. The range is 0 to 5.

Default 5

Format `sshcon maxsessions <0-5>`

Mode Privileged EXEC

5.4.4.1 no sshcon maxsessions

This command sets the maximum number of allowed SSH connection sessions to the default value.

Format `no sshcon maxsessions`

Mode Privileged EXEC

5.4.5 sshcon timeout

This command sets the SSH connection session timeout value, in minutes. A session is active as long as the session has been idle for the value set. The time is a decimal value from 1 to 160.

Changing the timeout value for active sessions does not become effective until the session is re accessed. Also, any keystroke activates the new timeout duration.

Default 5

Format `sshcon timeout <1-160>`

Mode Privileged EXEC

5.4.5.1 no sshcon timeout

This command sets the SSH connection session timeout value, in minutes, to the default.

Changing the timeout value for active sessions does not become effective until the session is re accessed. Also, any keystroke activates the new timeout duration.

Format `no sshcon timeout`

Mode Privileged EXEC

5.4.6 show ip ssh

This command displays the ssh settings.

Format `show ip ssh`

Mode Privileged EXEC



Term	Definition
Administrative Mode	This field indicates whether the administrative mode of SSH is enabled or disabled.
Protocol Level	The protocol level may have the values of version 1, version 2 or both versions 1 and version 2.
SSH Sessions Currently Active	The number of SSH sessions currently active.
Max SSH Sessions Allowed	The maximum number of SSH sessions allowed.
SSH Timeout	The SSH timeout value in minutes.
Keys Present	Indicates whether the SSH RSA and DSA key files are present on the device.
Key Generation in Progress	Indicates whether RSA or DSA key files generation is currently in progress.

5.5 Management Security Commands

This section describes commands you use to generate keys and certificates, which you can do in addition to loading them as before.

5.5.1 **crypto certificate generate**

Use this command to generate self-signed certificate for HTTPS. The generate RSA key for SSL has a length of 1024 bits. The resulting certificate is generated with a common name equal to the lowest IP address of the device and a duration of 365 days.

Format `crypto certificate generate`
Mode Global Config

5.5.1.1 **no crypto certificate generate**

Use this command to delete the HTTPS certificate files from the device, regardless of whether they are self-signed or downloaded from an outside source.

Format `no crypto certificate generate`
Mode Global Config

5.5.2 **crypto key generate rsa**

Use this command to generate an RSA key pair for SSH. The new key files will overwrite any existing generated or downloaded RSA key files.

Format `crypto key generate rsa`
Mode Global Config

5.5.2.1 **no crypto key generate rsa**

Use this command to delete the RSA key files from the device.

Format `no crypto key generate rsa`
Mode Global Config



5.5.3 crypto key generate dsa

Use this command to generate a DSA key pair for SSH. The new key files will overwrite any existing generated or downloaded DSA key files.

Format `crypto key generate dsa`

Mode Global Config

5.5.3.1 no crypto key generate dsa

Use this command to delete the DSA key files from the device.

Format `no crypto key generate dsa`

Mode Global Config

5.6 Access Commands

Use the commands in this section to close remote connections or to view information about connections to the system.

5.6.1 disconnect

Use the **disconnect** command to close Telnet or SSH sessions. Use *all* to close all active sessions, or use *<session-id>* to specify the session ID to close. To view the possible values for *<session-id>*, use the **show loginsession** command.

Format `disconnect {<session_id> | all}`

Mode Privileged EXEC

5.6.2 show loginsession

This command displays current Telnet and serial port connections to the switch.

Format `show loginsession`

Mode Privileged EXEC

Term	Definition
ID	Login Session ID.
User Name	The name the user entered to log on to the system.
Connection From	IP address of the remote client machine or EIA-232 for the serial port connection.
Idle Time	Time this session has been idle.
Session Time	Total time this session has been connected.
Session Type	Shows the type of session, which can be telnet, serial, or SSH.



5.7 User Account Commands

This section describes the commands you use to add, manage, and delete system users. FASTPATH software has two default users: admin and guest. The admin user can view and configure system settings, and the guest user can view settings.



Note: You cannot delete the admin user. There is only one user allowed with read/write privileges. You can configure up to five read-only users on the system.

5.7.1 users name

This command adds a new user account, if space permits. The account `<username>` can be up to eight characters in length. You can use alphanumeric characters as well as the dash ('-') and underscore ('_'). You can define up to six user names.



Note: The `<username>` is not case sensitive when you add and delete users, and when the user logs in. However, when you use the `<username>` to set the user password, authentication, or encryption, you must enter the `<username>` in the same case you used when you added the user. To see the case of the `<username>`, enter the `show users` command.

Format `users name <username>`
Mode Global Config

5.7.1.1 no users name

This command removes a user account.

Format `no users name <username>`
Mode Global Config



Note: You cannot delete the "admin" user account.

5.7.2 users name <username> unlock

Use this command to unlock a locked user account. Only a user with read/write access can re-activate a locked user account.

Format `users name <username> unlock`
Mode Global Config

5.7.3 users passwd

Use this command to change a password. Passwords are a maximum of 64 alphanumeric characters. If a user is authorized for authentication or encryption is enabled, the password length must be at least eight alphanumeric characters. The password is case sensitive. When you change a password, a prompt asks for the old password. If



there is no password, press enter. You must enter the `<username>` in the same case you used when you added the user. To see the case of the `<username>`, enter the `show users` command.



Note: To specify a blank password in the configuration script, you must specify it as a space within quotes, " ". For more information about creating configuration scripts, see 5.11 "Configuration Scripting Commands" on page 5 - 37.

Default no password
Format `users passwd <username>`
Mode Global Config

5.7.3.1 no users passwd

This command sets the password of an existing user to blank. When you change a password, a prompt asks for the old password. If there is no password, press enter.

Format `no users passwd <username>`
Mode Global Config

5.7.4 users passwd <username> encrypted <password>

This command allows the administrator to transfer local user passwords between devices without having to know the passwords. The `<password>` parameter must be exactly 128 hexadecimal characters. The user represented by the `<username>` parameter must be a pre-existing local user.

Format `users passwd <username> encrypted <password>`
Mode Global Config

5.7.5 users snmpv3 accessmode

This command specifies the snmpv3 access privileges for the specified login user. The valid accessmode values are `readonly` or `readwrite`. The `<username>` is the login user name for which the specified access mode applies. The default is `readwrite` for the "admin" user and `readonly` for all other users. You must enter the `<username>` in the same case you used when you added the user. To see the case of the `<username>`, enter the `show users` command.

Defaults

- admin - readwrite
- other - readonly

Format `users snmpv3 accessmode <username> {readonly | readwrite}`
Mode Global Config

5.7.5.1 no users snmpv3 accessmode

This command sets the snmpv3 access privileges for the specified user as `readwrite` for the "admin" user and `readonly` for all other users. The `<username>` value is the user name for which the specified access mode will apply.

Format `no users snmpv3 accessmode <username>`
Mode Global Config



5.7.6 users snmpv3 authentication

This command specifies the authentication protocol to be used for the specified user. The valid authentication protocols are **none**, **md5** or **sha**. If you specify **md5** or **sha**, the login password is also used as the snmpv3 authentication password and therefore must be at least eight characters in length. The `<username>` is the user name associated with the authentication protocol. You must enter the `<username>` in the same case you used when you added the user. To see the case of the `<username>`, enter the **show users** command.

Default no authentication
Format `users snmpv3 authentication <username> {none | md5 | sha}`
Mode Global Config

5.7.6.1 no users snmpv3 authentication

This command sets the authentication protocol to be used for the specified user to **none**. The `<username>` is the user name for which the specified authentication protocol is used.

Format `no users snmpv3 authentication <username>`
Mode Global Config

5.7.7 users snmpv3 encryption

This command specifies the encryption protocol used for the specified user. The valid encryption protocols are **des** or **none**.

If you select **des**, you can specify the required key on the command line. The encryption key must be 8 to 64 characters long. If you select the **des** protocol but do not provide a key, the user is prompted for the key. When you use the **des** protocol, the login password is also used as the snmpv3 encryption password, so it must be a minimum of eight characters. If you select **none**, you do not need to provide a key.

The `<username>` value is the login user name associated with the specified encryption. You must enter the `<username>` in the same case you used when you added the user. To see the case of the `<username>`, enter the **show users** command.

Default no encryption
Format `users snmpv3 encryption <username> {none | des[key]}`
Mode Global Config

5.7.7.1 no users snmpv3 encryption

This command sets the encryption protocol to **none**. The `<username>` is the login user name for which the specified encryption protocol will be used.

Format `no users snmpv3 encryption <username>`
Mode Global Config



5.7.8 show users

This command displays the configured user names and their settings. This command is only available for users with Read/Write privileges. The SNMPv3 fields will only be displayed if SNMP is available on the system.

Format `show users`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
User Name	The name the user enters to login using the serial port, Telnet or Web.
Access Mode	Shows whether the user is able to change parameters on the switch (Read/Write) or is only able to view them (Read Only). As a factory default, the “admin” user has Read/Write access and the “guest” has Read Only access. There can only be one Read/Write user and up to five Read Only users.
SNMPv3 Access Mode	The SNMPv3 Access Mode. If the value is set to <code>ReadWrite</code> , the SNMPv3 user is able to set and retrieve parameters on the system. If the value is set to <code>ReadOnly</code> , the SNMPv3 user is only able to retrieve parameter information. The SNMPv3 access mode may be different than the CLI and Web access mode.
SNMPv3 Authentication	The authentication protocol to be used for the specified login user.
SNMPv3 Encryption	The encryption protocol to be used for the specified login user.

5.7.9 show users accounts

This command displays the local user status with respect to user account lockout and password aging.

Format `show users accounts`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
User Name	The local user account’s user name.
Access Mode	The user’s access level (read-only or read/write).
Lockout Status	Indicates whether the user account is locked out (true or false).
Password Expiration Date	The current password expiration date in date format.

5.7.10 passwd

This command allows the currently logged in user to change his or her password without having read/write privileges.

Format `password <cr>`
Mode User EXEC



5.7.11 passwords min-length

Use this command to enforce a minimum password length for local users. The value also applies to the enable password. The valid range is 8-64.

Default 8
Format `passwords min-length <8-64>`
Mode Global Config

5.7.11.1 no passwords min-length

Use this command to set the minimum password length to the default value.

Format `no passwords min-length`
Mode Global Config

5.7.12 passwords history

Use this command to set the number of previous passwords that shall be stored for each user account. When a local user changes his or her password, the user will not be able to reuse any password stored in password history. This ensures that users don't reuse their passwords often. The valid range is 0-10.

Default 0
Format `passwords history <0-10>`
Mode Global Config

5.7.12.1 no passwords history

Use this command to set the password history to the default value.

Format `no passwords history`
Mode Global Config

5.7.13 passwords aging

Use this command to implement aging on passwords for local users. When a user's password expires, the user will be prompted to change it before logging in again. The valid range is 1-365. The default is 0, or no aging.

Default 0
Format `passwords aging <1-365>`
Mode Global Config

5.7.13.1 no passwords aging

Use this command to set the password aging to the default value.

Format `no passwords aging`
Mode Global Config



5.7.14 passwords lock-out

Use this command to strengthen the security of the switch by locking user accounts that have failed login due to wrong passwords. When a lockout count is configured, a user that is logged in must enter the correct password within that count. Otherwise the user will be locked out from further switch access. Only a user with read/write access can re-activate a locked user account. Password lockout does not apply to logins from the serial console. The valid range is 1-5. The default is 0, or no lockout count enforced.

Default 0
Format `passwords lock-out <1-5>`
Mode Global Config

5.7.14.1 no passwords lock-out

Use this command to set the password lock-out count to the default value.

Format `no passwords lock-out`
Mode Global Config

5.7.15 show passwords configuration

Use this command to display the configured password management settings.

Format `show passwords configuration`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Minimum Password Length	Minimum number of characters required when changing passwords.
Password History	Number of passwords to store for reuse prevention.
Password Aging	Length in days that a password is valid.
Lockout Attempts	Number of failed password login attempts before lockout.

5.7.16 write memory

Use this command to save running configuration changes to NVRAM so that the changes you make will persist across a reboot. This command is the same as `copy system:running config nvram:startup-config`.

Format `write memory`
Mode Privileged EXEC

5.8 SNMP Commands

This section describes the commands you use to configure Simple Network Management Protocol (SNMP) on the switch. You can configure the switch to act as an SNMP agent so that it can communicate with SNMP managers on your network.



5.8.1 snmp-server

This command sets the name and the physical location of the switch, and the organization responsible for the network. The range for *<name>*, *<loc>* and *<con>* is from 1 to 31 alphanumeric characters.

Default	none
Format	snmp-server {sysname <i><name></i> location <i><loc></i> contact <i><con></i> }
Mode	Global Config

5.8.2 snmp-server community

This command adds (and names) a new SNMP community. A community *<name>* is a name associated with the switch and with a set of SNMP managers that manage it with a specified privileged level. The length of *<name>* can be up to 16 case-sensitive characters.



Note: Community names in the SNMP Community Table must be unique. When making multiple entries using the same community name, the first entry is kept and processed and all duplicate entries are ignored.

Default	<ul style="list-style-type: none"> • Public and private, which you can rename. • Default values for the remaining four community names are blank.
Format	snmp-server community <i><name></i>
Mode	Global Config

5.8.2.1 no snmp-server community

This command removes this community name from the table. The *<name>* is the community name to be deleted.

Format	no snmp-server community <i><name></i>
Mode	Global Config

5.8.3 snmp-server community ipaddr

This command sets a client IP address for an SNMP community. The address is the associated community SNMP packet sending address and is used along with the client IP mask value to denote a range of IP addresses from which SNMP clients may use that community to access the device. A value of 0.0.0.0 allows access from any IP address. Otherwise, this value is ANDed with the mask to determine the range of allowed client IP addresses. The name is the applicable community name.

Default	0.0.0.0
Format	snmp-server community ipaddr <i><ipaddr></i> <i><name></i>
Mode	Global Config

5.8.3.1 no snmp-server community ipaddr

This command sets a client IP address for an SNMP community to 0.0.0.0. The name is the applicable community name.

Format	no snmp-server community ipaddr <i><name></i>
Mode	Global Config



5.8.4 snmp-server community ipmask

This command sets a client IP mask for an SNMP community. The address is the associated community SNMP packet sending address and is used along with the client IP address value to denote a range of IP addresses from which SNMP clients may use that community to access the device. A value of 255.255.255.255 will allow access from only one station, and will use that machine's IP address for the client IP address. A value of 0.0.0.0 will allow access from any IP address. The name is the applicable community name.

Default 0.0.0.0
Format `snmp-server community ipmask <ipmask> <name>`
Mode Global Config

5.8.4.1 no snmp-server community ipmask

This command sets a client IP mask for an SNMP community to 0.0.0.0. The name is the applicable community name. The community name may be up to 16 alphanumeric characters.

Format `no snmp-server community ipmask <name>`
Mode Global Config

5.8.5 snmp-server community mode

This command activates an SNMP community. If a community is enabled, an SNMP manager associated with this community manages the switch according to its access right. If the community is disabled, no SNMP requests using this community are accepted. In this case the SNMP manager associated with this community cannot manage the switch until the Status is changed back to Enable.

Default

- private and public communities - enabled
- other four - disabled

Format `snmp-server community mode <name>`
Mode Global Config

5.8.5.1 no snmp-server community mode

This command deactivates an SNMP community. If the community is disabled, no SNMP requests using this community are accepted. In this case the SNMP manager associated with this community cannot manage the switch until the Status is changed back to Enable.

Format `no snmp-server community mode <name>`
Mode Global Config

5.8.6 snmp-server community ro

Format `snmp-server community ro <name>`
Mode Global Config

This command restricts access to switch information. The access mode is read-only (also called public).



snmp-server community rw

This command restricts access to switch information. The access mode is read/write (also called private).

Format `snmp-server community rw <name>`
Mode Global Config

5.8.7 snmp-server enable traps violation

This command enables the sending of new violation traps designating when a packet with a disallowed MAC address is received on a locked port.



Note: For other port security commands, see 2.7 “Protected Ports Commands” on page 2 - 33.

Default disabled
Format `snmp-server enable traps violation`
Mode Interface Config

5.8.7.1 no snmp-server enable traps violation

This command disables the sending of new violation traps.

Format `no snmp-server enable traps violation`
Mode Interface Config

5.8.8 snmp-server enable traps

This command enables the Authentication Flag.

Default enabled
Format `snmp-server enable traps`
Mode Global Config

5.8.8.1 no snmp-server enable traps

This command disables the Authentication Flag.

Format `no snmp-server enable traps`
Mode Global Config



5.8.9 snmp-server enable traps linkmode



Note: This command may not be available on all platforms.

This command enables Link Up/Down traps for the entire switch. When enabled, link traps are sent only if the Link Trap flag setting associated with the port is enabled. See “snmp trap link-status” on page 5 - 26.

Default enabled
Format `snmp-server enable traps linkmode`
Mode Global Config

5.8.9.1 no snmp-server enable traps linkmode

This command disables Link Up/Down traps for the entire switch.

Format `no snmp-server enable traps linkmode`
Mode Global Config

5.8.10 snmp-server enable traps multiusers

This command enables Multiple User traps. When the traps are enabled, a Multiple User Trap is sent when a user logs in to the terminal interface (EIA 232 or Telnet) and there is an existing terminal interface session.

Default enabled
Format `snmp-server enable traps multiusers`
Mode Global Config

5.8.10.1 no snmp-server enable traps multiusers

This command disables Multiple User traps.

Format `no snmp-server enable traps multiusers`
Mode Global Config

5.8.11 snmp-server enable traps stpmode

This command enables the sending of new root traps and topology change notification traps.

Default enabled
Format `snmp-server enable traps stpmode`
Mode Global Config

5.8.11.1 no snmp-server enable traps stpmode

This command disables the sending of new root traps and topology change notification traps.

Format `no snmp-server enable traps stpmode`
Mode Global Config



5.8.12 snmptrap

This command adds an SNMP trap receiver. The maximum length of *<name>* is 16 case-sensitive alphanumeric characters. The *<snmpversion>* is the version of SNMP. The version parameter options are snmpv1 or snmpv2. The SNMP trap address can be set using both an IPv4 address format as well as an IPv6 global address format.

Example: The following shows an example of the CLI command.

```
(admin #) snmptrap mytrap ip6addr 3099::2
```



Note: The *<name>* parameter does not need to be unique, however; the *<name>* and *<ipaddr>* pair must be unique. Multiple entries can exist with the same *<name>*, as long as they are associated with a different *<ipaddr>*. The reverse scenario is also acceptable. The *<name>* is the community name used when sending the trap to the receiver, but the *<name>* is not directly associated with the SNMP Community Table, See “snmp-server community” on page39.”

Default	snmpv2
Format	snmptrap <i><name></i> <i><ipaddr></i> [<i>snmpversion</i> <i><snmpversion></i>]
Mode	Global Config

5.8.12.1 no snmptrap

This command deletes trap receivers for a community.

Format	no snmptrap <i><name></i> <i><ipaddr></i>
Mode	Global Config

5.8.13 snmptrap snmpversion

This command modifies the SNMP version of a trap. The maximum length of *<name>* is 16 case-sensitive alphanumeric characters. The *<snmpversion>* parameter options are snmpv1 or snmpv2.



Note: This command does not support a “no” form.

Default	snmpv2
Format	snmptrap snmpversion <i><name></i> <i><ipaddr></i> <i><snmpversion></i>
Mode	Global Config

5.8.14 snmptrap ipaddr

This command assigns an IP address to a specified community name. The maximum length of name is 16 case-sensitive alphanumeric characters.



Note: IP addresses in the SNMP trap receiver table must be unique. If you make multiple entries using the same IP address, the first entry is retained and processed. All duplicate entries are ignored.

Format	snmptrap ipaddr <i><name></i> <i><ipaddrold></i> <i><ipaddrnew></i>
Mode	Global Config



5.8.15 snmptrap mode

This command activates or deactivates an SNMP trap. Enabled trap receivers are active (able to receive traps). Disabled trap receivers are inactive (not able to receive traps).

Format `snmptrap mode <name> <ipaddr>`

Mode Global Config

5.8.15.1 no snmptrap mode

This command deactivates an SNMP trap. Disabled trap receivers are unable to receive traps.

Format `no snmptrap mode <name> <ipaddr>`

Mode Global Config

5.8.16 snmp trap link-status

This command enables link status traps by interface.



Note: This command is valid only when the Link Up/Down Flag is enabled. See “snmp-server enable traps linkmode” on page 5 - 24.

Format `snmp trap link-status`

Mode Interface Config

5.8.16.1 no snmp trap link-status

This command disables link status traps by interface.



Note: This command is valid only when the Link Up/Down Flag is enabled.

Format `no snmp trap link-status`

Mode Interface Config

5.8.17 snmp trap link-status all

This command enables link status traps for all interfaces.



Note: This command is valid only when the Link Up/Down Flag is enabled. See “snmp-server enable traps linkmode” on page 5 - 24.

Format `snmp trap link-status all`

Mode Global Config



5.8.17.1 no snmp trap link-status all

This command disables link status traps for all interfaces.



Note: This command is valid only when the Link Up/Down Flag is enabled. See “snmp-server enable traps linkmode” on page 5 - 24.

Format `no snmp trap link-status all`

Mode Global Config

5.8.18 show snmpcommunity

This command displays SNMP community information. Six communities are supported. You can add, change, or delete communities. The switch does not have to be reset for changes to take effect.

The SNMP agent of the switch complies with SNMP Versions 1, 2 or 3. For more information about the SNMP specification, see the SNMP RFCs. The SNMP agent sends traps through TCP/IP to an external SNMP manager based on the SNMP configuration (the trap receiver and other SNMP community parameters).

Format `show snmpcommunity`

Mode Privileged EXEC

Term	Definition
SNMP Community Name	The community string to which this entry grants access. A valid entry is a case-sensitive alphanumeric string of up to 16 characters. Each row of this table must contain a unique community name.
Client IP Address	An IP address (or portion thereof) from which this device will accept SNMP packets with the associated community. The requesting entity's IP address is ANDed with the Subnet Mask before being compared to the IP address. Note: If the Subnet Mask is set to 0.0.0.0, an IP address of 0.0.0.0 matches all IP addresses. The default value is 0.0.0.0.
Client IP Mask	A mask to be ANDed with the requesting entity's IP address before comparison with IP address. If the result matches with IP address then the address is an authenticated IP address. For example, if the IP address = 9.47.128.0 and the corresponding Subnet Mask = 255.255.255.0 a range of incoming IP addresses would match, i.e. the incoming IP address could equal 9.47.128.0 - 9.47.128.255. The default value is 0.0.0.0.
Access Mode	The access level for this community string.
Status	The status of this community access entry.

5.8.19 show snmptrap

This command displays SNMP trap receivers. Trap messages are sent across a network to an SNMP Network Manager. These messages alert the manager to events occurring within the switch or on the network. Six trap receivers are simultaneously supported.

Format `show snmptrap`

Mode Privileged EXEC

Term	Definition
SNMP Trap Name	The community string of the SNMP trap packet sent to the trap manager. The string is case sensitive and can be up to 16 alphanumeric characters.



<i>Term</i>	<i>Definition</i>
IP Address	The IPv4 address to receive SNMP traps from this device.
IPv6 Address	The IPv6 address to receive SNMP traps from this device.
SNMP Version	SNMPv2
Mode	The receiver's status (enabled or disabled).

Example: The following shows an example of the CLI command.

```
(admin) #show snmptrap
```

```
Community Name   IpAddress       IPv6 Address    Snmp Version    Mode
Mytrap           0.0.0.0         2001::1        SNMPv2           Enable show trapflags
```

5.8.20 show trapflags

This command displays trap conditions. The command's display shows all the enabled OSPFv2 and OSPFv3 trapflags. Configure which traps the switch should generate by enabling or disabling the trap condition. If a trap condition is enabled and the condition is detected, the SNMP agent on the switch sends the trap to all enabled trap receivers. You do not have to reset the switch to implement the changes. Cold and warm start traps are always generated and cannot be disabled.

Format **show trapflags**

Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Authentication Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether authentication failure traps will be sent.
Link Up/Down Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether link status traps will be sent.
Multiple Users Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether a trap will be sent when the same user ID is logged into the switch more than once at the same time (either through Telnet or the serial port).
Spanning Tree Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether spanning tree traps are sent.
Broadcast Storm Flag	Can be enabled or disabled. The factory default is enabled. Indicates whether broadcast storm traps are sent.
ACL Traps	May be enabled or disabled. The factory default is disabled. Indicates whether ACL traps are sent.
BGP4 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether BGP4 traps are sent. (This field appears only on systems with the BGPv4 software package installed.)
DVMRP Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether DVMRP traps are sent.
OSPFv2 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether OSPF traps are sent. If any of the OSPF trap flags are not enabled, then the command displays <i>disabled</i> . Otherwise, the command shows all the enabled OSPF traps' information.
OSPFv3 Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether OSPF traps are sent. If any of the OSPFv3 trap flags are not enabled, then the command displays <i>disabled</i> . Otherwise, the command shows all the enabled OSPFv3 traps' information.
PIM Traps	Can be enabled or disabled. The factory default is disabled. Indicates whether PIM traps are sent.



5.8.21 snmptrap

This command adds an SNMP receiver. The command is a standard FASTPATH command, extended by the **notification** argument. The standard command is described in “FASTPATH CLI documentation”. The notification argument specifies the type (trap or inform request) for generating traps. The default is ‘trap’. The ‘inform request’ is only possible for version 2c. This is implicitly set by specifying ‘inform request’.

Format **snmptrap** <name> **ipaddr** <ipaddr>
snmptrap <name> **ipaddr** <ipaddr> **snmpversion** {snmpv1 | snmpv2}
snmptrap <name> **ipaddr** <ipaddr> **notification** {trap | inform}

Mode Global Config

5.8.22 snmptrap notification

This command specifies the notification type (trap or inform request) for generating traps. The default is ‘trap’. The ‘inform request’ is only possible for version 2c. The version is not checked, but setting ‘inform request’ for version 1 means that the trap is sent as ‘trap’ anyway.

Format **snmptrap notification** <name> <ipaddr> {trap | inform}

Mode Global Config

5.9 RADIUS Commands

This section describes the commands you use to configure the switch to use a Remote Authentication Dial-In User Service (RADIUS) server on your network for authentication and accounting.

5.9.1 authorization network radius

Use this command to enable the switch to accept VLAN assignment by the radius server.

Default disable

Format **authorization network radius**

Mode Global Config

5.9.1.1 no authorization network radius

Use this command to disable the switch to accept VLAN assignment by the radius server.

Format **no authorization network radius**

Mode Global Config

5.9.2 radius accounting mode

This command is used to enable the RADIUS accounting function.

Default disabled

Format **radius accounting mode**

Mode Global Config



5.9.2.1 no radius accounting mode

This command is used to set the RADIUS accounting function to the default value - i.e. the RADIUS accounting function is disabled.

Format `no radius accounting mode`
Mode Global Config

5.9.3 radius server attribute 4

Use this command to set the NAS-IP address for the radius server.

Default Interface IP address that connects the switch to the radius server.
Format `radius server attribute 4 [ipaddr]`
Mode Global Config

<i>Term</i>	<i>Definition</i>
ipaddr	A valid IP address.

5.9.3.1 no radius server attribute 4

Use this command to reset the NAS-IP address for the radius server.

Format `no radius server attribute 4`
Mode Global Config

5.9.4 radius server host

This command is used to configure the RADIUS authentication and accounting server. If you use the `<auth>` parameter, the command configures the IP address or hostname to use to connect to a RADIUS authentication server. You can configure up to 3 servers per RADIUS client. If the maximum number of configured servers is reached, the command fails until you remove one of the servers by issuing the “no” form of the command. If you use the optional `<port>` parameter, the command configures the UDP port number to use when connecting to the configured RADIUS server. The `<port>` number range is 1 - 65535, with 1812 being the default value.



Note: To re-configure a RADIUS authentication server to use the default UDP `<port>`, set the `<port>` parameter to 1812.

If you use the `<acct>` token, the command configures the IP address or hostname to use for the RADIUS accounting server. You can only configure one accounting server. If an accounting server is currently configured, use the “no” form of the command to remove it from the configuration. The IP address or hostname you specify must match that of a previously configured accounting server. If you use the optional `<port>` parameter, the command configures the UDP port to use when connecting to the RADIUS accounting server. If a `<port>` is already configured for the accounting server, the new `<port>` replaces the previously configured `<port>`. The `<port>` must be a value in the range 1 - 65535, with 1813 being the default.



Note: To re-configure a RADIUS accounting server to use the default UDP `<port>`, set the `<port>` parameter to 1813.



Format `radius server host {auth | acct} <ipaddr|hostname> [<port>]`
Mode Global Config

5.9.4.1 no radius server host

This command is used to remove the configured RADIUS authentication server or the RADIUS accounting server. If the 'auth' token is used, the previously configured RADIUS authentication server is removed from the configuration. Similarly, if the 'acct' token is used, the previously configured RADIUS accounting server is removed from the configuration. The `<ipaddr|hostname>` parameter must match the IP address or hostname of the previously configured RADIUS authentication / accounting server.

Format `no radius server host {auth | acct} <ipaddress|hostname>`
Mode Global Config

5.9.5 radius server key

This command is used to configure the shared secret between the RADIUS client and the RADIUS accounting / authentication server. Depending on whether the 'auth' or 'acct' token is used, the shared secret is configured for the RADIUS authentication or RADIUS accounting server. The IP address or hostname provided must match a previously configured server. When this command is executed, the secret is prompted.

Text-based configuration supports Radius server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the show running config command's display, these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.



Note: The secret must be an alphanumeric value not exceeding 16 characters.

Format `radius server key {auth | acct} <ipaddr|hostname> [encrypted <encrypted-password>]`
Mode Global Config

Example: The following shows an example of the CLI command.

```
radius server key acct 10.240.4.10 encrypted <encrypt-string>
```

5.9.6 radius server msgauth

This command enables the message authenticator attribute for a specified server.

Format `radius server msgauth <ipaddr|hostname>`
Mode Global Config

5.9.6.1 no radius server msgauth

This command disables the message authenticator attribute for a specified server.

Format `no radius server msgauth <ipaddr|hostname>`
Mode Global Config



5.9.7 radius server primary

This command is used to configure the primary RADIUS authentication server for this RADIUS client. The primary server handles RADIUS requests. The remaining configured servers are only used if the primary server cannot be reached. You can configure up to three servers on each client. Only one of these servers can be configured as the primary. If a primary server is already configured prior to this command being executed, the server specified by the IP address or hostname specified used in this command will become the new primary server. The IP address or hostname must match that of a previously configured RADIUS authentication server.

Format `radius server primary <ipaddr|hostname>`

Mode Global Config

5.9.8 radius server retransmit

This command sets the maximum number of times a request packet is re-transmitted when no response is received from the RADIUS server. The retries value is an integer in the range of 1 to 15.

Default 4

Format `radius server retransmit <retries>`

Mode Global Config

5.9.8.1 no radius server retransmit

This command sets the maximum number of times a request packet is re-transmitted, to the default value.

Format `no radius server retransmit`

Mode Global Config

5.9.9 radius server timeout

This command sets the timeout value (in seconds) after which a request must be retransmitted to the RADIUS server if no response is received. The timeout value is an integer in the range of 1 to 30.

Default 5

Format `radius server timeout <seconds>`

Mode Global Config

5.9.9.1 no radius server timeout

This command sets the timeout value to the default value.

Format `no radius server timeout`

Mode Global Config



5.9.10 show radius

This command is used to display the various RADIUS configuration items for the switch as well as the configured RADIUS servers. If the optional token 'servers' is not included, the following RADIUS configuration items are displayed.

Format `show radius [servers]`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Primary Server IP Address or Hostname	The configured server currently in use for authentication.
Number of configured servers	The number of configured authentication servers, including DNS configured server.
Max number of retransmits	The configured value of the maximum number of times a request packet is retransmitted.
Timeout Duration	The configured timeout value, in seconds, for request re-transmissions.
Accounting Mode	Yes or No.

If you use the `[servers]` keyword, the following information displays:

<i>Term</i>	<i>Definition</i>
IP Address or Hostname	IP address or hostname of the configured RADIUS server.
Port	The port in use by this server.
Type	Primary or secondary.
Secret Configured	Yes / No.
Message Authenticator	The message authenticator attribute for the selected server, which can be enables or disables.

5.9.11 show radius accounting

This command is used to display the configured RADIUS accounting mode, accounting server and the statistics for the configured accounting server.

Format `show radius accounting [statistics <ipaddr|hostname>]`
Mode Privileged EXEC

If you do not specify any parameters, then only the accounting mode and the RADIUS accounting server details are displayed.

<i>Term</i>	<i>Definition</i>
Mode	Enabled or disabled.
IP Address / Hostname	The configured IP address or hostname of the RADIUS accounting server.
Port	The port in use by the RADIUS accounting server.
Secret Configured	Yes or No.

If you use the optional `statistics <ipaddr|hostname>` parameter, the statistics for the configured RADIUS accounting server are displayed. The IP address parameter must match that of a previously configured RADIUS accounting server. The following information regarding the statistics of the RADIUS accounting server is displayed.

Term	Definition
Accounting Server IP Address / Hostname	IP address or hostname of the configured RADIUS accounting server.
Round Trip Time	The time interval, in hundredths of a second, between the most recent Accounting-Response and the Accounting-Request that matched it from the RADIUS accounting server.
Requests	The number of RADIUS Accounting-Request packets sent to this accounting server. This number does not include retransmissions.
Retransmission	The number of RADIUS Accounting-Request packets retransmitted to this RADIUS accounting server.
Responses	The number of RADIUS packets received on the accounting port from this server.
Malformed Responses	The number of malformed RADIUS Accounting-Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators and unknown types are not included as malformed accounting responses.
Bad Authenticators	The number of RADIUS Accounting-Response packets containing invalid authenticators received from this accounting server.
Pending Requests	The number of RADIUS Accounting-Request packets sent to this server that have not yet timed out or received a response.
Timeouts	The number of accounting timeouts to this server.
Unknown Types	The number of RADIUS packets of unknown types, which were received from this server on the accounting port.
Packets Dropped	The number of RADIUS packets received from this server on the accounting port and dropped for some other reason.

5.9.12 show radius statistics

This command is used to display the statistics for RADIUS or configured server. To show the configured RADIUS server statistic, the IP address or hostname specified must match that of a previously configured RADIUS server. On execution, the following fields are displayed.

Format `show radius statistics [<ipaddr|hostname>]`
Mode Privileged EXEC

If you do not specify the IP address, then only Invalid Server Address field is displayed. Otherwise other listed fields are displayed.

Term	Definition
Invalid Server Addresses or Hostname	The number of RADIUS Access-Response packets received from unknown addresses.
Server IP Address / Hostname	IP address or hostname of the Server.
Round Trip Time	The time interval, in hundredths of a second, between the most recent Access-Reply, Access-Challenge and the Access-Request that matched it from the RADIUS authentication server.
Access Requests	The number of RADIUS Access-Request packets sent to this server. This number does not include retransmissions.
Access Retransmission	The number of RADIUS Access-Request packets retransmitted to this RADIUS authentication server.



<i>Term</i>	<i>Definition</i>
Access Accepts	The number of RADIUS Access-Accept packets, including both valid and invalid packets, which were received from this server.
Access Rejects	The number of RADIUS Access-Reject packets, including both valid and invalid packets, which were received from this server.
Access Challenges	The number of RADIUS Access-Challenge packets, including both valid and invalid packets, which were received from this server.
Malformed Access Responses	The number of malformed RADIUS Access-Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators or signature attributes or unknown types are not included as malformed access responses.
Bad Authenticators	The number of RADIUS Access-Response packets containing invalid authenticators or signature attributes received from this server.
Pending Requests	The number of RADIUS Access-Request packets destined for this server that have not yet timed out or received a response.
Timeouts	The number of authentication timeouts to this server.
Unknown Types	The number of RADIUS packets of unknown types, which were received from this server on the authentication port.
Packets Dropped	The number of RADIUS packets received from this server on the authentication port and dropped for some other reason.

5.10 TACACS+ Commands

TACACS+ provides access control for networked devices via one or more centralized servers. Similar to RADIUS, this protocol simplifies authentication by making use of a single database that can be shared by many clients on a large network. TACACS+ is based on the TACACS protocol (described in RFC1492) but additionally provides for separate authentication, authorization, and accounting services. The original protocol was UDP based with messages passed in clear text over the network; TACACS+ uses TCP to ensure reliable delivery and a shared key configured on the client and daemon server to encrypt all messages.

5.10.1 tacacs-server host

Use the `tacacs-server host` command in Global Configuration mode to configure a TACACS+ server. This command enters into the TACACS+ configuration mode. The `<ip-address|hostname>` parameter is the IP address or hostname of the TACACS+ server. To specify multiple hosts, multiple `tacacs-server host` commands can be used.

Format `tacacs-server host <ip-address|hostname>`
Mode Global Config

5.10.1.1 no tacacs-server host

Use the `no tacacs-server host` command to delete the specified hostname or IP address. The `<ip-address|hostname>` parameter is the IP address of the TACACS+ server.

Format `no tacacs-server host <ip-address|hostname>`
Mode Global Config

5.10.2 tacacs-server key

Use the `tacacs-server key` command to set the authentication and encryption key for all TACACS+ communications between the switch and the TACACS+ daemon. The `<key-string>` parameter has a range of 0



- 128 characters and specifies the authentication and encryption key for all TACACS communications between the switch and the TACACS+ server. This key must match the key used on the TACACS+ daemon.

Text-based configuration supports TACACS server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the show running config command's display, these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

Format `tacacs-server key [<key-string> | encrypted <key-string>]`
Mode Global Config

5.10.2.1 no tacacs-server key

Use the `no tacacs-server key` command to disable the authentication and encryption key for all TACACS+ communications between the switch and the TACACS+ daemon. The `<key-string>` parameter has a range of 0 - 128 characters. This key must match the key used on the TACACS+ daemon.

Format `no tacacs-server key <key-string>`
Mode Global Config

5.10.3 tacacs-server timeout

Use the `tacacs-server timeout` command to set the timeout value for communication with the TACACS+ servers. The `<timeout>` parameter has a range of 1-30 and is the timeout value in seconds.

Default 5
Format `tacacs-server timeout <timeout>`
Mode Global Config

5.10.3.1 no tacacs-server timeout

Use the `no tacacs-server timeout` command to restore the default timeout value for all TACACS servers.

Format `no tacacs-server timeout`
Mode Global Config

5.10.4 key

Use the `key` command in TACACS Configuration mode to specify the authentication and encryption key for all TACACS communications between the device and the TACACS server. This key must match the key used on the TACACS daemon. The `<key-string>` parameter specifies the key name. For an empty string use "". (Range: 0 - 128 characters).

Text-based configuration supports TACACS server's secrets in encrypted and non-encrypted format. When you save the configuration, these secret keys are stored in encrypted format only. If you want to enter the key in encrypted format, enter the key along with the encrypted keyword. In the show running config command's display, these secret keys are displayed in encrypted format. You cannot show these keys in plain text format.

Format `key [<key-string> | encrypted <key-string>]`
Mode TACACS Config



5.10.5 port

Use the `port` command in TACACS Configuration mode to specify a server port number. The server `<port-number>` range is 0 - 65535.

Default 49
Format `port <port-number>`
Mode TACACS Config

5.10.6 priority

Use the `priority` command in TACACS Configuration mode to specify the order in which servers are used, where 0 (zero) is the highest priority. The `<priority>` parameter specifies the priority for servers. The highest priority is 0 (zero), and the range is 0 - 65535.

Default 0
Format `priority <priority>`
Mode TACACS Config

5.10.7 timeout

Use the `timeout` command in TACACS Configuration mode to specify the timeout value in seconds. If no timeout value is specified, the global value is used. The `<timeout>` parameter has a range of 1-30 and is the timeout value in seconds.

Format `timeout <timeout>`
Mode TACACS Config

5.10.8 show tacacs

Use the `show tacacs` command to display the configuration and statistics of a TACACS+ server.

Format `show tacacs [<ip-address|hostname>]`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
IP address or Hostname	The IP address or hostname of the configured TACACS+ server.
Port	The configured TACACS+ server port number.
TimeOut	The timeout in seconds for establishing a TCP connection.
Priority	The preference order in which TACACS+ servers are contacted. If a server connection fails, the next highest priority server is contacted.

5.11 Configuration Scripting Commands

Configuration Scripting allows you to generate text-formatted script files representing the current configuration of a system. You can upload these configuration script files to a PC or UNIX system and edit them. Then, you can download the edited files to the system and apply the new configuration. You can apply configuration scripts to one or more switches with no or minor modifications.



Use the `show running-config` command (see 4.4.8 “show running-config” on page 4 - 15) to capture the running configuration into a script. Use the `copy` command (see 4.6.16 “copy” on page 4 - 29) to transfer the configuration script to or from the switch.

You should use scripts on systems with default configuration; however, you are not prevented from applying scripts on systems with non-default configurations.

Scripts must conform to the following rules:

- The file extension must be “.scr”.
- A maximum of ten scripts are allowed on the switch.
- The combined size of all script files on the switch shall not exceed 2048 KB.
- The maximum number of configuration file command lines is 2000.

You can type single-line annotations at the command prompt to use when you write test or configuration scripts to improve script readability. The exclamation point (!) character flags the beginning of a comment. The comment flag character can begin a word anywhere on the command line, and all input following this character is ignored. Any command line that begins with the “!” character is recognized as a comment line and ignored by the parser.

The following lines show an example of a script:

```
! Script file for displaying management access

show telnet !Displays the information about remote connections

! Display information about direct connections

show serial

! End of the script file!
```



Note: To specify a blank password for a user in the configuration script, you must specify it as a space within quotes. For example, to change the password for user `jane` from a blank password to `hello`, the script entry is as follows:

```
users passwd jane
" "
hello
hello
```

5.11.1 script apply

This command applies the commands in the script to the switch. The `<scriptname>` parameter is the name of the script to apply.

Format `script apply <scriptname>`

Mode Privileged EXEC

5.11.2 script delete

This command deletes a specified script where the `<scriptname>` parameter is the name of the script to delete. The `<all>` option deletes all the scripts present on the switch.

Format `script delete {<scriptname> | all}`

Mode Privileged EXEC



5.11.3 script list

This command lists all scripts present on the switch as well as the remaining available space.

Format `script list`
Mode Global Config

<i>Term</i>	<i>Definition</i>
Configuration Script	Name of the script.
Size	Privileged EXEC

5.11.4 script show

This command displays the contents of a script file, which is named `<scriptname>`.

Format `script show <scriptname>`
Mode Privileged EXEC

<i>Term</i>	<i>Definition</i>
Output Format	<code>line <number>: <line contents></code>

5.11.5 script validate

This command validates a script file by parsing each line in the script file where `<scriptname>` is the name of the script to validate. The validate option is intended to be used as a tool for script development. Validation identifies potential problems. It might not identify all problems with a given script on any given device.

Format `script validate <scriptname>`
Mode Privileged EXEC

5.12 Pre-login Banner and System Prompt Commands

This section describes the commands you use to configure the pre-login banner and the system prompt. The pre-login banner is the text that displays before you login at the `user:` prompt.

5.12.1 copy (pre-login banner)

The `copy` command includes the option to upload or download the CLI Banner to or from the switch. You can specify local URLs by using TFTP, Xmodem, Ymodem, or Zmodem.

Default none
Format `copy <tftp://<ipaddr>/<filepath>/<filename>> nvram:clibanner`
 `copy nvram:clibanner <tftp://<ipaddr>/<filepath>/<filename>>`
Mode Privileged EXEC



5.12.2 set prompt

This command changes the name of the prompt. The length of name may be up to 64 alphanumeric characters.

Format `set prompt <prompt_string>`

Mode Privileged EXEC

5.13 Diagnostics Commands

5.13.1 diagnostics

This command will start diagnostics. If “interactive” is specified the switch will be restarted and the diagnostics loaded. The user gets a menu to select interactively a scenario. A serial console is needed. Otherwise, if a scenario is specified, this scenario is executed directly. You may start this scenario once or repeated for a time (timedloop), for a number of repetitions (loop) or forever. The results are stored and can be displayed by using “show logging diag-report”. Possible scenarios are “full” (all test purposes except the destructive ones), “quickturn” (scenarios running fast) or “write” (destructive scenarios).

Format `diagnostics interactive`

`diagnostics <scenario> {{timedloop | loop} <1-9999999> | forever}`

Mode Privileged EXEC

5.13.2 show logging diag-report

This command displays the results of the last diagnostic run. The diagnostic results file is created by a diagnostic run..

Format `show logging diag-report`

Mode Privileged EXEC



Appendix



Getting Help



A. Getting Help

If at any time you encounter difficulties with your application or with any of our products, or if you simply need guidance on system setups and capabilities, contact our Technical Support at:

North America

Tel.: (450) 437-5682

Fax: (450) 437-8053

EMEA

Tel.: +49 (0) 8341 803 xxx

Fax: +49 (0) 8341 803 xxx

If you have any questions about Kontron, our products, or services, visit our Web site at:
www.kontron.com

You also can contact us by E-mail at:

North America: support@ca.kontron.com

EMEA: support@kontron-modular.com

Or at the following address:

North America

Kontron Canada, Inc.
616 Curé Boivin
Boisbriand, Québec
J7G 2A7 Canada

EMEA

Kontron Modular Computers GmbH
Sudetenstrasse 7
87600 Kaufbeuren
Germany



RETURNING DEFECTIVE MERCHANDISE

Before returning any merchandise please do one of the following if your product malfunctions:

- **Call**

1. Call our Technical Support department in North America at (450) 437-5682 and in EMEA at +49 (0) 8341 803 xxx. Make sure you have the following on hand: our Invoice #, your Purchase Order #, and the Serial Number of the defective unit.
2. Provide the serial number found on the back of the unit and explain the nature of your problem to a service technician.
3. The technician will instruct you on the return procedure if the problem cannot be solved over the telephone.
4. Make sure you receive an RMA # from our Technical Support before returning any merchandise.

- **Fax**

1. Make a copy of the request form on the following page.
2. Fill it out.
3. Fax it to us at: North America (450) 437-0304, EMEA +49 (0) 8341 803 xxx

- **E-mail**

1. Send us an e-mail at: RMA@ca.kontron.com in North America and at ____@____.com in EMEA. In the e-mail, you must include your name, your company name, your address, your city, your postal/zip code, your phone number, and your e-mail. You must also include the serial number of the defective product and a description of the problem.



WHEN RETURNING A UNIT

- In the box, you have to include the name and telephone number of a person whom we can contact for further explanations if necessary when returning goods. **Where applicable, always include all duty papers and invoice(s) associated with the item(s) in question.**
- Ensure that the unit is properly packed. Pack it in a rigid cardboard box.
- Clearly write or mark the RMA number on the outside of the package you are returning.
- Ship prepaid. We take care of insuring incoming units.

North America

Kontron Canada, Inc.
616 Curé Boivin
Boisbriand, Québec
J7G 2A7 Canada

EMEA

Kontron Modular Computers GmbH
Sudetenstrasse 7
87600 Kaufbeuren
Germany



**Return to
Manufacturer
Authorization Request**

Contact Name:	_____		
Company Name:	_____		
Street Address:	_____		
City:	_____	Province/State:	_____
Country:	_____	Postal/Zip Code:	_____
Phone Number:	_____	Extension:	_____
Fax Number:	_____	E-Mail:	_____

Serial Number	Failure or Problem Description	P.O. # (if not under warranty)

Fax this form to Kontron's Technical Support department in North America at (450) 437-0304 and in EMEA at +49 (0)8341 803 XXX





Appendix



FASTPATH log messages



B. FASTPATH Log Messages

This chapter lists common log messages that are provided by FASTPATH, along with information regarding the cause of each message. There is no specific action that can be taken per message. When there is a problem being diagnosed, a set of these messages in the event log, along with an understanding of the system configuration and details of the problem) will assist Broadcom in determining the root cause of such a problem.



Note: This chapter is not a complete list of all syslog messages.

The Log Messages chapter includes the following sections:

- “Core” on page B - 2
- “Utilities” on page B - 3
- “Management” on page B - 5
- “Switching” on page B - 7
- “QoS” on page B - 12
- “Technologies” on page B - 13
- “O/S Support” on page B - 14

B.1 Core

Table 1: BSP Log Messages

Component	Message	Cause
BSP	Event(0xaaaaaaaa)	Switch has restarted.
BSP	Starting code...	BSP initialization complete, starting FastPath application.

Table 2: NIM Log Messages

Component	Message	Cause
NIM	NIM: L7_ATTACH out of order for intfNum(x) unit x slot x port x	Interface creation out of order
NIM	NIM: Failed to find interface at unit x slot x port x for event(x)	There is no mapping between the USP and Interface number
NIM	NIM: L7_DETACH out of order for intfNum(x) unit x slot x port x	Interface creation out of order
NIM	NIM: L7_DELETE out of order for intfNum(x) unit x slot x port x	Interface creation out of order
NIM	NIM: event(x),intf(x),component(x), in wrong phase	An event was issued to NIM during the wrong configuration phase (probably Phase 1, 2, or WMU)
NIM	NIM: Failed to notify users of interface change	Event was not propagated to the system
NIM	NIM: failed to send message to NIM message Queue.	NIM message queue full or non-existent
NIM	NIM: Failed to notify the components of L7_CREATE event	Interface not created

Table 2: NIM Log Messages (Continued)

Component	Message	Cause
NIM	NIM: Attempted event (x), on USP x.x.x before phase 3	A component issued an interface event during the wrong initialization phase
NIM	NIM: incorrect phase for operation	An API call was made during the wrong initialization phase
NIM	NIM: Component(x) failed on event(x) for intfNum(x)	A component responded with a fail indication for an interface event
NIM	NIM: Timeout event(x), intfNum(x) remainingMask = "xxxx"	A component did not respond before the NIM timeout occurred

Table 3: System Log Messages

Component	Message	Cause
SYSTEM	Configuration file fastpath.cfg size is 0 (zero) bytes	The configuration file could not be read. This message may occur on a system for which no configuration has ever been saved or for which configuration has been erased.
SYSTEM	could not separate SYSAPI_CONFIG_FILENAME	The configuration file could not be read. This message may occur on a system for which no configuration has ever been saved or for which configuration has been erased.
SYSTEM	Building defaults for file <file name> version <version num>	Configuration did not exist or could not be read for the specified feature or file. Default configuration values will be used. The file name and version are indicated.
SYSTEM	File <filename>: same version (version num) but the sizes (<version size>-><expected version size) differ	The configuration file which was loaded was of a different size than expected for the version number. This message indicates the configuration file needed to be migrated to the version number appropriate for the code image. This message may appear after upgrading the code image to a more current release.
SYSTEM	Migrating config file <filename> from version <version num> to <version num>	The configuration file identified was migrated from a previous version number. Both the old and new version number are specified. This message may appear after upgrading the code image to a more current release.
SYSTEM	Building Defaults	Configuration did not exist or could not be read for the specified feature. Default configuration values will be used.
SYSTEM	sysapiCfgFileGet failed size = <expected size of file> version = <expected version>	Configuration did not exist or could not be read for the specified feature. This message is usually followed by a message indicating that default configuration values will be used.

B.2 Utilities

Table 4: Trap Mgr Log Message

Component	Message	Cause
Trap Mgr	Link Up/Down: unit/slot/port	An interface changed link state.



Table 5: DHCP Filtering Log Messages

Component	Message	Cause
DHCP Filtering	Unable to create r/w lock for DHCP Filtering	Unable to create semaphore used for dhcp filtering configuration structure .
DHCP Filtering	Failed to register with nv Store.	Unable to register save and restore functions for configuration save
DHCP Filtering	Failed to register with NIM	Unable to register with NIM for interface callback functions
DHCP Filtering	Error on call to sysapiCfgFileWrite file	Error on trying to save configuration .

Table 6: NVStore Log Messages

Component	Message	Cause
NVStore	Building defaults for file XXX	A component's configuration file does not exist or the file's checksum is incorrect so the component's default configuration file is built.
NVStore	Error on call to osapiFsWrite routine on file XXX	Either the file cannot be opened or the OS's file I/O returned an error trying to write to the file.
NVStore	File XXX corrupted from file system. Checksum mismatch.	The calculated checksum of a component's configuration file in the file system did not match the checksum of the file in memory.
NVStore	Migrating config file XXX from version Y to Z	A configuration file version mismatch was detected so a configuration file migration has started.

Table 7: RADIUS Log Messages

Component	Message	Cause
RADIUS	RADIUS: Invalid data length - xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Failed to send the request	A problem communicating with the RADIUS server.
RADIUS	RADIUS: Failed to send all of the request	A problem communicating with the RADIUS server during transmit.
RADIUS	RADIUS: Could not get the Task Sync semaphore!	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Buffer is too small for response processing	RADIUS Client attempted to build a response larger than resources allow.
RADIUS	RADIUS: Could not allocate accounting requestInfo	Resource issue with RADIUS Client service.
RADIUS	RADIUS: Could not allocate requestInfo	Resource issue with RADIUS Client service.
RADIUS	RADIUS: osapiSocketRecvFrom returned error	Error while attempting to read data from the RADIUS server.
RADIUS	RADIUS: Accounting-Response failed to validate, id=xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: User (xxx) needs to respond for challenge	An unexpected challenge was received for a configured user.
RADIUS	RADIUS: Could not allocate a buffer for the packet	Resource issue with RADIUS Client service.

Table 7: RADIUS Log Messages (Continued)

Component	Message	Cause
RADIUS	RADIUS: Access-Challenge failed to validate, id=xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Failed to validate Message-Authenticator, id=xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Access-Accpet failed to validate, id=xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Invalid packet length – xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Response is missing Message-Authenticator, id=xxx	The RADIUS Client received an invalid message from the server.
RADIUS	RADIUS: Server address doesn't match configured server	RADIUS Client received a server response from an unconfigured server.

Table 8: TACACS+ Log Messages

Component	Message	Cause
TACACS+	TACACS+: authentication error, no server to contact	TACACS+ request needed, but no servers are configured.
TACACS+	TACACS+: connection failed to server x.x.x.x	TACACS+ request sent to server x.x.x.x but no response was received.
TACACS+	TACACS+: no key configured to encrypt packet for server x.x.x.x	No key configured for the specified server.
TACACS+	TACACS+: received invalid packet type from server.	Received packet type that is not supported.
TACACS+	TACACS+: invalid major version in received packet.	Major version mismatch.
TACACS+	TACACS+: invalid minor version in received packet.	Minor version mismatch.

Table 9: LLDP Log Message

Component	Message	Cause
LLDP	lldpTask(): invalid message type:xx. xxxxxx:xx	Unsupported LLDP packet received.

Table 10: SNTP Log Message

Component	Message	Cause
SNTP	SNTP: system clock synchronized on %s UTC	Indicates that SNTP has successfully synchronized the time of the box with the server.

B.3 Management

Table 11: SNMP Log Message

Component	Message	Cause
SNMP	EDB Callback: Unit Join: x.	A new unit has joined the stack.



Table 12: EmWeb Log Messages

Component	Message	Cause
EmWeb	EMWEB (Telnet): Max number of Telnet login sessions exceeded	A user attempted to connect via telnet when the maximum number of telnet sessions were already active.
EmWeb	EMWEB (SSH): Max number of SSH login sessions exceeded	A user attempted to connect via SSH when the maximum number of SSH sessions were already active.
EmWeb	Handle table overflow	All the available EmWeb connection handles are being used and the connection could not be made.
EmWeb	ConnectionType EmWeb socket accept() failed: errno	Socket accept failure for the specified connection type.
EmWeb	ewsNetHTTPReceive failure in NetReceiveLoop() - closing connection.	Socket receive failure.
EmWeb	EmWeb: connection allocation failed	Memory allocation failure for the new connection.
EmWeb	EMWEB TransmitPending : EWOULDBLOCK error sending data	Socket error on send.
EmWeb	ewaNetHTTPEnd: internal error - handle not in Handle table	EmWeb handle index not valid.
EmWeb	ewsNetHTTPReceive:rcvBufCnt exceeds MAX_QUEUED_RECV_BUFS!	The receive buffer limit has been reached. Bad request or DoS attack.
EmWeb	EmWeb accept: XXXX	Accept function for new SSH connection failed. XXXX indicates the error info.

Table 13: CLI_UTIL Log Messages

Component	Message	Cause
CLI_UTIL	Telnet Send Failed errno = 0x%x	Failed to send text string to the telnet client.
CLI_UTIL	osapiFsDir failed	Failed to obtain the directory information from a volume's directory.

Table 14: SSHD Log Messages

Component	Message	Cause
SSHD	SSHD: Unable to create the global (data) semaphore	Failed to create semaphore for global data protection.
SSHD	SSHD: Msg Queue is full, event = XXXX	Failed to send the message to the SSHD message queue as message queue is full. XXXX indicates the event to be sent
SSHD	SSHD: Unknown UI event in message, event=XXXX	Failed to dispatch the UI event to the appropriate SSHD function as it's an invalid event. XXXX indicates the event to be dispatched.
SSHD	sshdApiCnfrCommand: Failed calling sshdIssueCmd.	Failed to send the message to the SSHD message queue

Table 15: SSLT Log Messages

Component	Message	Cause
SSLT	SSLT: Exceeded maximum, ssltConnectionTask	Exceeded maximum allowed SSLT connections.
SSLT	SSLT: Error creating Secure server socket6	Failed to create secure server socket for IPV6.
SSLT	SSLT: Can't connect to unsecure server at XXXX, result = YYYY, errno = ZZZZ	Failed to open connection to unsecure server. XXXX is the unsecure server socket address. YYYY is the result returned from connect function and ZZZZ is the error code.
SSLT	SSLT: Msg Queue is full, event=XXXX	Failed to send the received message to the SSLT message queue as message queue is full. XXXX indicates the event to be sent.
SSLT	SSLT: Unknown UI event in message, event=XXXX	Failed to dispatch the received UI event to the appropriate SSLT function as it's an invalid event. XXXX indicates the event to be dispatched.
SSLT	ssltApiCnfrCommand: Failed calling ssltIssueCmd.	Failed to send the message to the SSLT message queue.
SSLT	SSLT: Error loading certificate from file XXXX	Failed while loading the SSL certificate from specified file. XXXX indicates the file from where the certificate is being read.
SSLT	SSLT: Error loading private key from file	Failed while loading private key for SSL connection.
SSLT	SSLT: Error setting cipher list (no valid ciphers)	Failed while setting cipher list.
SSLT	SSLT: Could not delete the SSL semaphores	Failed to delete SSL semaphores during cleanup of all resources associated with the OpenSSL Locking semaphores.

Table 16: User_Manager Log Messages

Component	Message	Cause
User_Manager	User Login Failed for XXXX	Failed to authenticate user login. XXXX indicates the username to be authenticated.
User_Manager	Access level for user XXXX could not be determined. Setting to READ_ONLY.	Invalid access level specified for the user. The access level is set to READ_ONLY. XXXX indicates the username.
User_Manager	Could not migrate config file XXXX from version YYYY to ZZZZ. Using defaults.	Failed to migrate the config file. XXXX is the config file name. YYYY is the old version number and ZZZZ is the new version number.

B.4 Switching

Table 17: Protected Ports Log Messages

Component	Message	Cause
Protected Ports	Protected Port: failed to save configuration	This appears when the protected port configuration cannot be saved
Protected Ports	protectedPortCnfrInitPhase1Process: Unable to create r/w lock for protectedPort	This appears when protectedPortCfgRWLock Fails
Protected Ports	protectedPortCnfrInitPhase2Process: Unable to register for VLAN change callback	This appears when nimRegisterIntfChange with VLAN fails

Table 17: Protected Ports Log Messages (Continued)

Component	Message	Cause
Protected Ports	Cannot add intfNum xxx to group yyy	This appears when an interface could not be added to a particular group.
Protected Ports	unable to set protected port group	This appears when a dtl call fails to add interface mask at the driver level
Protected Ports	Cannot delete intfNum xxx from group yyy	This appears when a dtl call to delete an interface from a group fails
Protected Ports	Cannot update group YYY after deleting interface XXX	This message appears when an update group for a interface deletion fails
Protected Ports	Received an interface change callback while not ready to receive it	This appears when an interface change call back has come before the protected port component is ready.

Table 18: IP Subnet VLANS Log Messages

Component	Message	Cause
IPsubnet vlans	ERROR vlanIpSubnetSubnetValid :Invalid subnet	This occurs when an invalid pair of subnet and netmask has come from the CLI
IPsubnet vlans	IP Subnet Vlans: failed to save configuration	This message appears when save configuration of subnet vlans failed
IPsubnet vlans	vlanIpSubnetCnfrInitPhase1Process: Unable to create r/w lock for vlanIpSubnet	This appears when a read/write lock creations fails
IPsubnet vlans	vlanIpSubnetCnfrInitPhase2Process: Unable to register for VLAN change callback	This appears when this component unable to register for vlan change notifications
IPsubnet vlans	vlanIpSubnetCnfrFiniPhase1Process: could not delete avl semaphore	This appears when a semaphore deletion of this component fails.
IPsubnet vlans	vlanIpSubnetDtlVlanCreate: Failed	This appears when a dtl call fails to add an entry into the table
IPsubnet vlans	vlanIpSubnetSubnetDeleteApply: Failed	This appears when a dtl fails to delete an entry from the table
IPsubnet vlans	vlanIpSubnetVlanChangeCallback: Failed to add an Entry	This appears when a dtl fails to add an entry for a vlan add notify event.
IPsubnet vlans	vlanIpSubnetVlanChangeCallback: Failed to delete an Entry	This appears when a dtl fails to delete an entry for an vlan delete notify event.

Table 19: Mac-based VLANs Log Messages

Component	Message	Cause
Mac based VLANS	MAC VLANs: Failed to save configuration	This message appears when save configuration of Mac vlans failed
Mac based VLANS	vlanMacCnfrInitPhase1Process: Unable to create r/w lock for vlanMac	This appears when a read/write lock creations fails
Mac based VLANS	Unable to register for VLAN change callback	This appears when this component unable to register for vlan change notifications
Mac based VLANS	vlanMacCnfrFiniPhase1Process: could not delete avl semaphore	This appears when a semaphore deletion of this component fails.
Mac based VLANS	vlanMacAddApply: Failed to add an entry	This appears when a dtl call fails to add an entry into the table
Mac based VLANS	vlanMacDeleteApply: Unable to delete an Entry	This appears when a dtl fails to delete an entry from the table

Table 19: Mac-based VLANs Log Messages

Component	Message	Cause
Mac based VLANs	vlanMacVlanChangeCallback: Failed to add an entry	This appears when a dtl fails to add an entry for a vlan add notify event.
Mac based VLANs	vlanMacVlanChangeCallback: Failed to delete an entry	This appears when a dtl fails to delete an entry for a vlan delete notify event.

Table 20: 802.1x Log Messages

Component	Message	Cause
802.1X	function: Failed calling dot1xIssueCmd	802.1X message queue is full
802.1X	function: EAP message not received from server	RADIUS server did not send required EAP message
802.1X	function: Out of System buffers	802.1X cannot process/transmit message due to lack of internal buffers
802.1X	function: could not set state to <authorized/unauthorized>, intf xxx	DTL call failed setting authorization state of the port
802.1X	dot1xApplyConfigData: Unable to <enable/disable> dot1x in driver	DTL call failed enabling/disabling 802.1X
802.1X	dot1xSendRespToServer: dot1xRadiusAccessRequestSend failed	Failed sending message to RADIUS server
802.1X	dot1xRadiusAcceptProcess: error calling radiusAccountingStart, ifIndex=xxx	Failed sending accounting start to RADIUS server
802.1X	function: failed sending terminate cause, intf xxx	Failed sending accounting stop to RADIUS server

Table 21: IGMP Snooping Log Messages

Component	Message	Cause
IGMP Snooping	function: osapiMessageSend failed	IGMP Snooping message queue is full
IGMP Snooping	Failed to set global igmp snooping mode to xxx	Failed to set global IGMP Snooping mode due to message queue being full
IGMP Snooping	Failed to set igmp snooping mode xxx for interface yyy	Failed to set interface IGMP Snooping mode due to message queue being full
IGMP Snooping	Failed to set igmp mrouter mode xxx for interface yyy	Failed to set interface multicast router mode due to IGMP Snooping message queue being full
IGMP Snooping	Failed to set igmp snooping mode xxx for vlan yyy	Failed to set VLAN IGM Snooping mode due to message queue being full
IGMP Snooping	Failed to set igmp mrouter mode %d for interface xxx on Vlan yyy	Failed to set VLAN multicast router mode due to IGMP Snooping message queue being full
IGMP Snooping	snoopCnfrlNitPhase1Process: Error allocating small buffers	Could not allocate buffers for small IGMP packets
IGMP Snooping	snoopCnfrlNitPhase1Process: Error allocating large buffers	Could not allocate buffers for large IGMP packets



Table 22: GARP/GVRP/GMRP Log Messages

Component	Message	Cause
GARP/GVRP/ GMRP	garpSpanState, garpIfStateChange, GarpIssueCmd, garpDot1sChangeCallBack, garpApiCnfrCommand, garpLeaveAllTimerCallback, garpTimerCallback: QUEUE SEND FAILURE:	The garpQueue is full, logs specifics of the message content like internal interface number, type of message etc.
GARP/GVRP/ GMRP	GarpSendPDU: QUEUE SEND FAILURE	The garpPduQueue is full, logs specific of the GPDU, internal interface number, vlan id, buffer handle etc.
GARP/GVRP/ GMRP	garpMapIntflsConfigurable, gmrpMapIntflsConfigurable: Error accessing GARP/GMRP config data for interface %d in garpMapIntflsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no pre-configuration.
GARP/GVRP/ GMRP	garpTraceMsgQueueUsage: garpQueue usage has exceeded fifty/eighty/ninety percent	Traces the build up of message queue. Helpful in determining the load on GARP.
GARP/GVRP/ GMRP	gid_destroy_port: Error Removing port %d registration for vlan-mac %d - %02X:%02X:%02X:%02X:%02X:%02X	Mismatch between the gmd (gmrp database) and MFDB.
GARP/GVRP/ GMRP	gmd_create_entry: GMRP failure adding MFDB entry: vlan %d and address %s	MFDB table is full.

Table 23: 802.3ad Log Messages

Component	Message	Cause
802.3ad	dot3adReceiveMachine: received default event %x	Received a LAG PDU and the RX state machine is ignoring this LAGPDU
802.3ad	dot3adNimEventCompletionCallback, dot3adNimEventCreateCompletionCallback: DOT3AD: notification failed for event(%d), intf(%d), reason(%d)	The event sent to NIM was not completed successfully

Table 24: FDB Log Message

Component	Message	Cause
FDB	fdbSetAddressAgingTimeOut: Failure setting fid %d address aging timeout to %d	Unable to set the age time in the hardware

Table 25: Double VLAN Tag Log Message

Component	Message	Cause
Double Vlan Tag	dvlantagIntflsConfigurable: Error accessing dvlantag config data for interface %d	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no pre-configuration.

Table 26: IPv6 Provisioning Log Message

Component	Message	Cause
IPV6 Provisioning	ipv6ProvIntflsConfigurable: Error accessing IPv6 Provisioning config data for interface %d	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no pre-configuration.

Table 27: MFDB Log Message

Component	Message	Cause
MFDB	mfdbTreeEntryUpdate: entry does not exist	Trying to update a non existing entry

Table 28: 802.1Q Log Messages

Component	Message	Cause
802.1Q	dot1qIssueCmd: Unable to send message %d to dot1qMsgQueue for vlan %d - %d msgs in queue	dot1qMsgQueue is full.
802.1Q	dot1qVlanCreateProcess: Attempt to create a vlan with an invalid vlan id %d ; VLAN %d not in range,	This accommodates for reserved vlan ids. i.e. 4094 - x
802.1Q	dot1qMapIntflsConfigurable: Error accessing DOT1Q config data for interface %d in dot1qMapIntflsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no pre-configuration.
802.1Q	dot1qVlanDeleteProcess: Deleting the default VLAN	Typically encountered during clear Vlan and clear config
802.1Q	dot1qVlanMemberSetModify, dot1qVlanTaggedMemberSetModify: Dynamic entry %d can only be modified after it is converted to static	If this vlan is a learnt via GVRP then we cannot modify it's member set via management.

Table 29: 802.1S Log Messages

Component	Message	Cause
802.1S	dot1sIssueCmd: Dot1s Msg Queue is full!!!!Event: %u, on interface: %u, for instance: %u	The message Queue is full.
802.1S	dot1sStateMachineRxBpdu(): Rcvd BPDU Discarded	The current conditions, like port is not enabled or we are currently not finished processing another BPDU on the same interface, does not allow us to process this BPDU
802.1S	dot1sBpduTransmit(): could not get a buffer	Out of system buffers



Table 30: Port Mac Locking Log Message

Component	Message	Cause
Port Mac Locking	pmlMapIntflsConfigurable: Error accessing PML config data for interface %d in pmlMapIntflsConfigurable.	A default configuration does not exist for this interface. Typically a case when a new interface is created and has no pre-configuration.

Table 31: Protocol-based VLANs Log Messages

Component	Message	Cause
Protocol Based VLANs	pbVlanCnfgrInitPhase2Process: Unable to register NIM callback	Appears when nimRegisterIntfChange fails to register pbVlan for link state changes.
Protocol Based VLANs	pbVlanCnfgrInitPhase2Process: Unable to register pbVlan callback with vlans	Appears when vlanRegisterForChange fails to register pbVlan for vlan changes.
Protocol Based VLANs	pbVlanCnfgrInitPhase2Process: Unable to register pbVlan callback with nvStore	Appears when nvStoreRegister fails to register save and restore functions for configuration save.

B.5 QoS

Table 32: ACL Log Messages

Component	Message	Cause
ACL	Total number of ACL rules (x) exceeds max (y) on intf i.	The combination of all ACLs applied to an interface has resulted in requiring more rules than the platform supports.
ACL	ACL <i>name</i> , rule x: This rule is not being logged	The ACL configuration has resulted in a requirement for more logging rules than the platform supports. The specified rule is functioning normally except for the logging action.
ACL	aclLogTask: error logging ACL rule trap for correlator <i>number</i>	The system was unable to send an SNMP trap for this ACL rule which contains a logging attribute.
ACL	IP ACL <i>number</i> : Forced truncation of one or more rules during config migration	While processing the saved configuration, the system encountered an ACL with more rules than is supported by the current version. This may happen when code is updated to a version supporting fewer rules per ACL than the previous version.

Table 33: CoS Log Message

Component	Message	Cause
COS	cosCnfgrInitPhase3Process: Unable to apply saved config -- using factory defaults	The COS component was unable to apply the saved configuration and has initialized to the factory default settings.

Table 34: DiffServ Log Messages

Component	Message	Cause
DiffServ	diffserv.c 165: diffServRestore Failed to reset DiffServ. Recommend resetting device	While attempting to clear the running configuration an error was encountered in removing the current settings. This may lead to an inconsistent state in the system and resetting is advised.
DiffServ	Policy invalid for service intf: "policy <i>name</i> , intfNum <i>x</i> , direction <i>y</i>	The DiffServ policy definition is not compatible with the capabilities of the interface specified. Check the platform release notes for information on configuration limitations.

B.6 Technologies

Table 35: Broadcom Error Messages

Component	Message	Cause
Broadcom	Invalid USP unit = <i>x</i> , slot = <i>x</i> , port = <i>x</i>	A port was not able to be translated correctly during the receive.
Broadcom	In hapiBroadSystemMacAddress call to 'bcm_l2_addr_add' - FAILED : <i>x</i>	Failed to add an L2 address to the MAC table. This should only happen when a hash collision occurs or the table is full.
Broadcom	Failed installing mirror action - rest of the policy applied successfully	A previously configured probe port is not being used in the policy. The release notes state that only a single probe port can be configured
Broadcom	Policy <i>x</i> does not contain rule <i>x</i>	The rule was not added to the policy due to a discrepancy in the rule count for this specific policy . Additionally, the message can be displayed when an old rule is being modified, but the old rule is not in the policy
Broadcom	ERROR: policy <i>x</i> , tmpPolicy <i>x</i> , size <i>x</i> , data <i>x x x x x x</i>	An issue installing the policy due to a possible duplicate hash
Broadcom	ACL <i>x</i> not found in internal table	Attempting to delete a non-existent ACL
Broadcom	ACL internal table overflow	Attempting to add an ACL to a full table
Broadcom	In hapiBroadQosCosQueueConfig, Failed to configure minimum bandwidth. Available bandwidth <i>x</i>	Attempting to configure the bandwidth beyond it's capabilities
Broadcom	USL: failed to put sync response on queue	A response to a sync request was not enqueued. This could indicate that a previous sync request was received after it was timed out
Broadcom	USL: failed to sync ipmc table on unit= <i>x</i>	Either the transport failed or the message was dropped
Broadcom	usl_task_ipmc_msg_send(): failed to send with <i>x</i>	Either the transport failed or the message was dropped
Broadcom	USL: No available entries in the STG table	The Spanning Tree Group table is full in USL
Broadcom	USL: failed to sync stg table on unit= <i>x</i>	Could not synchronize unit <i>x</i> due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: A Trunk doesn't exist in USL	Attempting to modify a Trunk that doesn't exist
Broadcom	USL: A Trunk being created by bcmx already existed in USL	Possible synchronization issue between the application, hardware, and sync layer

Table 35: Broadcom Error Messages (Continued)

Component	Message	Cause
Broadcom	USL: A Trunk being destroyed doesn't exist in USL	Possible synchronization issue between the application, hardware, and sync layer.
Broadcom	USL: A Trunk being set doesn't exist in USL	Possible synchronization issue between the application, hardware, and sync layer.
Broadcom	USL: failed to sync trunk table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: Mcast entry not found on a join	Possible synchronization issue between the application, hardware, and sync layer
Broadcom	USL: Mcast entry not found on a leave	Possible synchronization issue between the application, hardware, and sync layer
Broadcom	USL: failed to sync dvlan data on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync policy table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync VLAN table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	Invalid LAG id x	Possible synchronization issue between the BCM driver and HAPI
Broadcom	Invalid uport calculated from the BCM uport bcmx_l2_addr->lport = x	Uport not valid from BCM driver.
Broadcom	Invalid USP calculated from the BCM uport\nbcmx_l2_addr->lport = x	USP not able to be calculated from the learn event for BCM driver.
Broadcom	Unable to insert route R/P	Route 'R' with prefix 'P' could not be inserted in the hardware route table. A retry will be issued.
Broadcom	Unable to Insert host H	Host 'H' could not be inserted in hardware host table. A retry will be issued.
Broadcom	USL: failed to sync L3 Intf table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync L3 Host table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync L3 Route table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync initiator table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync terminator table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued
Broadcom	USL: failed to sync ip-multicast table on unit=x	Could not synchronize unit x due to a transport failure or API issue on remote unit. A synchronization retry will be issued

B.7 O/S Support

Table 36: Linux BSP Log Message

Component	Message	Cause
Linux BSP	rc = 10	Second message logged at bootup, right after "Starting code...". Always logged.

Table 37: OSAPI Linux Log Messages

Component	Message	Cause
OSAPI Linux	osapiNetLinkNeighDump: could not open socket! - or - ipstkNdpFlush: could not open socket! - or - osapiNetlinkDumpOpen: unable to bind socket! errno = XX	Couldn't open a "netlink" socket. Make sure "ARP Daemon support" (CONFIG_ARPD) is enabled in the Linux kernel, if the BROADCOM reference kernel binary is not being used.
OSAPI Linux	ipstkNdpFlush: sending delete failed	Failed when telling the kernel to delete a neighbor table entry (the message is incorrect)
OSAPI Linux	unable to open /proc/net/ipv6/conf/default/hop_limit	IPv6 MIB objects read, but /proc filesystem is not mounted, or running kernel does not have IPV6 support
OSAPI Linux	osapimRouteEntryAdd, errno XX adding 0xYY to ZZ - or - osapimRouteEntryDelete, errno XX deleting 0xYY from ZZ	Error adding or deleting an IPv4 route (listed in hex as YY), on the interface with Linux name ZZ Error code can be looked up in errno.h.
OSAPI Linux	l3intfAddRoute: Failed to Add Route - or - l3intfDeleteRoute: Failed to Delete Route	Error adding or deleting a default gateway in the kernel's routing table (the function is really osapiRawMRouteAdd()/Delete())
OSAPI Linux	osapiNetIfConfig: ioctl on XX failed: addr: 0xYY, err: ZZ - or - osapiNetIPSet: ioctl on XX failed: addr: 0x%YY	Failed trying to set the IP address (in hex as YY) of the interface with Linux name XX, and the interface does not exist. Sometimes this is a harmless race condition (e.g. we try to set address 0 when DHCPing on the network port (dtl0) at bootup, before it's created using TAP).
OSAPI Linux	ping: sendto error	Trouble sending an ICMP echo request packet for the UI 'ping' command. Maybe there was no route to that network.
OSAPI Linux	Failed to Create Interface	Out of memory at system initialization time.
OSAPI Linux	TAP Unable to open XX	The /dev/tap file is missing, or, if not using the BRPOADCOM reference kernel binary, the kernel is missing "Universal TUN/TAP device driver support" (CONFIG_TUN).
OSAPI Linux	Tap monitor task is spinning on select failures - then - Tap monitor select failed: XX	Trouble reading the /dev/tap device, check the error message XX for details.
OSAPI Linux	Log_Init: log file error - creating new log file	This pertains to the "event log" persistent file in flash. Either it did not exist, or had a bad checksum.
OSAPI Linux	Log_Init: Flash (event) log full; erasing	Event log file has been cleared; happens at boot time.
OSAPI Linux	Log_Init: Corrupt event log; erasing	Event log file had a non-blank entry after a blank entry; therefore, something was messed up.

*Table 37: OSAPI Linux Log Messages (Continued)*

Component	Message	Cause
OSAPI Linux	Failed to Set Interface IP Address – or – IP Netmask – or – Broadcast Address – or – Flags – or – Hardware Address – or – Failed to Retrieve Interface Flags	Trouble adding VRRP IP or MAC address(es) to a Linux network interface.



Appendix **C**

List of Commands



C. List of Commands

{deny permit}	3 - 27
{deny permit} (IPv6)	3 - 35
access-list	3 - 30
acl-trapflags	3 - 32
acl-traptimer	3 - 32
addport	2 - 56
advertise speed	2 - 3
assign-queue	3 - 17
authentication login	2 - 40
authorization network radius	5 - 29
auto-negotiate	2 - 3
auto-negotiate all	2 - 3
boot system	4 - 3
bootfile	4 - 39
bridge aging-time	2 - 101
class	3 - 18
class-map	3 - 10
class-map rename	3 - 10
classofservice dot1p-mapping	3 - 2
classofservice ip-dscp-mapping	3 - 3
classofservice trust	3 - 3
clear board event-log	4 - 24
clear config	4 - 26
clear counters	4 - 26
clear dot1x statistics	2 - 41
clear errcounter	4 - 24
clear host	4 - 50
clear igmpsnooping	4 - 26
clear ip dhcp binding	4 - 43
clear ip dhcp conflict	4 - 44
clear ip dhcp server statistics	4 - 43
clear lldp remote-data	2 - 88
clear lldp statistics	2 - 88
clear pass	4 - 26
clear port-channel	4 - 26
clear radius statistics	2 - 41
clear traplog	4 - 27
clear vlan	4 - 27
client-identifier	4 - 37
client-name	4 - 37
configuration	5 - 6
conform-color	3 - 18
copy	4 - 29
copy (pre-login banner)	5 - 39
cos-queue min-bandwidth	3 - 3



cos-queue strict	3 - 4
crypto certificate generate	5 - 13
crypto key generate dsa	5 - 14
crypto key generate rsa	5 - 13
debug clear	4 - 51
debug console	4 - 51
debug igmpsnooping packet	4 - 55
debug igmpsnooping packet receive	4 - 54
debug igmpsnooping packet transmit	4 - 53
debug lacp packet	4 - 56
debug ping packet	4 - 55
debug spanning-tree bpdu	4 - 53
debug spanning-tree bpdu receive	4 - 52
debug spanning-tree bpdu transmit	4 - 52
default-router	4 - 37
delete	4 - 3
delete nvram:extra-profile	4 - 31
deleteport (Global Config)	2 - 56
deleteport (Interface Config)	2 - 56
description	2 - 4
diagnostics	5 - 40
diffserv	3 - 9
disconnect	5 - 14
dns-server	4 - 38
domain-name	4 - 40
dos-control firstfrag	2 - 98
dos-control icmp	2 - 100
dos-control l4port	2 - 100
dos-control sipdip	2 - 98
dos-control tcpflag	2 - 99
dos-control tcpfrag	2 - 99
dot1x default-login	2 - 41
dot1x guest-vlan	2 - 42
dot1x guest-vlan supplicant	2 - 42
dot1x initialize	2 - 42
dot1x login	2 - 43
dot1x max-req	2 - 43
dot1x port-control	2 - 43
dot1x port-control all	2 - 44
dot1x re-authenticate	2 - 44
dot1x re-authentication	2 - 44
dot1x system-auth-control	2 - 44
dot1x timeout	2 - 45
dot1x user	2 - 46
download amcipmifw	4 - 3
download frudata	4 - 2



download fwum	4 - 3
download ipmifw	4 - 2
drop	3 - 17
dvlan-tunnel ethertype	2 - 29
ekeying (interface)	4 - 5
ekeying all (configure)	4 - 5
enable (Privileged EXEC access)	5 - 2
enable passwd	4 - 27
enable passwd encrypted <password>	4 - 27
filedescr	4 - 4
hardware-address	4 - 38
host	4 - 38
interface	2 - 2
ip access-group	3 - 31
ip dhcp bootp automatic	4 - 43
ip dhcp conflict logging	4 - 43
ip dhcp excluded-address	4 - 42
ip dhcp filtering	4 - 46
ip dhcp filtering trust	4 - 47
ip dhcp ping packets	4 - 42
ip dhcp pool	4 - 36
ip domain list	4 - 48
ip domain lookup	4 - 47
ip domain name	4 - 48
ip domain retry	4 - 49
ip domain timeout	4 - 49
ip host	4 - 49
ip name server	4 - 48
ip ssh	5 - 11
ip ssh protocol	5 - 11
ip ssh server enable	5 - 11
ip telnet server enable	5 - 7
ipv6 access-list	3 - 34
ipv6 access-list rename	3 - 35
ipv6 traffic-filter	3 - 36
key	5 - 36
lACP actor admin	2 - 57
lACP actor admin key	2 - 58
lACP actor admin state	2 - 58
lACP actor admin state individual	2 - 58
lACP actor admin state longtimeout	2 - 59
lACP actor admin state passive	2 - 59
lACP actor port	2 - 60
lACP actor port priority	2 - 60
lACP actor system priority	2 - 60
lACP admin key	2 - 57



lacp collector max-delay	2 - 57
lacp partner admin key	2 - 60
lacp partner admin state	2 - 61
lacp partner admin state individual	2 - 61
lacp partner admin state longtimeout	2 - 62
lacp partner admin state passive	2 - 62
lacp partner port id	2 - 62
lacp partner port priority	2 - 63
lacp partner system priority	2 - 64
lacp partner system-id	2 - 63
lease	4 - 39
license advanced	4 - 31
lineconfig	5 - 6
lldp med	2 - 92
lldp med all	2 - 93
lldp med confignotification	2 - 92
lldp med confignotification all	2 - 93
lldp med faststartrepeatcount	2 - 93
lldp med transmit-tlv	2 - 92
lldp med transmit-tlv all	2 - 94
lldp notification	2 - 87
lldp notification-interval	2 - 88
lldp receive	2 - 86
lldp timers	2 - 86
lldp transmit	2 - 86
lldp transmit-mgmt	2 - 87
lldp transmit-tlv	2 - 87
logging buffered	4 - 20
logging buffered wrap	4 - 20
logging cli-command	4 - 20
logging console	4 - 21
logging host	4 - 21
logging host remove	4 - 21
logging persistent	4 - 56
logging port	4 - 21
logging syslog	4 - 22
logout	4 - 27
mac access-group	3 - 29
mac access-list extended	3 - 27
mac access-list extended rename	3 - 27
macfilter	2 - 70
macfilter adddest	2 - 71
macfilter adddest all	2 - 72
macfilter addsrc	2 - 72
macfilter addsrc all	2 - 72
mark cos	3 - 19



mark ip-precedence	3 - 19
match any	3 - 11
match class-map	3 - 11
match cos	3 - 12
match destination-address mac	3 - 12
match dstip	3 - 13
match dstip6	3 - 13
match dstl4port	3 - 13
match ethertype	3 - 10
match ip dscp	3 - 13
match ip precedence	3 - 14
match ip tos	3 - 14
match protocol	3 - 15
match secondary-cos	3 - 12
match secondary-vlan	3 - 16
match source-address mac	3 - 15
match srcip	3 - 15
match srcip6	3 - 16
match srcl4port	3 - 16
match vlan	3 - 16
mirror	3 - 17
mode dot1q-tunnel	2 - 30
mode dvlan-tunnel	2 - 30
monitor session	2 - 69
mtu	2 - 4
netbios-name-server	4 - 40
netbios-node-type	4 - 40
network (DHCP Pool Config)	4 - 39
network mac-address	5 - 3
network mac-type	5 - 4
network mgmt_vlan	2 - 20
network parms	5 - 3
network protocol	5 - 3
next-server	4 - 41
no access-list	3 - 31
no acl-trapflags.....	3 - 32
no acl-traptimer.....	3 - 33
no advertise speed.....	2 - 3
no authentication login.....	2 - 41
no authorization network radius.....	5 - 29
no auto-negotiate all.....	2 - 3
no auto-negotiate.....	2 - 3
no bootfile	4 - 39
no bridge aging-time	2 - 101
no class.....	3 - 19
no class-map.....	3 - 10



no classofservice dot1p-mapping	3 - 2
no classofservice ip-dscp-mapping.....	3 - 3
no classofservice trust.....	3 - 3
no client-identifier	4 - 37
no client-name	4 - 37
no cos-queue min-bandwidth	3 - 4
no cos-queue strict.....	3 - 4
no crypto certificate generate	5 - 13
no crypto key generate dsa	5 - 14
no crypto key generate rsa.....	5 - 13
no debug console	4 - 51
no debug igmpsnooping packet.....	4 - 55
no debug igmpsnooping receive.....	4 - 55
no debug igmpsnooping transmit	4 - 54
no debug lacp packet	4 - 56
no debug ping packet.....	4 - 56
no debug spanning-tree bpdu receive	4 - 53
no debug spanning-tree bpdu transmit	4 - 52
no debug spanning-tree bpdu.....	4 - 53
no default-router	4 - 37
no diffserv.....	3 - 9
no dns-server	4 - 38
no domain-name	4 - 40
no dos-control firstfrag.....	2 - 99
no dos-control icmp.....	2 - 100
no dos-control l4port	2 - 100
no dos-control sipdip.....	2 - 98
no dos-control tcpflag.....	2 - 99
no dos-control tcpfrag.....	2 - 99
no dot1x guest-vlan supplicant.....	2 - 42
no dot1x guest-vlan	2 - 42
no dot1x max-req.....	2 - 43
no dot1x port-control all.....	2 - 44
no dot1x port-control.....	2 - 43
no dot1x re-authentication.....	2 - 44
no dot1x system-auth-control	2 - 45
no dot1x timeout.....	2 - 45
no dot1x user	2 - 46
no ekeying (interface).....	4 - 5
no ekeying all (configure)	4 - 5
no hardware-address	4 - 38
no host	4 - 38
no ip access-group	3 - 32
no ip dhcp bootp automatic	4 - 43
no ip dhcp conflict logging.....	4 - 43
no ip dhcp excluded-address	4 - 42



no ip dhcp filtering trust.....	4 - 47
no ip dhcp filtering.....	4 - 46
no ip dhcp ping packets.....	4 - 42
no ip dhcp pool.....	4 - 36
no ip domain list.....	4 - 48
no ip domain lookup	4 - 47
no ip domain name.....	4 - 48
no ip domain retry	4 - 49
no ip domain timeout	4 - 50
no ip host.....	4 - 49
no ip name server	4 - 49
no ip ssh server enable	5 - 11
no ip telnet server enable	5 - 7
no ipv6 access-list.....	3 - 35
no ipv6 traffic-filter.....	3 - 36
no lacp actor admin key	2 - 58
no lacp actor admin state individual	2 - 59
no lacp actor admin state longtimeout	2 - 59
no lacp actor admin state passive.....	2 - 59
no lacp actor admin state.....	2 - 58
no lacp actor port priority	2 - 60
no lacp actor system priority.....	2 - 60
no lacp admin key	2 - 57
no lacp collector max delay	2 - 57
no lacp partner admin key.....	2 - 61
no lacp partner admin state individual	2 - 61
no lacp partner admin state longtimeout.....	2 - 62
no lacp partner admin state passive	2 - 62
no lacp partner admin state	2 - 61
no lacp partner port id.....	2 - 63
no lacp partner port priority	2 - 63
no lacp partner system priority	2 - 64
no lacp partner system-id.....	2 - 63
no ldp med confignotification.....	2 - 92
no lease.....	4 - 39
no license advanced	4 - 32
no lldp med faststartrepeatcount	2 - 93
no lldp med transmit-tlv.....	2 - 93
no lldp med transmit-tlv.....	2 - 94
no lldp med	2 - 92
no lldp notification.....	2 - 88
no lldp notification-interval	2 - 88
no lldp receive.....	2 - 86
no lldp timers	2 - 87
no lldp transmit	2 - 86
no lldp transmit-mgmt.....	2 - 87



no lldp transmit-tlv	2 - 87
no logging buffered wrap	4 - 20
no logging buffered	4 - 20
no logging cli-command	4 - 21
no logging console	4 - 21
no logging persistent	4 - 57
no logging port	4 - 22
no logging syslog	4 - 22
no mac access-group	3 - 29
no mac access-list extended	3 - 27
no macfilter adddest all	2 - 72
no macfilter adddest	2 - 71
no macfilter addsrc all	2 - 73
no macfilter addsrc	2 - 72
no macfilter	2 - 71
no match class-map	3 - 12
no mode dot1q-tunnel	2 - 30
no mode dvlan-tunnel	2 - 30
no monitor	2 - 70
no monitor session	2 - 69
no mtu	2 - 4
no netbios-name-server	4 - 40
no netbios-node-type	4 - 41
no network mac-type	5 - 4
no network mgmt_vlan	2 - 20
no network	4 - 39
no next-server	4 - 41
no option	4 - 41
no passwords aging	5 - 19
no passwords history	5 - 19
no passwords lock-out	5 - 20
no passwords min-length	5 - 19
no policy-map	3 - 20
no port lacpmode all	2 - 65
no port lacpmode	2 - 65
no port lacptimeout	2 - 65
no port lacptimeout	2 - 66
no port-channel adminmode	2 - 66
no port-channel linktrap	2 - 66
no port-channel static	2 - 64
no port-channel system priority	2 - 67
no port-channel	2 - 56
no port-security mac-address	2 - 84
no port-security max-dynamic	2 - 83
no port-security max-static	2 - 84
no port-security	2 - 83



no protection-group (configure).....	3 - 8
no protection-group (interface).....	3 - 8
no protocol group.....	2 - 25
no protocol vlan group all.....	2 - 26
no protocol vlan group.....	2 - 25
no radius accounting mode.....	5 - 30
no radius server attribute 4.....	5 - 30
no radius server host.....	5 - 31
no radius server msgauth.....	5 - 31
no radius server retransmit.....	5 - 32
no radius server timeout.....	5 - 32
no serial baudrate.....	5 - 6
no serial timeout.....	5 - 6
no service dhcp.....	4 - 42
no service-policy.....	3 - 21
no session-limit.....	5 - 9
no session-timeout.....	5 - 9
no set bootstopkey.....	4 - 31
no set garp timer join.....	2 - 36
no set garp timer leave.....	2 - 36
no set garp timer leaveall.....	2 - 36
no set gmrp adminmode.....	2 - 39
no set gmrp interfacemode.....	2 - 39
no set gvrp adminmode.....	2 - 37
no set gvrp interfacemode.....	2 - 38
no set igmp fast-leave.....	2 - 75
no set igmp groupmembership-interval.....	2 - 76
no set igmp interfacemode.....	2 - 75
no set igmp maxresponse.....	2 - 76
no set igmp mcrtexpiretime.....	2 - 77
no set igmp mrouter interface.....	2 - 78
no set igmp mrouter.....	2 - 77
no set igmp querier election participate.....	2 - 82
no set igmp querier query-interval.....	2 - 81
no set igmp querier timer expiry.....	2 - 81
no set igmp querier version.....	2 - 81
no set igmp querier.....	2 - 80
no set igmp.....	2 - 74
no shutdown all.....	2 - 5
no shutdown.....	2 - 5
no snmp trap link-status all.....	5 - 27
no snmp trap link-status.....	5 - 26
no snmp-server community ipaddr.....	5 - 21
no snmp-server community ipmask.....	5 - 22
no snmp-server community mode.....	5 - 22
no snmp-server community.....	5 - 21



no snmp-server enable traps linkmode	5 - 24
no snmp-server enable traps multiusers	5 - 24
no snmp-server enable traps stpmode.....	5 - 24
no snmp-server enable traps violation.....	5 - 23
no snmp-server enable traps	5 - 23
no snmptrap mode	5 - 26
no snmptrap	5 - 25
no snmp broadcast client poll-interval	4 - 32
no snmp client mode.....	4 - 33
no snmp client port	4 - 33
no snmp multicast client poll-interval	4 - 34
no snmp server.....	4 - 35
no snmp unicast client poll-interval	4 - 33
no snmp unicast client poll-retry	4 - 34
no snmp unicast client poll-timeout	4 - 34
no spanning-tree bpdupfilter default	2 - 8
no spanning-tree bpdupfilter.....	2 - 7
no spanning-tree bpdupflood.....	2 - 8
no spanning-tree bpduguard	2 - 8
no spanning-tree configuration name	2 - 9
no spanning-tree configuration revision.....	2 - 9
no spanning-tree edgeport	2 - 10
no spanning-tree forceversion	2 - 10
no spanning-tree forward-time	2 - 10
no spanning-tree hello-time	2 - 11
no spanning-tree max-age.....	2 - 11
no spanning-tree max-hops.....	2 - 11
no spanning-tree mst instance	2 - 13
no spanning-tree mst priority.....	2 - 13
no spanning-tree mst vlan.....	2 - 14
no spanning-tree mst.....	2 - 12
no spanning-tree port mode all	2 - 14
no spanning-tree port mode	2 - 14
no spanning-tree rootguard.....	2 - 15
no spanning-tree	2 - 7
no sshcon maxsessions	5 - 12
no sshcon timeout.....	5 - 12
no storm-control broadcast all level	2 - 51
no storm-control broadcast all	2 - 51
no storm-control broadcast level	2 - 50
no storm-control broadcast.....	2 - 50
no storm-control flowcontrol.....	2 - 55
no storm-control multicast all level.....	2 - 53
no storm-control multicast all.....	2 - 52
no storm-control multicast level.....	2 - 52
no storm-control multicast.....	2 - 51



no storm-control unicast all level.....	2 - 54
no storm-control unicast all	2 - 54
no storm-control unicast level.....	2 - 53
no storm-control unicast	2 - 53
no switchport protected (Global Config)	2 - 34
no switchport protected (Interface Config).....	2 - 34
no tacacs-server host	5 - 35
no tacacs-server key	5 - 36
no tacacs-server timeout	5 - 36
no telnetcon maxsessions	5 - 9
no telnetcon timeout.....	5 - 10
no terminal length	4 - 17
no traffic-shape	3 - 4
no transport input telnet	5 - 8
no transport output telnet	5 - 8
no users name.....	5 - 15
no users passwd.....	5 - 16
no users snmpv3 accessmode.....	5 - 16
no users snmpv3 authentication	5 - 17
no users snmpv3 encryption.....	5 - 17
no vlan acceptframe	2 - 21
no vlan association mac	2 - 27
no vlan association subnet	2 - 27
no vlan ingressfilter.....	2 - 21
no vlan name	2 - 21
no vlan port acceptframe all.....	2 - 23
no vlan port ingressfilter all	2 - 23
no vlan port pvid all	2 - 23
no vlan port tagging all	2 - 24
no vlan protocol group add protocol.....	2 - 24
no vlan pvid.....	2 - 26
no vlan tagging.....	2 - 26
no vlan.....	2 - 20
no voice vlan (Global Config)	2 - 32
no voice vlan (Interface Config)	2 - 32
option	4 - 41
packet-memory (configure)	3 - 7
packet-memory (interface)	3 - 7
passwd	5 - 18
passwords aging	5 - 19
passwords history	5 - 19
passwords lock-out	5 - 20
passwords min-length	5 - 19
ping	4 - 27
police-simple	3 - 20
policy-map	3 - 20



policy-map rename	3 - 21
port	5 - 37
port lacpmode	2 - 64
port lacpmode all	2 - 65
port lacptimeout (Global Config)	2 - 65
port lacptimeout (Interface Config)	2 - 65
port-channel	2 - 56
port-channel adminmode	2 - 66
port-channel linktrap	2 - 66
port-channel name	2 - 67
port-channel static	2 - 64
port-channel system priority	2 - 67
port-security	2 - 83
port-security mac-address	2 - 84
port-security mac-address move	2 - 84
port-security max-dynamic	2 - 83
port-security max-static	2 - 84
priority	5 - 37
protection-group (configure)	3 - 7
protection-group (interface)	3 - 8
protocol group	2 - 25
protocol vlan group	2 - 25
protocol vlan group all	2 - 25
quit	4 - 29
radius accounting mode	5 - 29
radius server attribute 4	5 - 30
radius server host	5 - 30
radius server key	5 - 31
radius server msgauth	5 - 31
radius server primary	5 - 32
radius server retransmit	5 - 32
radius server timeout	5 - 32
redirect	3 - 18
reload	4 - 29
reload fast	4 - 29
script apply	5 - 38
script delete	5 - 38
script list	5 - 39
script show	5 - 39
script validate	5 - 39
serial baudrate	5 - 6
serial timeout	5 - 6
service dhcp	4 - 42
service-policy	3 - 21
serviceport ip	5 - 2
serviceport protocol	5 - 3



session-limit	5 - 9
session-timeout	5 - 9
set board device-id	4 - 4
set board sensor threshold	4 - 4
set bootstopkey	4 - 31
set garp timer join	2 - 35
set garp timer leave	2 - 36
set garp timer leaveall	2 - 36
set gmrp adminmode	2 - 39
set gmrp interfacemode	2 - 39
set gvrp adminmode	2 - 37
set gvrp interfacemode	2 - 37
set igmp	2 - 74
set igmp fast-leave	2 - 75
set igmp groupmembership-interval	2 - 75
set igmp interfacemode	2 - 74
set igmp maxresponse	2 - 76
set igmp mcrptreptime	2 - 77
set igmp mrouter	2 - 77
set igmp mrouter interface	2 - 77
set igmp querier	2 - 80
set igmp querier election participate	2 - 81
set igmp querier query-interval	2 - 80
set igmp querier timer expiry	2 - 81
set igmp querier version	2 - 81
set prompt	5 - 40
show access-lists	3 - 34
show acl-traptimer	3 - 32
show advertise speed	2 - 4
show arp switch	4 - 5
show atca ekeying	4 - 4
show authentication	2 - 46
show authentication users	2 - 47
show boardinfo address	4 - 19
show boardinfo amc connection	4 - 19
show boardinfo amc fru	4 - 19
show boardinfo amc ipmidev	4 - 19
show boardinfo event-log	4 - 18
show boardinfo fru	4 - 19
show boardinfo ipmidev	4 - 19
show boardinfo post-status	4 - 17
show boardinfo sensors	4 - 17
show boardinfo update-status	4 - 18
show boardinfo version	4 - 18
show bootvar	4 - 4
show class-map	3 - 22



show classofservice dot1p-mapping	3 - 4
show classofservice ip-dscp-mapping	3 - 5
show classofservice ip-precedence-mapping	3 - 5
show classofservice trust	3 - 5
show diffserv	3 - 23
show diffserv service	3 - 25
show diffserv service brief	3 - 25
show dos-control	2 - 100
show dot1q-tunnel	2 - 30
show dot1x	2 - 47
show dot1x users	2 - 49
show dvlan-tunnel	2 - 31
show eventlog	4 - 6
show forwardingdb agetime	2 - 101
show garp	2 - 37
show gmrp configuration	2 - 39
show gvrp configuration	2 - 38
show hardware	4 - 6
show hosts	4 - 50
show igmpsnooping	2 - 78
show igmpsnooping mrouter interface	2 - 79
show igmpsnooping mrouter vlan	2 - 79
show igmpsnooping querier	2 - 82
show interface	4 - 7
show interface ethernet	4 - 8
show interfaces cos-queue	3 - 6
show interfaces switchport	2 - 35
show ip access-lists	3 - 33
show ip dhcp binding	4 - 44
show ip dhcp conflict	4 - 46
show ip dhcp filtering	4 - 47
show ip dhcp global configuration	4 - 44
show ip dhcp pool configuration	4 - 44
show ip dhcp server statistics	4 - 45
show ip ssh	5 - 12
show ipv6 access-lists	3 - 36
show key-features	4 - 32
show lacp actor	2 - 67
show lacp partner	2 - 67
show lldp	2 - 88
show lldp interface	2 - 89
show lldp local-device	2 - 91
show lldp local-device detail	2 - 91
show lldp med	2 - 94
show lldp med interface	2 - 94
show lldp med local-device detail	2 - 95



show lldp med remote-device	2 - 96
show lldp med remote-device detail	2 - 97
show lldp remote-device	2 - 90
show lldp remote-device detail	2 - 90
show lldp statistics	2 - 89
show logging	4 - 22
show logging backtrace	4 - 24
show logging buffered	4 - 23
show logging diag-report	5 - 40
show logging errcounter	4 - 24
show logging hosts	4 - 23
show logging traplogs	4 - 23
show loginsession	5 - 14
show mac access-lists	3 - 29
show mac-address-table gmrp	2 - 40
show mac-address-table igmpsnooping	2 - 79
show mac-address-table multicast	2 - 102
show mac-address-table static	2 - 73
show mac-address-table staticfiltering	2 - 73
show mac-address-table stats	2 - 102
show mac-addr-table	4 - 14
show monitor session	2 - 70
show network	5 - 4
show passwords configuration	5 - 20
show policy-map	3 - 23
show policy-map interface	3 - 25
show port	2 - 6
show port protocol	2 - 6
show port-channel	2 - 68
show port-channel brief	2 - 68
show port-channel system priority	2 - 69
show port-security	2 - 84
show port-security dynamic	2 - 85
show port-security static	2 - 85
show port-security violation	2 - 85
show protection-group	3 - 7
show radius	5 - 33
show radius accounting	5 - 33
show radius statistics	5 - 34
show running-config	4 - 15
show serial	5 - 7
show service-policy	3 - 26
show serviceport	5 - 5
show snmpcommunity	5 - 27
show snmptrap	5 - 27
show sntp	4 - 35



show snmp client	4 - 35
show snmp server	4 - 35
show spanning-tree	2 - 15
show spanning-tree brief	2 - 16
show spanning-tree interface	2 - 16
show spanning-tree mst port detailed	2 - 17
show spanning-tree mst port summary	2 - 18
show spanning-tree mst summary	2 - 18
show spanning-tree summary	2 - 19
show spanning-tree vlan	2 - 19
show storm-control	2 - 55
show switchport protected	2 - 35
show sysinfo	4 - 16
show tacacs	5 - 37
show tech-support	4 - 16
show telnet	5 - 10
show telnetcon	5 - 10
show terminal length	4 - 17
show trapflags	5 - 28
show users	5 - 18
show users accounts	5 - 18
show users authentication	2 - 49
show version	4 - 6
show vlan	2 - 27
show vlan association mac	2 - 29
show vlan association subnet	2 - 29
show vlan brief	2 - 28
show vlan port	2 - 28
show voice vlan	2 - 32
shutdown	2 - 4
shutdown all	2 - 5
snmp trap link-status	5 - 26
snmp trap link-status all	5 - 26
snmp-server	5 - 21
snmp-server community	5 - 21
snmp-server community ipaddr	5 - 21
snmp-server community ipmask	5 - 22
snmp-server community mode	5 - 22
snmp-server community ro	5 - 22
snmp-server enable traps	5 - 23
snmp-server enable traps linkmode	5 - 24
snmp-server enable traps multiusers	5 - 24
snmp-server enable traps stpmode	5 - 24
snmp-server enable traps violation	5 - 23
snmptrap	5 - 25
snmptrap	5 - 29



snmptrap ipaddr	5 - 25
snmptrap mode	5 - 26
snmptrap notification	5 - 29
snmptrap snmpversion	5 - 25
sntp broadcast client poll-interval	4 - 32
sntp client mode	4 - 32
sntp client port	4 - 33
sntp multicast client poll-interval	4 - 34
sntp server	4 - 34
sntp unicast client poll-interval	4 - 33
sntp unicast client poll-retry	4 - 34
sntp unicast client poll-timeout	4 - 33
spanning-tree	2 - 7
spanning-tree bpdudfilter	2 - 7
spanning-tree bpdudfilter default	2 - 7
spanning-tree bpdudflood	2 - 8
spanning-tree bpduguard	2 - 8
spanning-tree bpdumigrationcheck	2 - 9
spanning-tree configuration name	2 - 9
spanning-tree configuration revision	2 - 9
spanning-tree edgeport	2 - 9
spanning-tree forward-time	2 - 10
spanning-tree hello-time	2 - 11
spanning-tree max-age	2 - 11
spanning-tree max-hops	2 - 11
spanning-tree mst	2 - 12
spanning-tree mst instance	2 - 13
spanning-tree mst priority	2 - 13
spanning-tree mst vlan	2 - 13
spanning-tree port mode	2 - 14
spanning-tree port mode all	2 - 14
spanning-tree rootguard	2 - 14
speed	2 - 5
speed all	2 - 5
sshcon maxsessions	5 - 12
sshcon timeout	5 - 12
storm-control broadcast	2 - 50
storm-control broadcast all	2 - 50
storm-control broadcast all level	2 - 51
storm-control broadcast level	2 - 50
storm-control flowcontrol	2 - 54
storm-control multicast	2 - 51
storm-control multicast all	2 - 52
storm-control multicast all level	2 - 52
storm-control multicast level	2 - 52
storm-control unicast	2 - 53



storm-control unicast all	2 - 54
storm-control unicast all level	2 - 54
storm-control unicast level	2 - 53
switchport protected (Global Config)	2 - 34
switchport protected (Interface Config)	2 - 34
tacacs-server host	5 - 35
tacacs-server key	5 - 35
tacacs-server timeout	5 - 36
telnet	5 - 7
telnetcon maxsessions	5 - 9
telnetcon timeout	5 - 10
terminal length	4 - 17
timeout	5 - 37
traceroute	4 - 25
traffic-shape	3 - 4
transport input telnet	5 - 8
transport output telnet	5 - 8
users defaultlogin	2 - 46
users login	2 - 46
users name	5 - 15
users name <username> unlock	5 - 15
users passwd	5 - 15
users passwd <username> encrypted <password>	5 - 16
users snmpv3 accessmode	5 - 16
users snmpv3 authentication	5 - 17
users snmpv3 encryption	5 - 17
vlan	2 - 20
vlan acceptframe	2 - 20
vlan association mac	2 - 27
vlan association subnet	2 - 26
vlan database	2 - 20
vlan ingressfilter	2 - 21
vlan makestatic	2 - 21
vlan name	2 - 21
vlan participation	2 - 22
vlan participation all	2 - 22
vlan port acceptframe all	2 - 22
vlan port ingressfilter all	2 - 23
vlan port priority all	2 - 33
vlan port pvid all	2 - 23
vlan port tagging all	2 - 24
vlan priority	2 - 33
vlan protocol group	2 - 24
vlan protocol group add protocol	2 - 24
vlan protocol group remove	2 - 25
vlan pvid	2 - 26



vlan tagging	2 - 26
voice vlan (Global Config)	2 - 31
voice vlan (Interface Config)	2 - 32
voice vlan data priority	2 - 32
write memory	5 - 20