

» User's Guide «



KISS 1U Short V2

KISS 1U Short V2 KTQM87-A

User's Guide (Version 1.0)

1057-0668

1. Table of Contents

1. Table of Contents	1
1.1. Table of Figures	2
2. Introduction	4
2.1. Symbols used in this Manual.....	5
3. Important Instructions	6
3.1. Note on the Warranty	6
3.2. Exclusion of Accident Liability Obligation	6
3.3. Liability Limitation / Exemption from the Warranty Obligation	6
4. General Safety Instructions for IT Equipment	7
4.1. Operation of Laser Source Devices	7
4.2. Electrostatic Discharge (ESD)	8
4.2.1. Grounding Methods	8
4.3. Instructions for the Lithium Battery.....	8
5. Electromagnetic Compatibility	9
5.1. Electromagnetic Compatibility (EU)	9
5.2. FCC Statement (USA)	9
5.3. EMC Compliance (Canada).....	9
6. Scope of Delivery	10
6.1. Type Label and Product Identification.....	10
7. Product Description	11
7.1. Front Side.....	13
7.1.1. Interfaces on the Front Side	14
7.1.2. Controls and LED Indicators.....	14
7.1.3. Filter Mat Holder	14
7.1.4. Externally Accessible Drive Bays	14
7.2. Rear Side	15
7.2.1. Interfaces of the Motherboard on the Rear Side.....	15
7.2.2. Power Supply Unit	15
7.3. Side View	16
7.4. Cover	16
7.4.1. Fan Module	17
8. Assembly, Disassembly	18
8.1. Attaching the Rubber Feet	18
8.2. Accessing Internal Components	18
8.2.1. Installing/Removing the Expansion Cards	18
8.3. Instruction for Installation in a 19" Cabinet.....	21
9. Starting Up	22
9.1. AC-Power Cord Connection.....	22
9.2. Operating System and Hardware Components Drivers.....	23
10. Maintenance and Prevention	24
10.1. Replacing the Lithium Battery.....	24
10.2. Replacing the System Fans	24
10.3. Cleaning the Filter Mat	25

11. Slide Rails (Option)	27
11.1.1. Slide Rails Accessories and Assembling	28
12. Main Specifications	29
12.1. Electrical Specifications	29
12.2. Mechanical Specifications	30
12.3. Environmental Specifications	30
12.4. CE Directives and Standards	31
13. Standard Interfaces – Pin Assignments	32
13.1.1. Serial Interface COM (RS232)	32
13.1.2. DP Connector (DisplayPort)	32
13.1.3. USB 2.0 Port	33
13.1.4. USB 3.0 Port	33
14. Technical Support	34
14.1. Returning Defective Merchandise	34

1.1. Table of Figures

Fig. 1: Laser radiation warning label	7
Fig. 2: Rackmount version with closed access door	11
Fig. 3: Desktop version with closed access door	11
Fig. 4: KISS 1U Short V2 platform	11
Fig. 5: KISS 1U Short V2 platform, rackmount version, opened	12
Fig. 6: Front side (rackmount version) with closed front access door	13
Fig. 7: 19" rack mountable bracket with fastening screws	13
Fig. 8: Front side (rackmount version) with opened front access door	13
Fig. 9: Power button and LED indicators	14
Fig. 10: Rear side of the KISS 1U Short V2 with KTQM87/mITX motherboard	15
Fig. 11: Side view with tapped M4 metric holes to attach a telescope rail	16
Fig. 12: Inside of the cover with fixing brackets	16
Fig. 13: Fan module	17
Fig. 14: Loosening the three fastening screws on the rear side of the KISS 1U Short V2 system	18
Fig. 15: Sliding the cover back will pull out the cover fixing brackets from the retaining brackets of the chassis	19
Fig. 16: Removing the cover	19
Fig. 17: Detail: Rear side with slide bracket closed (for fixing the expansion card/slot bracket)	19
Fig. 18: Detail: Rear side with slide bracket(opened)	19
Fig. 19: Detail with opened slide brackets for PCI card slot	20
Fig. 20: KISS 1U Short V2 AC input connector	22
Fig. 21: Detail of the front side - Location of the filter mat	25

Fig. 22: Detail: front side without filter mat and filter mat holder.....25

Fig. 23: Filter mat25

Fig. 24: Filter mat holder25

Fig. 25: Attaching the inner side of the slide rail27

Fig. 26: KISS 1U Short V2 with slide rails in pulled-out position27

Fig. 27: KISS 1U Short V2 with slide rails27

Fig. 28: Assembling the “Telescopic Rail” set.....28

2. Introduction

Kontron would like to point out that the information contained in this manual may be subject to technical alteration, particularly as a result of the constant upgrading of Kontron products. The attached documentation does not entail any guarantee on the part of Kontron with respect to technical processes described in the manual or any product characteristics set out in the manual. Kontron does not accept any liability for any printing errors or other inaccuracies in the manual unless it can be proven that Kontron is aware of such errors or inaccuracies or that Kontron is unaware of these as a result of gross negligence and Kontron has failed to eliminate these errors or inaccuracies for this reason. Kontron expressly informs the user that this manual only contains a general description of technical processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This manual is protected by copyright. All rights are reserved by Kontron. Copies of all or part of this manual or translations into a different language may only be made with the prior written consent of Kontron. Kontron points out that the information contained in this manual is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this manual only reflects the technical status of the products by Kontron at the time of printing.

© 2015 by Kontron Europe GmbH
Lise-Meitner-Str. 3-5
86156 Augsburg
Germany

2.1. Symbols used in this Manual

Symbol	Meaning
	This symbol indicates the danger of injury to the user or the risk of damage to the product if the corresponding warning notices are not observed.
	This symbol indicates that the product or parts thereof may be damaged if the corresponding warning notices are not observed.
	This symbol indicates general information about the product and the user manual.
	This symbol indicates detail information about the specific product configuration.
	This symbol precedes helpful hints and tips for daily use.

3. Important Instructions

This chapter contains instructions which must be observed when using your KISS 1U Short V2 platform.

The manufacturer's instructions provide useful information on your KISS 1U Short V2 platform.

3.1. Note on the Warranty

Due to their limited service life, parts which by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the warranty beyond that provided by law. This applies to batteries, for example.

3.2. Exclusion of Accident Liability Obligation

Kontron shall be exempted from the statutory accident liability obligation if the user fails to observe the included document: "General Safety Instructions for IT Equipment" the hints in this manual or eventually the warning signs label on the device.

3.3. Liability Limitation / Exemption from the Warranty Obligation

In the event of damage to the device caused by failure to observe the included document "General Safety Instructions for IT Equipment", the hints in this manual or eventually the warning signs label on the device, Kontron shall not be required to honor the warranty even during the warranty period and shall be exempted from the statutory accident liability obligation.

4. General Safety Instructions for IT Equipment



Please consider the instructions described in the included "General Safety Instructions for IT Equipment".

Caution:

Energy hazards > 240 VA are present inside the chassis!

Activities such as system expansion with expansion cards, or maintenance have to be carried-out by qualified personnel familiar with the associated dangers!

The installation instruction for the KISS 1U Short V2 platform is the responsibility of the distributor.

When used as intended, the KISS 1U Short V2 platform is to be operated only closed and locked.

Only when the cover is properly installed, secured with the knurled screws on the rear and the cover fastening screw on the front, and the access panel is locked with the key, it is ensured that the user doesn't have access to the internal parts of the KISS 1U Short V2 platform, loaded with hazardous energy.

4.1. Operation of Laser Source Devices

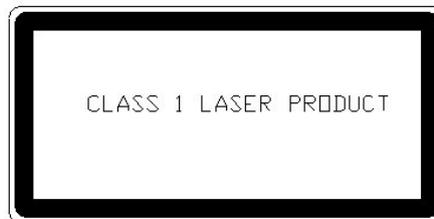


Fig. 1: Laser radiation warning label

The optional DVD drive contain light-emitting diodes (classified in accordance with IEC 60825-1:2007: LASER CLASS 1) and therefore must not be opened.

If the enclosure of such a drive is opened, invisible laser radiation is emitted. Do not allow yourself to be exposed to this radiation.

The laser system meets the code of Federal Regulations 21 CFR, 1040 for the USA and the Canadian Radiation Emitting Devices Act, REDR C 1370.



4.2. Electrostatic Discharge (ESD)

A sudden discharge of electrostatic electricity can destroy static-sensitive devices or micro-circuitry. Therefore proper packaging and grounding techniques are necessary precautions to prevent damage. Always take the following precautions:

1. Transport boards in ESD-safe containers such as boxes or bags.
2. Keep electrostatic sensitive parts in their containers until they arrive at the ESD-safe workplace.
3. Always be properly grounded when touching a sensitive board, component, or assembly.
4. Store electrostatic-sensitive boards in protective packaging or on antistatic mats.

4.2.1. Grounding Methods

The following measures help to avoid electrostatic damages to the device:

1. Cover workstations with approved antistatic material. Always wear a wrist strap connected to workplace as well as properly grounded tools and equipment.
2. Use antistatic mats, heel straps, or air ionizers for more protection.
3. Always handle electrostatically sensitive components by their edge or by their casing.
4. Avoid contact with pins, leads, or circuitry.
5. Turn off power and input signals before inserting and removing connectors or connecting test equipment.
6. Keep work area free of non-conductive materials such as ordinary plastic assembly aids and styrofoam.
7. Use field service tools such as cutters, screwdrivers, and vacuum cleaners which are conductive.
8. Always place drives and boards PCB-assembly-side down on the foam.

4.3. Instructions for the Lithium Battery

The implemented motherboard or SBC-board is equipped with a Lithium battery. For the replacing of this battery please observe the instructions described in the chapter "Replacing the Lithium Battery".



Caution

Danger of explosion when replacing with wrong type of battery. Replace only with the same or equivalent type recommended by the manufacturer. The lithium battery type must be UL recognized.



Do not dispose of lithium batteries in general trash collection. Dispose of the battery according to the local regulations dealing with the disposal of these special materials, (e.g. to the collecting points for dispose of batteries).

5. Electromagnetic Compatibility

5.1. Electromagnetic Compatibility (EU)

This product is intended only for use in industrial areas. The most recent version of the EMC guidelines (EMC Directive 2004/108/EC) and/or the German EMC laws apply. If the user modifies and/or adds to the equipment (e.g. installation of add-on cards) the prerequisites for the CE conformity declaration (safety requirements) may no longer apply.

For detailed information refer to section 12.4 "CE Directives and Standards".

5.2. FCC Statement (USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

5.3. EMC Compliance (Canada)

The method of compliance is self-declaration to Canadian standard ICES-003:

(English): This Class B digital apparatus complies with the Canadian ICES-003.

(French): Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

6. Scope of Delivery

- KISS 1U Short V2 platform (configured as ordered)
- Power cord (for AC power supply units only)
- General Safety Instruction for IT Equipment
- Rubber feet (self-adhesive)

Optional Parts

- Slide Rails (PN: 1016-5807)
- Rack Slide Rails Kit for KISS 1U and KISS 2U/4U V2 (PN: 1051-7200)

6.1. Type Label and Product Identification

The type label (Product Designation, Serial Number) and the inspection status label of the KISS 1U Short V2 platform is placed on the right side of the unit.

System Type	Product Designation	Product Identification
KISS 1U Short V2	KISS 1U Short V2 xxxxxxxx-y	<p>KISS 1U Short V2 = System type</p> <p>The “xxxxxxx”-Group is replaced by numbers (100 through 999), representing the installed CPU board.</p> <p>“y” is replaced by a single letter (A through Z) representing the power supply installed in the system.</p>

Note for the equipped PSU (Power Supply Unit):

A: corresponds to the systems with a wide range AC power supply (100-240 V, 270 W)

7. Product Description

KISS 1U Short V2 extends the range of Kontron’s product family– KISS -. It is a 1U (19") platform equipped with a motherboard and can be equipped with up to two drive bays (refer to the “Configuration Guide” on our web site). The flexible hardware system configuration and robust design with excellent mechanical stability provides the KISS 1U Short V2 platform with the necessary characteristics for a computer, which is suitable for use in harsh industrial environments.

The KISS 1U Short V2 platform is designed to be installed in 19" racks. It is also offered as desktop version.

Versions of the KISS 1U Short V2 platform:



Fig. 2: Rackmount version with closed access door



Fig. 3: Desktop version with closed access door



Fig. 2a: Rackmount version with opened access door



Fig. 3a: Desktop version with opened access door

The system can be equipped with up to two front accessible drive bays (1x 5.25" Slim-line, 1x 3.5") and one internal drive bay (1x 2.5").

The operating controls and LED-indicators of the KISS 1U Short V2 platform are located behind the front access door and include the power button, the reset-button, the power LED and the hard disk activity LED.

The fans (2 fans) are built into the system by means of a fan slide-in module.

The washable filter mat, which protects your system against dust and dirt, is located behind the air grilles of the front access door. The filter mat is changeable while the KISS 1U Short V2 platform is powered-up.

The type label is attached to the right side of the unit.



Fig. 4: KISS 1U Short V2 platform



The horizontal position is the proper operating position for the KISS 1U Short V2 system.

When switching on the system, make sure that the air intake and exhaust openings are not obstructed by objects.

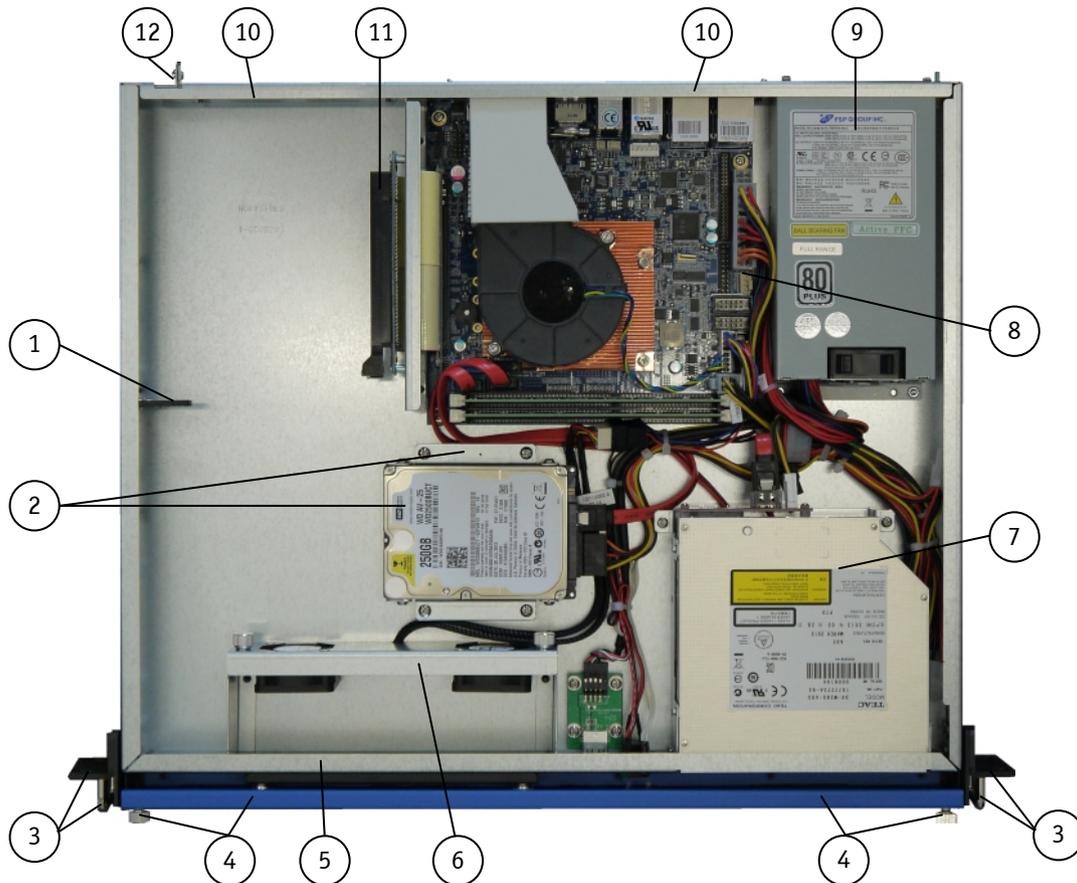


Fig. 5: KISS 1U Short V2 platform, rackmount version, opened

- | | |
|--|---|
| 1 Card holder (position adjustable) | 7 DVD drive (D1 , front accessible) |
| 2 Drive holder for the internal 2.5" HDD (D2) | 8 Motherboard |
| 3 19" bracket with handle | 9 Power Supply Unit (AC) |
| 4 Front access door with fastening screws | 10 Fixing brackets for the cover on the rear side |
| 5 Fixing brackets for the cover on the front side | 11 PCIe-slot for expansion card
(max. 25 cm (10") card length) |
| 6 Fan slide-in module (equipped with two fans) | 12 Slide bracket with fixing screws |

7.1. Front Side

The system is available as rackmount version.


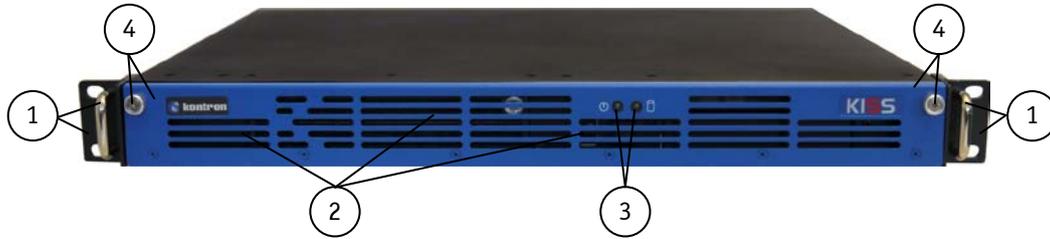


Fig. 6: Front side (rackmount version) with closed front access door

- | | | | |
|---|--|---|--|
| 1 | 19" rack mountable bracket with handle | 3 | Light diffusers for HDD and Power LED indicators |
| 2 | Air grilles | 4 | Front access door with fastening screws |

You can adapt your system to a desktop unit by removing the two 19" rack mountable brackets with handle (one off on each side).

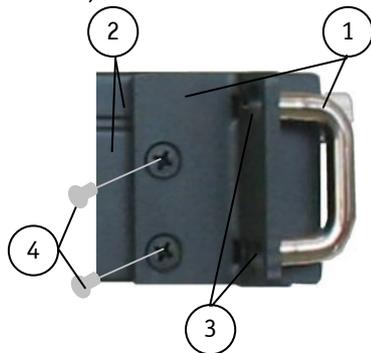

- | | |
|---|---|
| 1 | 19" rack mountable bracket with handle |
| 2 | Chassis and cover of the KISS 1U Short V2 |
| 3 | Holes for mounting in rack cabinets |
| 4 | Screws for fastening the 19" rack mountable bracket |

Fig. 7: 19" rack mountable bracket with fastening screws

The power button, the power and HDD LED, 2x USB-interfaces, the Filter mat holder and the equipped drives are located on the front panel of the KISS 1U Short V2 platform behind the front access door.

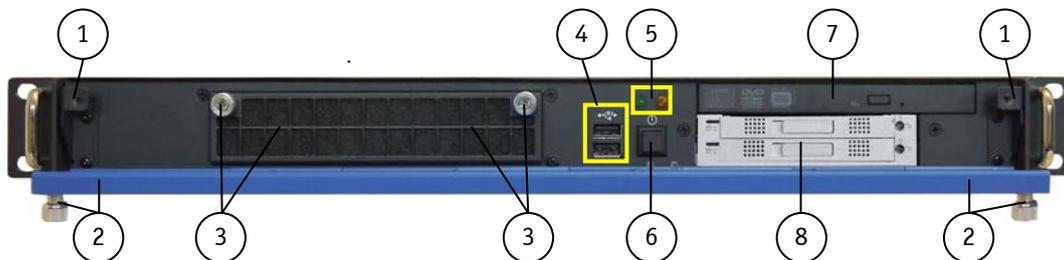


Fig. 8: Front side (rackmount version) with opened front access door

- | | | | |
|---|---|---|--|
| 1 | Buffer for the front access door | 6 | Power button |
| 2 | Front access door with fastening screws | 7 | D1: 5.25" externally accessible Slim-line drive bay (shown with one DVD drive installed) |
| 3 | Filter mat holder with captive knurled screws | 8 | D2: 3.5" externally accessible drive bay (shown with optional KISS-Stor Slim SATA RAID 1 Solution installed) |
| 4 | 2x USB 2.0 | | |
| 5 | LED indicators (power LED and HDD LED) | | |

7.1.1. Interfaces on the Front Side

7.1.1.1. USB Interfaces

KISS 1U Short V2 is equipped with two USB interfaces at the front side. These connectors allow you to connect different USB devices to the KISS 1U Short V2 platform.



When USB devices are connected to the USB ports on the front of the device, the front access panel cannot be closed and locked.

7.1.2. Controls and LED Indicators

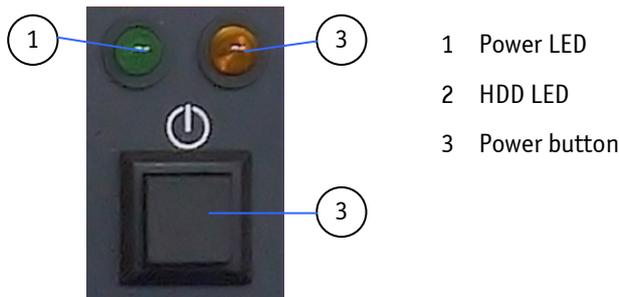


Fig. 9: Power button and LED indicators

Power Button	Press this button to turn the system on or off. Please observe the setting options for the power button in the BIOS-Setup.
Power LED (green)	Lights up green if the system switched on by pressing the "Power button". Prerequisite: The system must be attached by means of the power cord to an appropriate mains (AC).
HDD Activity LED (orange)	Indicates hard disk activity.



Do not press the eject button, while the drive LED is lit or flashing.

7.1.3. Filter Mat Holder

The filter mat holder (Fig. 8, pos. 3) is located behind the air grilles of the front access door. The filter mat, which is inserted into the filter mat holder, protects your system against dust and dirt. It can be changed while the system is powered up (refer to the section 10.3 "Cleaning the Filter Mat").

7.1.4. Externally Accessible Drive Bays

Depending on the configuration ordered, your KISS 1U Short V2 can be equipped with up to two externally accessible drives: **D1** (1x 5.25" Slim-line drive bay) and **D2** (1x 3.5" drive bay) (refer to Fig. 8, pos. 7 and pos. 8).

7.2. Rear Side

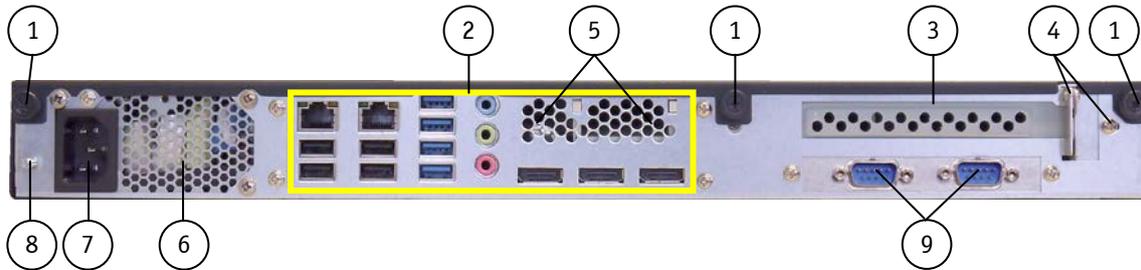


Fig. 10: Rear side of the KISS 1U Short V2 with KTQM87/mITX motherboard

Legend for Fig. 10:

- | | | | |
|---|---|---|--|
| 1 | Fastening screws to secure the cover | 6 | Fans of the PSU (AC) |
| 2 | Interfaces of the installed motherboard | 7 | AC input connector |
| 3 | PCIe x16 free expansion card slot | 8 | Grounding stud |
| 4 | Slide bracket with fixing screws | 9 | Optional: 2x serial interfaces (RS232) |
| 5 | Air exhaust openings | | |

7.2.1. Interfaces of the Motherboard on the Rear Side



Information and technical data can be found in the corresponding motherboard manual. You can download the relevant motherboard manual for your system configuration from our web site at www.kontron.com by selecting the product name.

7.2.2. Power Supply Unit

The power supply unit (PSU) is placed on the rear side of the KISS 1U Short V2 platform (Fig. 10, pos. 6). For information about the integrated power supply unit (PSU) and the rated voltage of your system, refer to the type label attached on the right side of the unit.

7.3. Side View

The four M4 metric tapped holes (Fig. 11, pos. 3) are available at the left and right side of the unit. These can be used in order to attach slide rails (not included in the scope of delivery) to the KISS 1U Short V2 platform for system installation into a 19" industrial cabinet. Refer to the chapter 11 "Slide Rails (Option)".

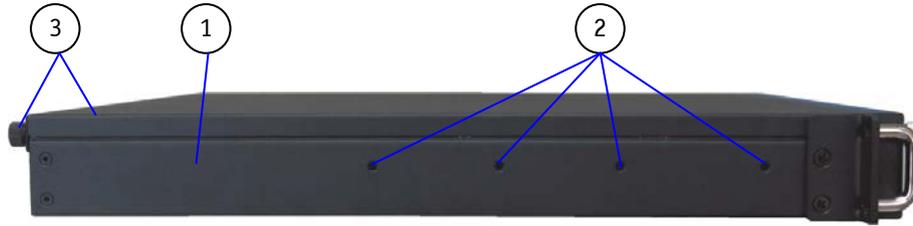


Fig. 11: Side view with tapped M4 metric holes to attach a telescope rail

- | | |
|--|---|
| 1 Side view of the KISS 1U Short V2 platform | 3 Cover with captive knurled screws (to secure the cover to the unit) |
| 2 4x tapped M4 metric holes (on both sides) | |

7.4. Cover

The cover will be fixed to the chassis using three fixing brackets (Fig. 12, pos. 3) and three captive knurled screws (Fig. 12, pos. 1). The fixing brackets are located on the inside of the cover at the front edge. When closing the cover, make sure that the fixing brackets (Fig. 12, pos. 3) will be inserted properly into the corresponding retaining brackets for the cover (Fig. 5, pos. 10) on the rear side of the chassis.

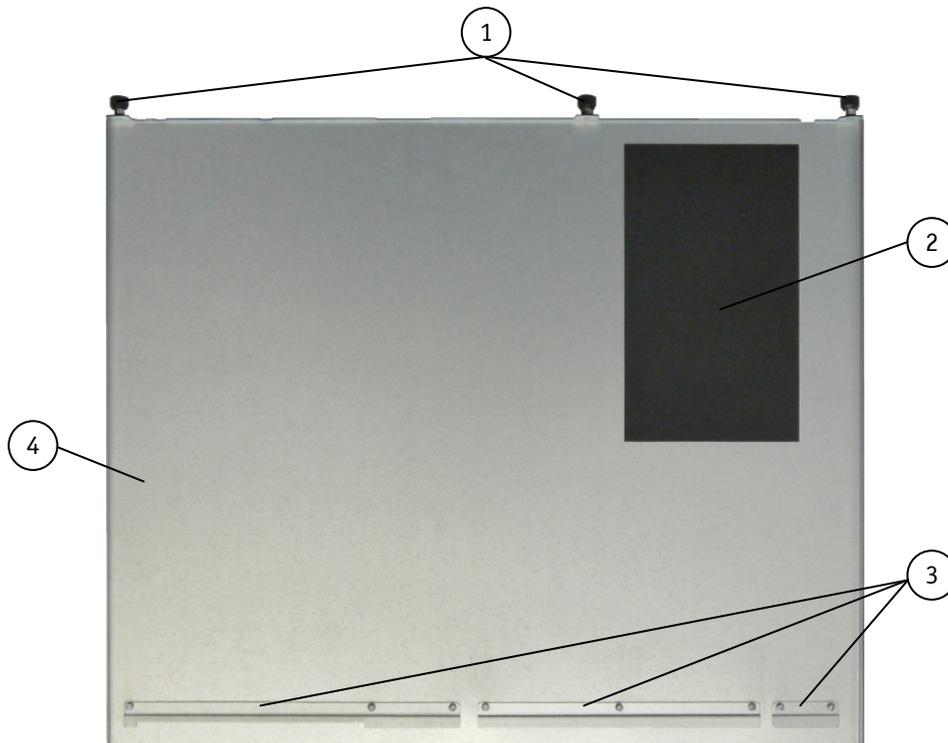


Fig. 12: Inside of the cover with fixing brackets

- | | |
|------------------------------|----------------------------|
| 1 Captive knurled screws | 3 3x front fixing brackets |
| 2 Insulation foil (Makrolon) | 4 Inside of the cover |

7.4.1. Fan Module

The two front fans are firmly mounted in a fan module. Thus, a reliable air circulation for an optimal, active cooling of the system is provided. The fan slide-in module is installed in a fan compartment on the front side of the system.

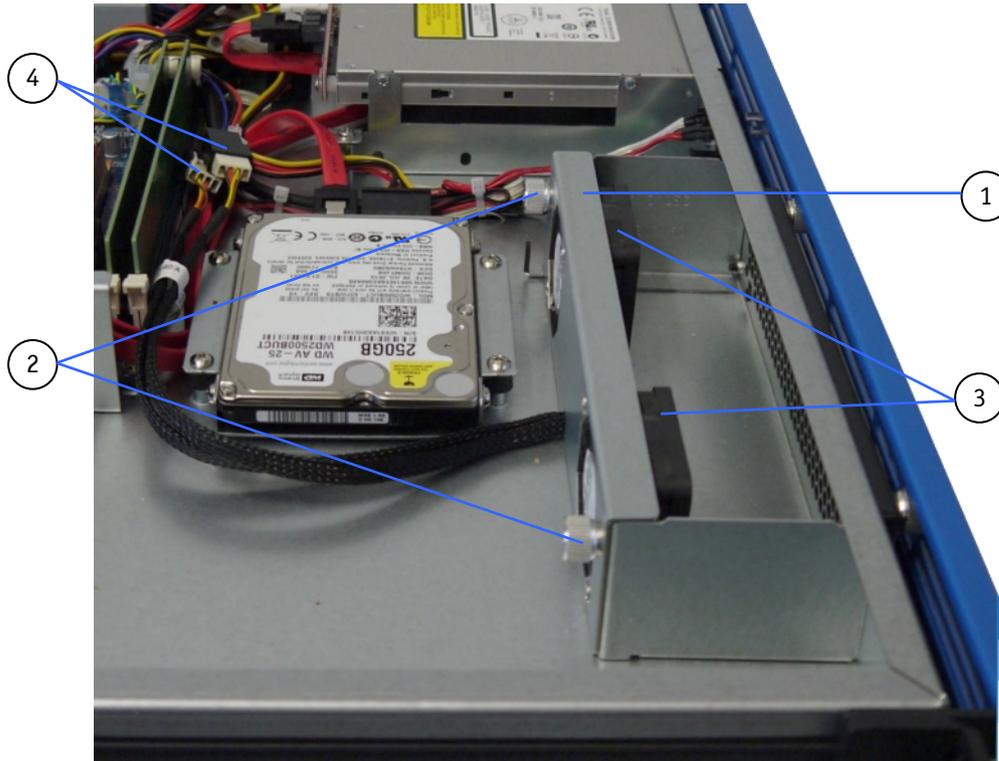


Fig. 13: Fan module

- 1 Fan module
- 2 Captive knurled screws of the fan module
- 3 Two fans per fan module
- 4 Fan connection



The KISS 1U Short V2 platform should only be operated with a functioning fan module
Defective components should only be replaced by Kontron.

8. Assembly, Disassembly

8.1. Attaching the Rubber Feet

The rubber feet can be used for the desktop version of the system. Please follow these steps to attach the rubber feet to the bottom side of the chassis:

1. Turn your system off and disconnect it from the mains supply.
2. Make sure that all cards are secured into unit and that the system cover is installed and secured.
3. Turn the system upside down.
4. Remove the protect foil from the delivered self-adhesive rubber feet.
5. Attach the self-adhesive rubber feet to the bottom side of the chassis.

8.2. Accessing Internal Components

This section contains important information that you should read before accessing the internal components. You should follow these procedures when handling any expansion cardboards.

8.2.1. Installing/Removing the Expansion Cards



When you install (or remove) expansion cards please consider the corresponding safety instruction of the included "General Safety Instruction for IT Equipment".

Activities such as working inside the system or handling the expansion cards have to be carried-out by the service person for this area or a suitably instructed user.



Please observe the safety instruction for handling assemblies with static sensitive device. Failure to take heed of this warning instruction can result in damage to the device.



Please consult the documentation provided by the manufacturer of the expansion card for instructions before attempting to install/remove an expansion card into/from the KISS 1U Short V2 platform.

To install or remove an expansion card, perform the following steps:

1. Turn off your system and disconnect the power cord from the mains.
2. Loosen the fastening screws on the rear side of the unit that secure the cover.



Fig. 14: Loosening the three fastening screws on the rear side of the KISS 1U Short V2 system

3. Pull the cover back (to remove the cover fixing brackets (see Fig. 12, pos.3) from the retaining brackets Fig. 5, pos. 6).



Fig. 15: Sliding the cover back will pull out the cover fixing brackets from the retaining brackets of the chassis

4. Lift the cover (on the rear edge) and remove it (Fig. 16).



Fig. 16: Removing the cover

5. In order to remove the slot or card bracket, remove the screw (Fig. 17, pos. 2). Retain the screw for later use. Loosen (turn 1/2 to the left) the fastening screw (Fig. 17, pos. 4) to unlock the slide bracket (Fig. 17, pos. 3).

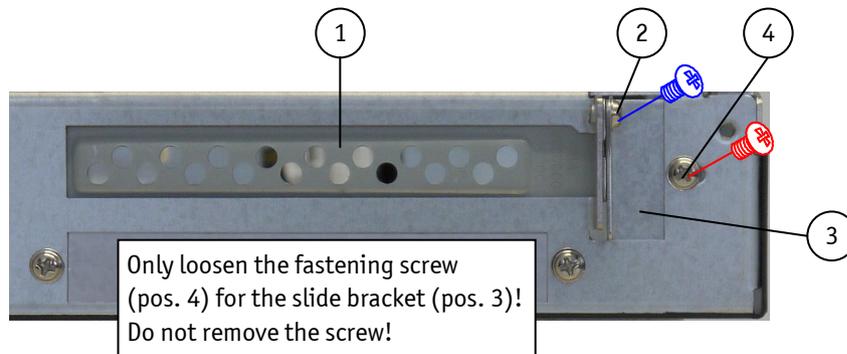


Fig. 17: Detail: Rear side with slide bracket closed (for fixing the expansion card/slot bracket)

- | | |
|---|---|
| 1 Slot bracket | 3 Slide bracket |
| 2 Fastening screws for the slot bracket (card slot bracket) | 4 Fastening screw for the slide bracket |

6. Move the slide bracket to the right. The slot bracket is disengaged now and can be removed from the system.



Fig. 18: Detail: Rear side with slide bracket (opened)

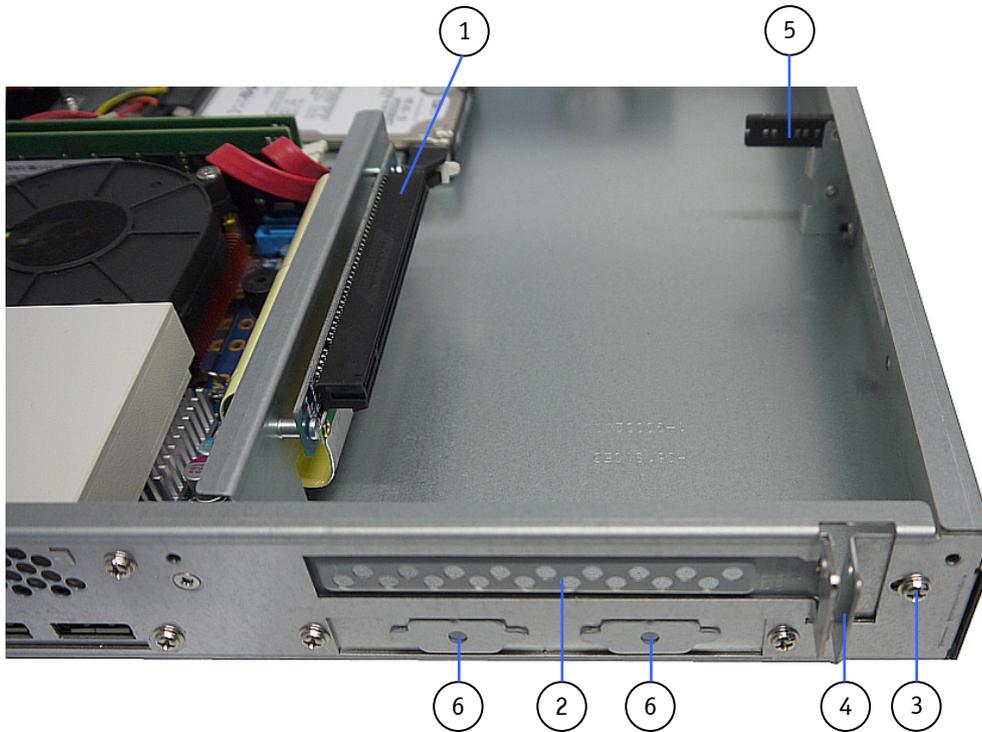


Fig. 19: Detail with opened slide bracket for PCI card slot

Legend for Fig. 19:

- | | |
|--|---|
| 1 Free expansion slot for 1x PCIe x16 expansion card | 4 Slide bracket (opened) |
| 2 Slot for expansion card | 5 Card holder |
| 3 Fastening screws of the slide bracket | 6 Cutting for 2x COM (RS232) (optional) |

7. Insert/remove the expansion card into/out of the PCIe slot.
8. Position the bracket of the expansion card or the slot bracket at the rear side of the chassis.
9. Move the slide bracket (Fig. 19, pos. 4) to the left until it rests firmly on the bracket of the expansion card or the slot bracket, respectively.
10. Lock the slide bracket in this position by fastening the screw removed in step 5 (Fig. 17, pos. 2) firmly.
11. Secure the slide bracket position with the fastening screws (Fig. 19, pos. 3)
12. Close the device and secure the cover with the fastening screws (Fig. 10, Fig. 12, pos. 1) on the rear side.



When closing the cover, make sure that the cover fixing brackets (Fig. 12, pos. 3) slide into the corresponding retaining brackets (Fig. 5, pos. 6) of the chassis.

8.3. Instruction for Installation in a 19" Cabinet



In order to setting-up installing / removing the KISS 1U Short V2 platform into/from a 19" industrial cabinet, please observe the instructions described in this manual.

The system has to be mounted and installed only by the service person for this area familiar with the associated dangers.

Ensure there is sufficient air circulation around the device when installing the KISS 1U Short V2 platform.

The openings for air intake and exhaust on the device must not be obstructed by objects.

Leave at least 5 cm (1.969 ") of free space in front and behind the unit to prevent the device from possibly overheating!

The KISS 1U Short V2 platform should be installed into a 19" industrial cabinet with slide rails. The 19" industrial cabinet must stand firmly in place. You can improve its stability by placing the components into it from the bottom up. Heavy components should be placed down below.

If further stabilization is necessary, then bolt the 19" industrial cabinet to the floor or anchor it on the wall.

The voltage feeds must not be overloaded. Adjust the cabling and the external overcharge protection to correspond with the electrical data indicated on the type label.

The type label is located on right side of the unit.

9. Starting Up



The rated voltage of the mains (AC) must agree with the voltage value on the type label.

9.1. AC-Power Cord Connection

The AC input connector of the PSU is located on the rear side of the KISS 1U Short V2 platform.



Use the power cord suitable for the mains in your country.

Make sure that the mains power supply (power outlet) is properly grounded and that the power cord is in perfect condition without any visible damage. An ungrounded power supply is not permissible.



AC input connector

Fig. 20: KISS 1U Short V2 AC input connector

1. Insert the corresponding connector of the supplied AC power cord into the AC input connector (Fig. 10, pos. 7, Fig. 20).
2. Connect the other end of the AC power cord into a corresponding mains outlet for Class I equipment.



The power cord is used as a disconnecting device (the unit is only completely disconnected from the mains, when the power cord is disconnected either from the mains or the unit). Therefore, the outlet of the AC power source must be located near to the device and be easily accessible.

9.2. Operating System and Hardware Components Drivers

The KISS 1U Short V2 system can optionally be supplied with or without a pre- installed operating system.

If you have ordered your system with a pre- installed operating system, all drivers are installed, corresponding to the ordered computer configuration (optional hardware components). Your computer is fully operational, when you switch it on for the first time. Please observe the information below.



Important information for using the pre-installed “WINDOWS 7 ULTIMATE FOR EMBEDDED SYSTEMS” or “WINDOWS 7 PROFESSIONAL FOR EMBEDDED SYSTEMS” operating systems:

The terms and condition for using the pre-installed operating systems are defined in the document „MICROSOFT SOFTWARE LICENSE TERMS“.

This document can be downloaded from our web site www.kontron.com by selecting the product name/tab Downloads/Windows.

If you have ordered your system without a pre- installed operating system, you have to install the operating system and the corresponding drivers for the ordered computer configuration (optional hardware components).



The needed drivers for the hardware configuration of your system can be downloaded from the web page www.kontron.com by selecting the product name.

Consider the manufacturer's specifications for the operating system and the integrated hardware components.

10. Maintenance and Prevention

Kontron systems require minimal maintenance and care to keep them operating correctly.

- Occasionally wipe the system with a soft dry cloth.
- You should only remove persistent dirt by use of a soft, slightly damp cloth (use only a mild detergent).
- Clean the air filter mats regularly (refer to the "Cleaning the Filter Mat" section).

10.1. Replacing the Lithium Battery

The integrated motherboard of your system is equipped with a lithium battery. To replace the battery, please proceed as follows:

1. Open the unit as described in the chapter 8.2.1 "Installing/Removing the Expansion Cards" (step 1-4).
2. Remove the old battery by pressing outwards on the ejector spring.
3. Place the new battery into the socket.
4. Make sure that you insert the battery the right way around. The plus pole must be on the top!
5. The lithium battery must be replaced with an identical battery or a battery type recommended by Kontron. The Lithium battery type must be UL listed.
6. Close the unit as described in chapter 8.2.1 "Installing/Removing the Expansion Cards" (step 12).



Caution

Danger of explosion when replacing with wrong type of battery. Replace only with the same or equivalent type recommended by the manufacturer. The lithium battery type must be UL recognized.



Do not dispose of lithium batteries in general trash collection. Dispose of the battery according to the local regulations dealing with the disposal of these special materials, (e.g. to the collecting points for dispose of batteries).

10.2. Replacing the System Fans



The operation of the KISS 1U Short V2 is permitted only with a functional fan module.

Defective components should only be replaced only by Kontron.

10.3. Cleaning the Filter Mat

The filter mat is inserted in the filter mat holder at the front side of the system. Cleaning frequency of the filter mat will depend on the operating environment.

If the environment is extremely dusty, clean the filter mat more often. The filter mat may be changed while the system is powered-up.

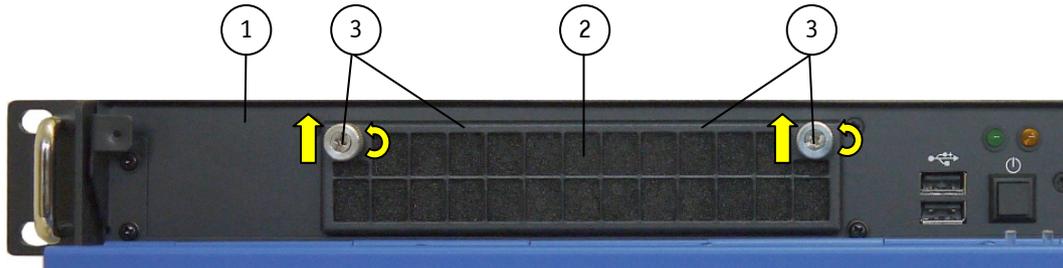


Fig. 21: Detail of the front side - Location of the filter mat

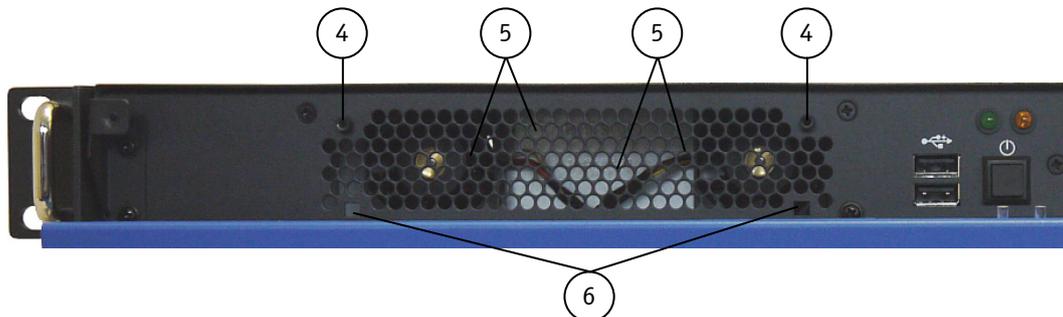


Fig. 22: Detail: front side without filter mat and filter mat holder

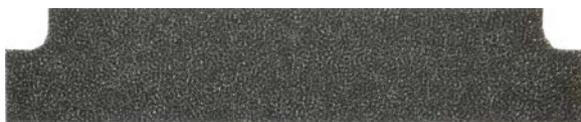


Fig. 23: Filter mat

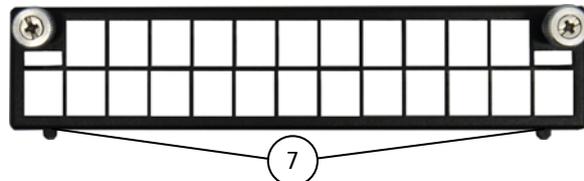


Fig. 24: Filter mat holder

Legend for Fig. 21, Fig. 22 and Fig. 24:

- | | |
|---|---|
| 1 Front side of the KISS 1U Short V2 | 4 Tapped hole for knurled screw |
| 2 Filter mat | 5 Air intake openings |
| 3 Filter mat holder with knurled screws | 6 Positioning holes for the filter mat holder |
| | 7 Positioning lugs of the filter mat holder |

To replace or clean the air filter mat, proceed as follows:

1. Open the front access door (Fig. 6, pos. 4).
2. Loosen the knurled screw (Fig. 21, pos. 3) that secure the filter mat holder with the air filter mat to the chassis.
3. Pull out the filter mat holder (Fig. 21, pos. 3) into the marked direction.

4. Remove the dirty filter mat (Fig. 21, pos. 2 or Fig. 23).
5. To clean the filter mat:
 - Rinse in water (up to approx. 40°C; you may add mild-duty commercial detergent).
 - It is also possible to beat it out, vacuum it or blast it with warm compressed air.
 - If the filter is soiled with greasy dust, you should rinse it with warm water with degreaser added. Do not clean the filter mat with a piercing jet of water or wring it out.
6. After cleaning and drying the filter mat, replace it into the filter mat holder. Insert the positioning lugs of the filter mat holder (Fig. 24, pos. 7) into the positioning holes (Fig. 22, pos. 6) at the front side of the chassis.
7. Tighten the knurled screws to secure the filter mat holders to the chassis.



When inserting the filter mat, ensure that the denser side of the mat is facing the fans.



Defective components may be replaced only by Kontron original spare parts.

Part number of the filter mat: 1017-2544

11. Slide Rails (Option)

Kontron offers slide rails for installing the KISS 1U Short V2 platform into a 19" industrial cabinet. These can be ordered under: "Slide rails" - Set No.: 3-A260-0244.

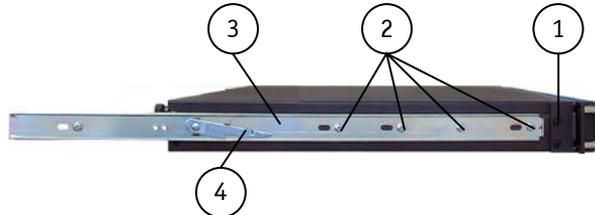


Fig. 25: Attaching the inner side of the slide rail

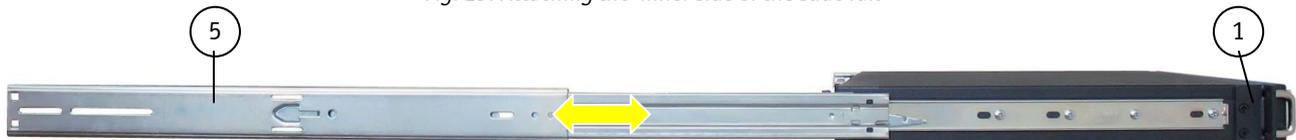


Fig. 26: KISS 1U Short V2 with slide rails in pulled-out position



Fig. 27: KISS 1U Short V2 with slide rails

Legend for figures: Fig. 25, Fig. 26 and Fig. 27:

- | | |
|--|-------------------------------------|
| 1 Side view of the KISS 1U Short V2 | 4 Locking/unlocking lever |
| 2 4x M4x6 rounded head screw (per each side of the unit) | 5 Slide rail in pulled-out position |
| 3 Slide rail inner part | 6 Slide rail in pushed-in position |



Only the specified M4x6 screws should be used to attach telescope rails to the KISS 1U Short V2 platform.

11.1.1. Slide Rails Accessories and Assembling

The "Slide Rails" set consists of following elements:

- One pair of slide rails
- One pair of short front brackets (with screws and washers)
- One pair of long rear brackets (with screws and washers)
- 2x bar nut kits
- 8x M4x6 flathead screws

For assembling refer to Fig. 28.

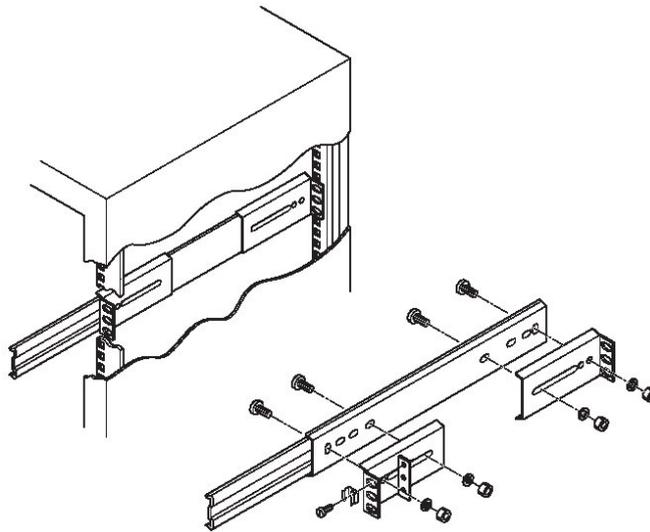


Fig. 28: Assembling the "Telescopic Rail" set



Short brackets are usually used at the front of the chassis and long brackets at the rear.

12. Main Specifications

KISS 1U Short V2	
Installed Board	* refer to “Configuration Guide”
Interfaces	Interfaces of the board slot * refer to the manual of the installed board
Drive Bays	* Optional configuration (depending on the system configuration ordered (refer also to “Configuration Guide”)
Free Expansion Card Slots	1x PCIe x16, 2x Mini PCIe
Power Consumption per Expansion Slot (PCIe)	max. 50 W
Lithium Batterie	CR2032; 3.0 V; 0.22Ah
Rated Voltage Range	230V AC



KISS 1U Short V2 = System type

The “xxxxxxx”-Group is replaced by figures (100 through 999), representing the built-in CPU board.

“y” is replaced by a single letter (A through Z) representing the power supply installed in the system.*

The corresponding “Configuration Guide” and the manual of the installed board can be downloaded from our web site at www.kontron.com by selecting the product name.

12.1. Electrical Specifications

The electrical specification you can read off on the type label of your KISS 1U Short V2 platform.

12.2. Mechanical Specifications

Dimension	KISS 1U Short V2
Height	1U; 44 mm (1.73")
Width	Front: 19"; chassis: 430 mm (16.9")
Depth	Chassis: 350 mm (13.779")
Weight	Approx. 6 kg (13.228 lbs.)
Chassis	Chassis: steel sheet, black (RAL 7021) Access door: steel sheet, blue (RAL 5017)

12.3. Environmental Specifications

Operating temperature / relative humidity	0 ... +45 °C / 20-90 % not condensing (32 ... 113 °F / 20-90 %) not condensing
Storage / Transit Temp. / relative humidity	-20 ... +70 °C / 10-90 % not condensing (-4 ... 158 °F / 10-90 %) not condensing
Operating altitude	2,000 m (6,562 ft)
Storage / transit altitude	10,000 m (32,810 ft)
Pollution Degree	2
Protection Class	Front IP20
Operating Shock Vertical	15 G, 30 ms duration, half sine
Operating Shock Horizontal	10 G, 45 ms duration, half sine
Storage/Transit Shock	30 G, 11 ms, duration, half sine
Operating Vibration	5 – 500 Hz, 1.0 G
Storage / Transit Vibration	5 – 500 Hz, 2.0 G

12.4. CE Directives and Standards

CE Directives	
Electrical Safety	General Product Safety Directive (GPSD) 2001/95/EC Low Voltage Directive (LVD) 2006/95/EC
ElectroMagnetic Compatibility (EMC)	EMC Directive 2004/108/EC
RoHS II Directives	2011/65/EU

Electrical Safety	Harmonized Standards
EUROPE	Information technology equipment - Safety - Part 1: General requirements EN 60950-1 +A11 +A1 +A12 +A2
U.S.A. / KANADA	to meet UL60950-1/ CSA C22.2- No. 60950-1-7
CB Scheme	CB Certification

EMC	Harmonized Standards
EU	Generic emission standard for industrial environments (Emission): EN 61000-6-4:2007 Generic standards - Immunity for industrial environments (Immunity): EN 61000-6-2:2005
U.S.A.	FCC 47 CFR Part 15, Class B
KANADA	ICES-003, Class B

13. Standard Interfaces – Pin Assignments

Low-active signals are indicated by a minus sign.


13.1.1. Serial Interface COM (RS232)

Pin	Signal Name	9-pin D-SUB Connector
1	DCD (Data Carrier Detect)	
2	RXD (Receive Data)	
3	TXD (Transmit Data)	
4	DTR (Data Terminal Ready)	
5	GND (Signal Ground)	
6	DSR (Data Set Ready)	
7	RTS (Request to Send)	
8	CTS (Clear to Send)	
9	RI (Ring Indicator)	


13.1.2. DP Connector (DisplayPort)

Pin#	Signal Name	DisplayPort	Signal Name	Pin#
1	ML Lane 0 (p)		GND (ML Lane 0)	2
3	ML Lane 0 (n)		Lane 1 (p)	4
5	GND (ML Lane 1)		Lane 1 (n)	6
7	Lane 2 (p)		GND (ML Lane 2)	8
9	Lane 2 (n)		Lane 3 (p)	10
11	GND (ML Lane 3)		Lane 3 (n)	12
13	AUX SEL#		Pull-down to GND	14
15	AUX CH (p)		GND (AUX CH)	16
17	AUX CH (n)		Hot Plug	18
19	GND (GND_DDC)		3.3V (DDC EEPROM power 500 mA fused)	20

13.1.3. USB 2.0 Port

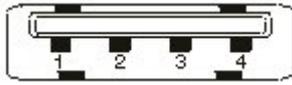Pin Signal Name		4-pin USB Connector Type A Version 2.0
1	VCC	
2	Data-	
3	Data+	
4	GND	

13.1.4. USB 3.0 Port

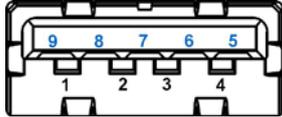Pin Signal Name		9-pin USB Socket Type A Version 3.0/2.0	
USB 2.0 contact pins	USB 3.0 contact pins		
1	VCC, fused (900 mA max.)	5 StdA_SSRX-	
2	Data-	6 StdA_SSRX+	
3	Data+	7 GND_DRAIN	
4	GND	8 StdA_SSTX-	
		9 StdA_SSTX+	

14. Technical Support

For technical support, please contact our Technical Support department:

e-mail: support@kontron.com

Web: <http://www.kontron.com/support>

Make sure you have the following information on hand when you call:

- the unit part id number (PN),
- the serial number (SN) of the unit; the serial number can be found on the type label, placed on the right side of the system.

Be ready to explain the nature of your problem to the service technician.

If you have questions about Kontron or our products and services, you can reach us by the above-mentioned telephone number and on e-mail address or at: www.kontron.com .

14.1. Returning Defective Merchandise

Please follow these steps before you return any merchandise to Kontron:

1. Download the corresponding form for returning a device with an RMA No. [RMA (**R**eturn of **M**aterial **A**uthorization)] from our website [www.kontron.com / Support /.RMA Information](http://www.kontron.com/Support/.RMA%20Information); contact our Customer Service department to obtain an RMA No.
e-Mail: service@kontron.com
2. Ensure that you have received an RMA number from Kontron Customer Services before returning any device. Write this number clearly on the outside of the package.
3. Describe the fault that has occurred.
4. Please provide the name and telephone number of a person we can contact to obtain more information, where necessary. Where possible, please enclose all the necessary customs documents and invoices.
5. When returning a device:
 - Pack it securely in its original box.
 - Enclose a copy of the RMA form with the consignment.

Corporate Offices

Europe, Middle East & Africa	North America	Asia Pacific
Lise-Meitner-Str. 3-5 86156 Augsburg Germany Tel.: +49 (0)821/ 0 Fax: +49 (0)821/ 111 info@kontron.com	14118 Stowe Drive Poway, CA 92064-7147 USA Tel.: +1 888 294 4558 Fax: +1 858 677 0898 info@us.kontron.com	17 Building,Block #1,ABP. 188 Southern West 4th Ring Beijing 100070, P.R.China Tel.: + 86 10 63751188 Fax: + 86 10 83682438 info@kontron.cn